

RT Off-Road Locking Fuel Door Installation Guide

Installation Time: 10 Minutes

Tools Required:

- ✓ Philips Screwdriver
- ✓ Torx key (included)
- ✓ 4 Torx screws (included)

Installation Instructions:

1. Remove Torx key and screws from the provided plastic bag and set aside ready for assembly.



2. Remove 4 factory screws with Philips Screwdriver.



3. Place Locking Fuel door over factory gas housing and line up the screw holes.



4. Use the Torx key to install the torx screws in the corresponding screw holes.



5. You have completed installation. Use provided keys to lock and unlock the fuel door.



Installation Instructions Written by ExtremeTerrain Customer Ryan Prestridge 05/15/2018