

### Installation Instructions for Raxiom LED Tail Light

#### Tools Needed:

-Phillips Head Screw Driver

#### Step 1:

Begin by removing the negative battery terminal. Then remove the (2) Phillips head screws from the factory tail light.



#### Step 2:

Disconnect the tail light plug and then remove the light from the vehicle.



#### Step 3:

Connect the Raxiom tail light harness to the factory plug. **\*\*Note:** These are tight connections ensure they clip together.



#### Step 4:

Install the Raxiom tail light with the factory screws. Reconnect the battery terminal and ensure the tail light functions properly.

