

AXIAL

Installation Instructions for Axial LED Headlights

Tools Needed:

- Flat Screw Driver
- T15 Torx Driver

Step 1:

Open Hood and remove the six (6) plastic clips holding the grille to the vehicle. Disconnect the turn signal plugs and remove grille from vehicle.



Step 2:

Remove the 4 T15 Torx screws holding the headlight bezel.



Step 3:

Slide the red retaining clip away from the plug. Then disconnect the plug from the headlight.



Step 4:

Connect the LED Headlight using the supplied jumper harness. **Note: firmly press the plugs together and push the retaining clip from the factory harness back into the plug.

Step 5:

Reference the attached wiring diagram for halo wiring instruction.



Step 6:

Reinstall the headlight bezel and repeat the process in reverse to reinstall the grille.

AXIAL

Installation Instructions for Axial LED Headlights

Tools Needed:

- Flat Screw Driver
- T15 Torx Driver


Step 1:

Remove the 3 T15 Torx screws that hold the headlight trim bezel.




Step 2:

Remove the 4 T15 Torx screws that hold the headlight bezel.

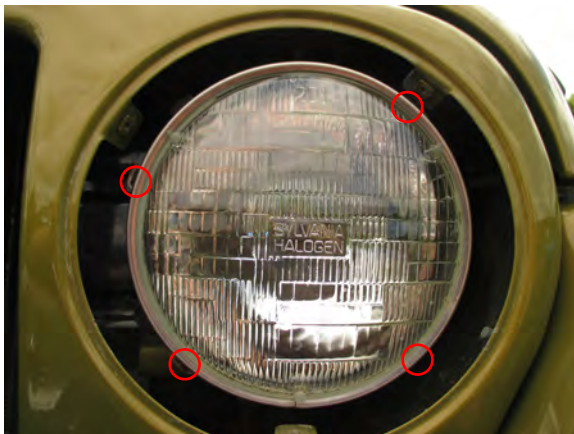

Step 3:

Unplug factory headlight. Connect the LED Headlight using the supplied jumper harness. **Note: firmly press the plugs together and push the retaining clip from the factory harness back into the plug.

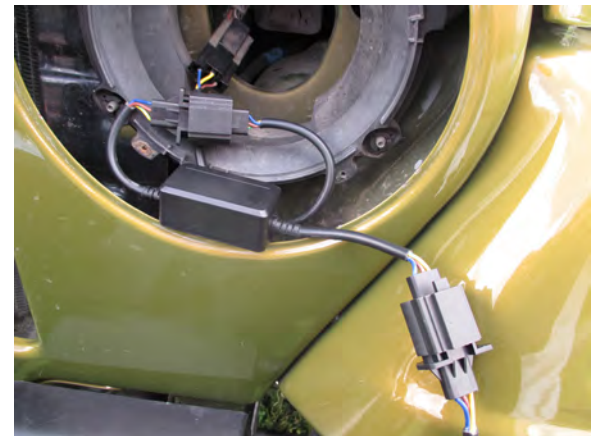

Step 4:

Reference the attached wiring diagram for halo wiring instruction.


Step 5:

Secure wiring components and reinstall the headlight bezel. Reinstall the trim bezel.



AXIAL

Halo Wiring Diagram

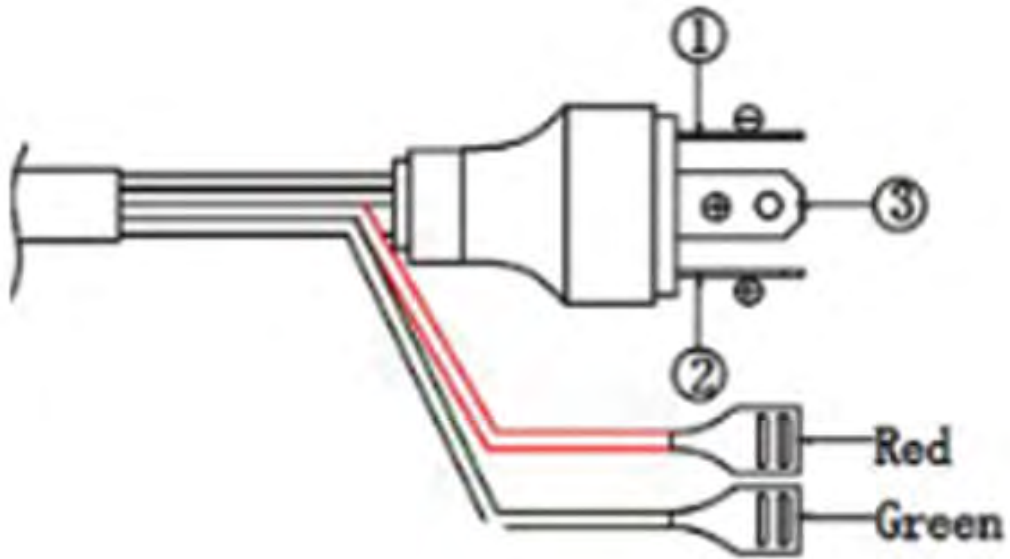

Splice the Green wire from the headlight to the factory turn signal power as seen above.



Tap the Red wire from the headlight into the 12v+ ignition wire in the fuse box as seen above.