

AXIAL

Installation Instructions for Axial LED Headlights

Tools Needed:

- Flat Screw Driver
- T15 Torx Driver

Step 1:

Open Hood and remove the six (6) plastic clips holding the grille to the vehicle. Disconnect the turn signal plugs and remove grille from vehicle.



Step 2:

Remove the 4 T15 Torx screws holding the headlight bezel.



Step 3:

Slide the red retaining clip away from the plug. Then disconnect the plug from the headlight.



Step 4:

Connect the LED Headlight using the supplied jumper harness. **Note: firmly press the plugs together and push the retaining clip from the factory harness back into the plug.

Step 5:

Reference the attached wiring diagram for halo wiring instruction.



Step 6:

Reinstall the headlight bezel and repeat the process in reverse to reinstall the grille.

AXIAL

Installation Instructions for Axial LED Headlights

Tools Needed:

- Flat Screw Driver
- T15 Torx Driver


Step 1:

Remove the 3 T15 Torx screws that hold the headlight trim bezel.




Step 2:

Remove the 4 T15 Torx screws that hold the headlight bezel.

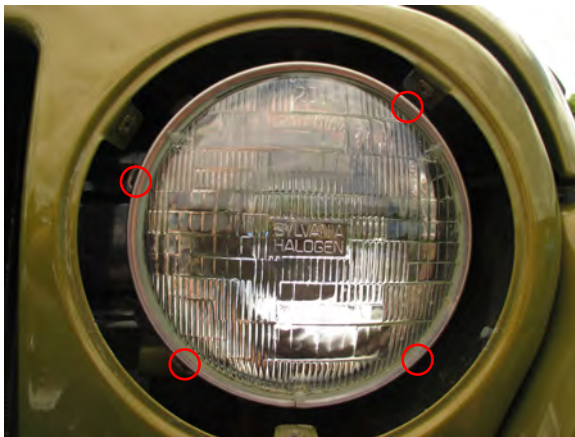

Step 3:

Unplug factory headlight. Connect the LED Headlight using the supplied jumper harness. **Note: firmly press the plugs together and push the retaining clip from the factory harness back into the plug.

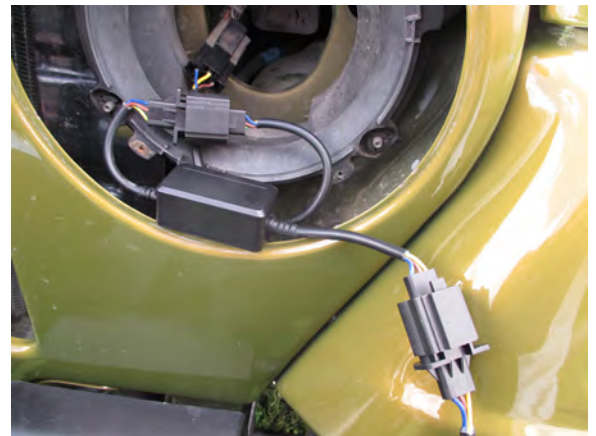

Step 4:

Reference the attached wiring diagram for halo wiring instruction.

Step 5:

Secure wiring components and reinstall the headlight bezel. Reinstall the trim bezel.



