

AXIAL

Installation Instructions for LED Tail Lights

Tools Needed:

-Phillips Head Screw Driver

Step 1:

Begin by removing the negative battery terminal. Then remove the (2) Phillips head screws from the factory tail light.



Step 3:

Connect the LED tail light harness to the factory plug. ****Note:** These are tight connections ensure they clip together.



Step 2:

Disconnect the tail light plug and then remove the light from the vehicle.



Step 4:

Install the LED tail light with the factory screws. Reconnect the battery terminal and ensure the tail light functions properly.



SKU:
J108045
J108046
J108048