


Rim Protector Ring

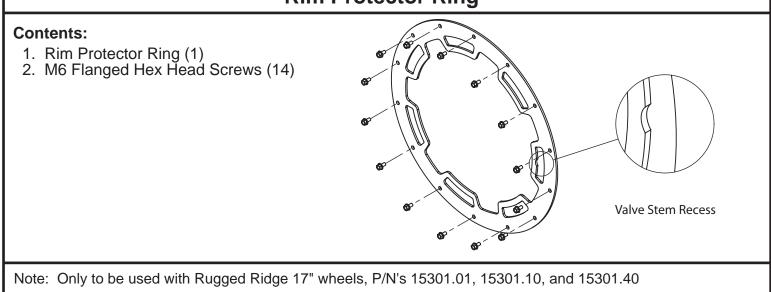

1. Remove Button Head screws from wheel.



2. Place Rim Protector Ring onto front face of wheel. Ensure that Valve Stem Recess aligns with Valve Stem. Install M6 Flanged Hex Head Screws by hand. Once all M6 Screws are in place, tighten to 6 ft-lbs. Retorque after 25 miles and check frequently thereafter.





© Copyright 2009, Omix-Ada

Omix-Ada Inc. 460 Horizon Dr. Suite 400 Suwanee, Georgia 30024

Page 1 of 1