

**Boom Mat Sound Deadening Headliner - Black**  
**Installation Guide for Jeep Wrangler '07-'16 2-Door JK**

**Installation Time:** <1 Hour

**Tools Required:**

- ✓ Box Cutter/Knife
- ✓ Isopropyl Alcohol
- ✓ Paper Towels/Cloth
- ✓ Towels/Blankets

**Installation Instructions:**

1. Carefully open the package using a box cutter or knife (Figure A) and ensure all headliner and filler strips are included and undamaged.



Figure A

2. Place the hardtop flat on the ground with blankets or towels underneath to keep from scratching (Figure B).



Figure B

3. Clean the inside with isopropyl alcohol and cloth or paper towels (Figure C).



Figure C

4. Peel back the liner on the underside of the filler strip (Figure D).



Figure D

5. Place the filler strip inside the molded rib (Figure E).



Figure E

6. Place the remaining filler strips inside the molded ribs, ensuring the lengths adhere to their placement inside the hard top (Figure F).



Figure F

7. Place headliners in each side (with adhesive liner removed), starting at the rear of the hard top and carefully lining up to the front (Figure G). **Note:** *Two people are recommended for this part of the process.*


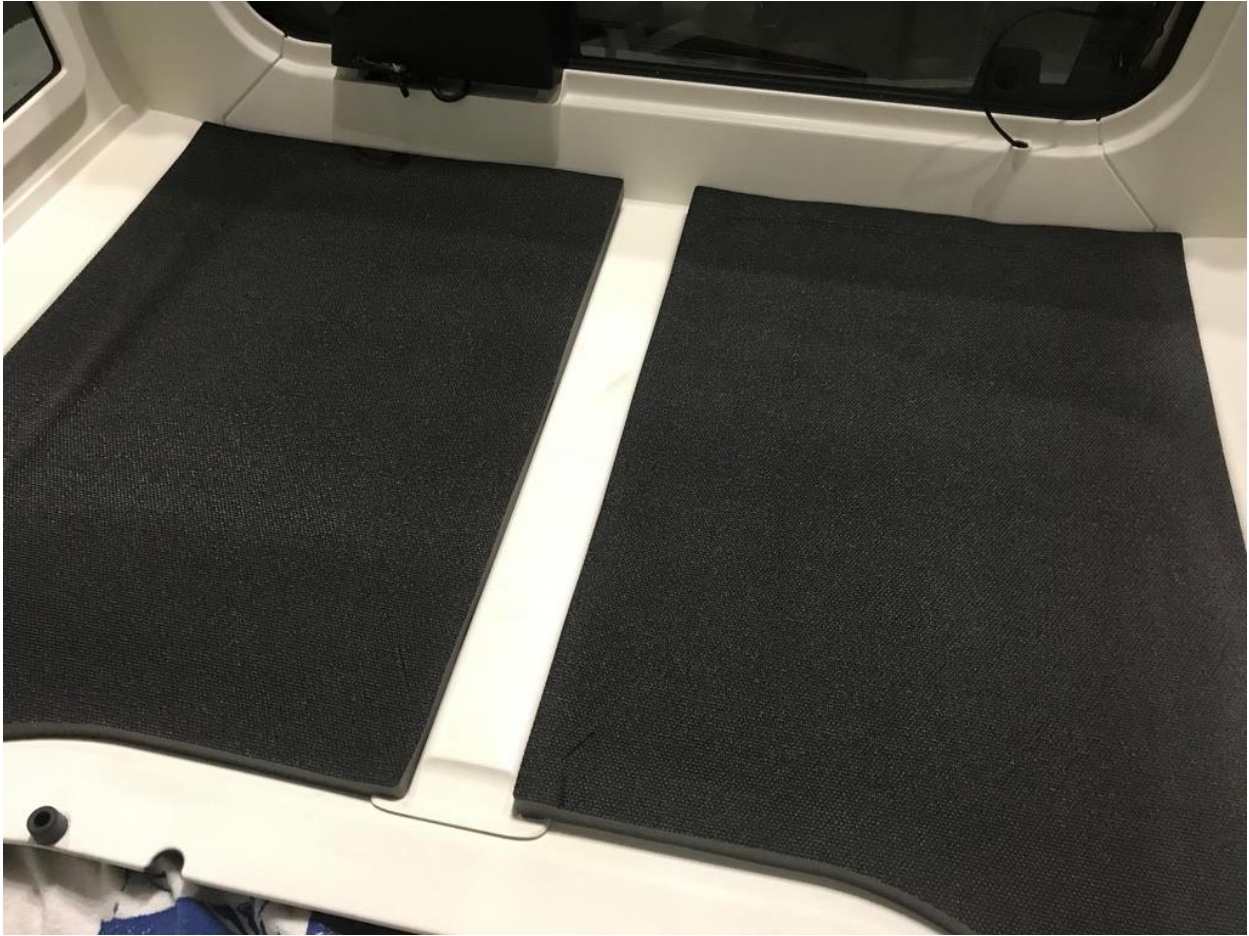


Figure G

8. Pat the headliners down gently to ensure adhesive affixes along the entire hard top.
9. Follow Step 2-8 for both front top panels, as well.



Before

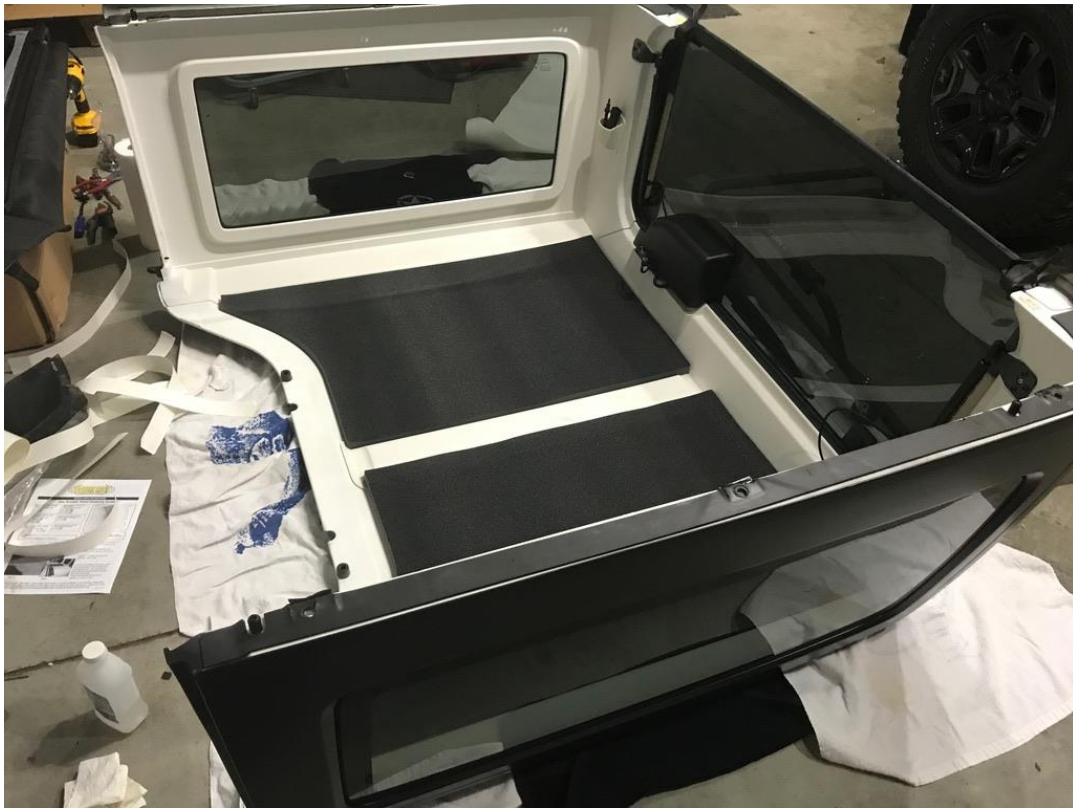

After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 10/08/2017