

Installation Instructions for RedRock4X4 Cold Air Intake (Wrangler 3.8L)

TOOLS REQUIRED.

- ✓ 10mm socket
- ✓ 8mm socket
- ✓ Flathead Screwdriver
- ✓ Allen Key Set

Installation Instructions.

1. Unplug your factory IAT sensor located on the side of the intake tube.



2. Slide the PCV hose off of the factory air hose.



3. Using a flathead screwdriver, remove the hose clamp holding the intake tube to the throttle body.



4. Pull the entire intake assembly up and away from the vehicle.



5. Remove your factory IAT sensor from the factory intake tube.



6. Install the IAT sensor into the new intake tube assembly.



7. Using the (6) supplied nuts and screws, assemble the new hear shield as shown.



8. Remove the 8mm screw holding the fan shroud to the radiator.




9. Install the heat shield using the factory mounting positions and secure with bolts.



10. Add the supplied rubber gaskets to the top of the heat shield and in hole for the intake.



11. Install the intake tube onto the coupler and onto the factory throttle body.

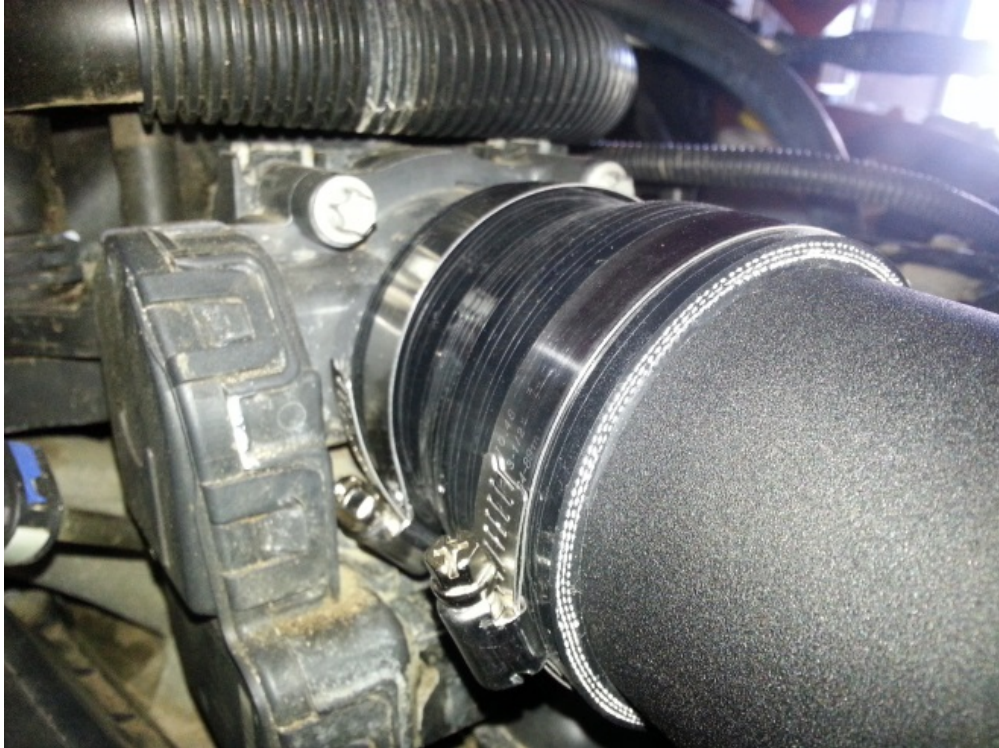


12. Secure the intake tube to the heat shield using the supplied spacer.



13. Reinstall the factory PCV hose onto the new intake tube and secure with new clamp.



14. Plug in the IAT sensor that you previously installed into the intake tube.

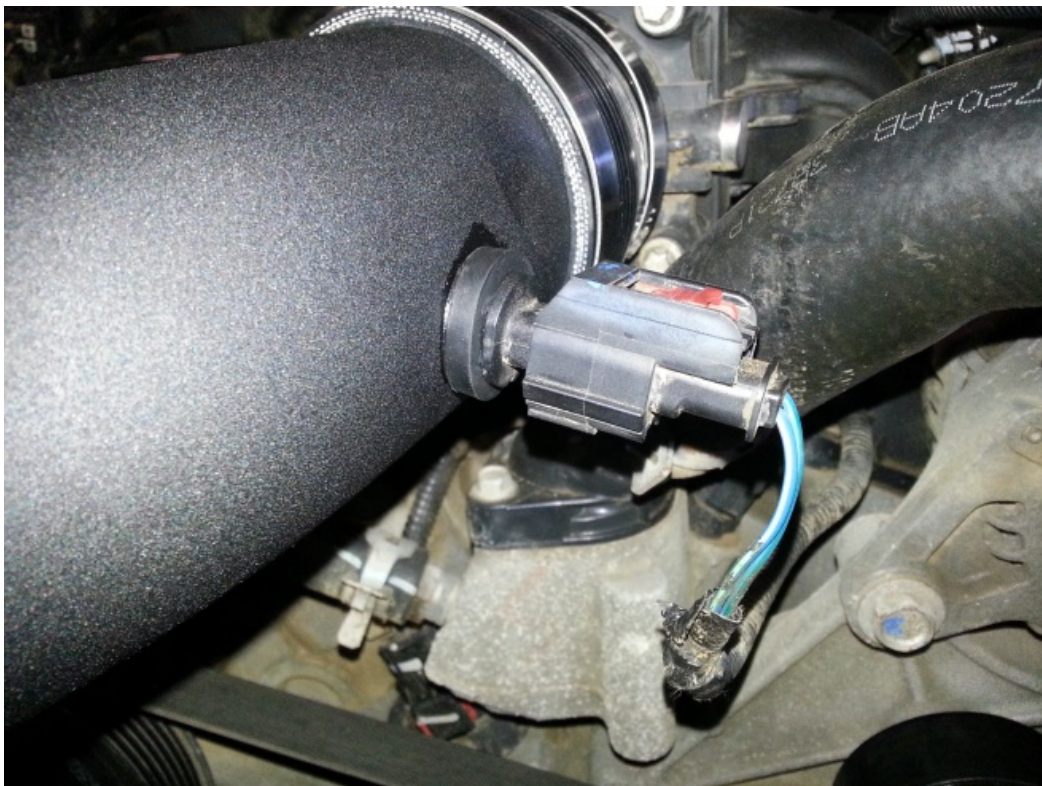

15. Install the filter and tighten down using the supplied hose clamp.



Installation Instructions Written by ExtremeTerrain Customer Brian Matthias 6/06/2014