

**Alpine Front & Rear 6.5 in. Convertible Speakers - 75w**  
**Installation Guide for Jeep Wrangler '12-'18 4-Door JKU**

**Installation Time:** 1 Hour

**Tools Required:**

- ✓ 7mm Socket
- ✓ Socket Wrench
- ✓ Panel Removal Tool

**Installation Instructions:**

1. Beginning on the passenger side, remove the side dash panel using a panel removal tool (Figures A & B).



Figure A



Figure B

2. Open the glove compartment (Figure C). Push the inside tabs inward until the two plastic dowels can clear the dash and remove the glove compartment.



Figure C

3. Using a 7mm socket wrench, remove the two lower bolts under the glove compartment area, as well as a third bolt in the bottom corner of the dash near the door panel (Figure D).



Figure D

4. Using a 7mm socket wrench, remove the two copper bolts from the side of the dash which hold the speaker into place (Figure E).



Figure E

5. Pull the plastic trim covering the dash forward to expose a 10mm bolt holding the bottom of the speaker in place and remove using a 10mm socket wrench (Figure F).

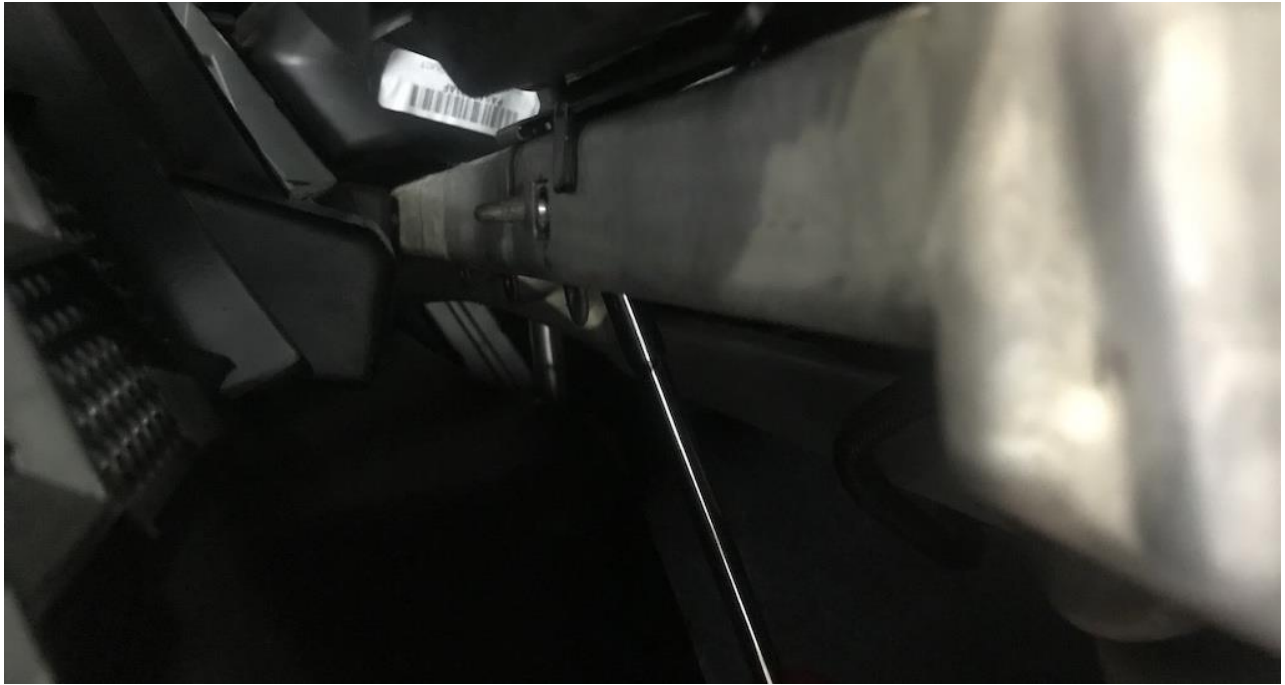


Figure F

6. Unclip the speaker from the speaker housing (Figure G).



Figure G

7. Disconnect the speaker from the speaker housing using a Philips head screwdriver and replace with the new Alpine speaker (Figure H).



Figure H

8. Return the speaker housing back into the dash (Figure I). Return the five bolts (four 7mm, one 10mm) removed between Steps 3-5.



Figure I

9. Remove the top off the tweeter in the top corner of the dash by the windshield using a panel removal tool (Figure J).

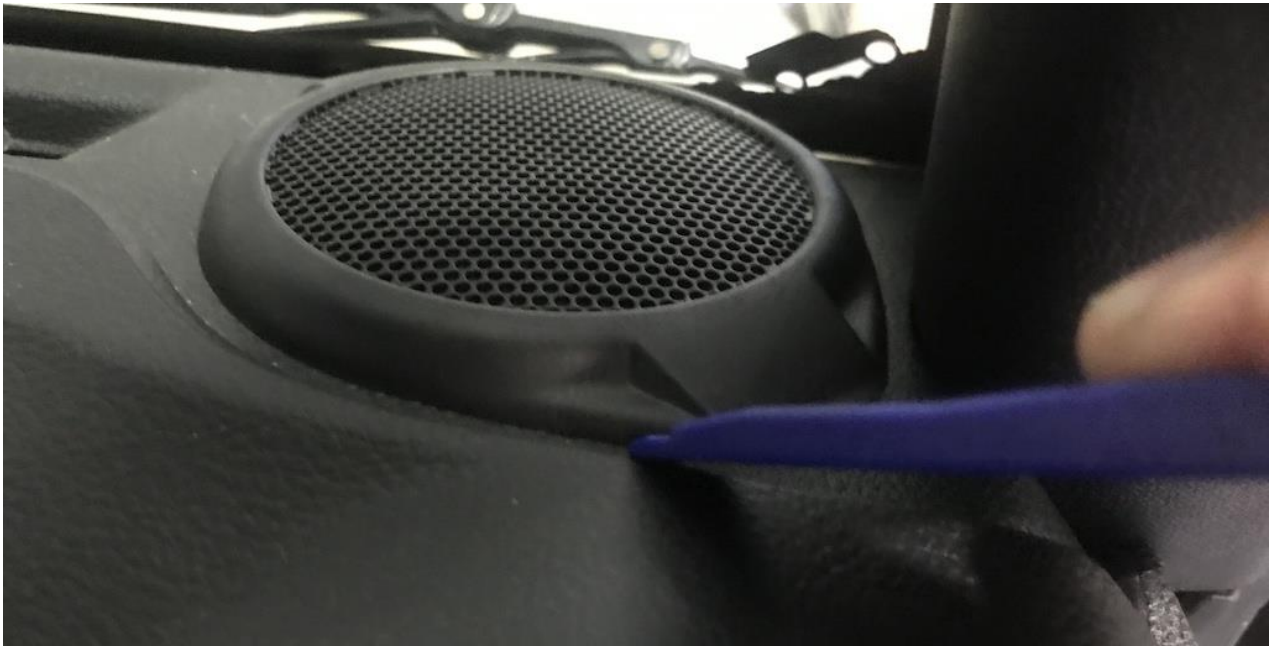


Figure J

10. Remove the two bolts holding the tweeter in place using a 7mm socket wrench (Figure K).



Figure K

11. Disconnect the tweeter (Figure L).



Figure L

12. Press the Alpine tweeter into the plastic tray firmly (Figure M).



Figure M

13. Connect either the 0db or 3db (installer's preference) and the ground wires to the provided wiring harness (Figure N).



Figure N

14. Connect the other end of the wiring harness to the speaker harness (Figure O).



Figure O

15. Return the two bolts removed in Step 10 (Figure P).





Figure P

16. Return the plastic trim cover (Figure Q).

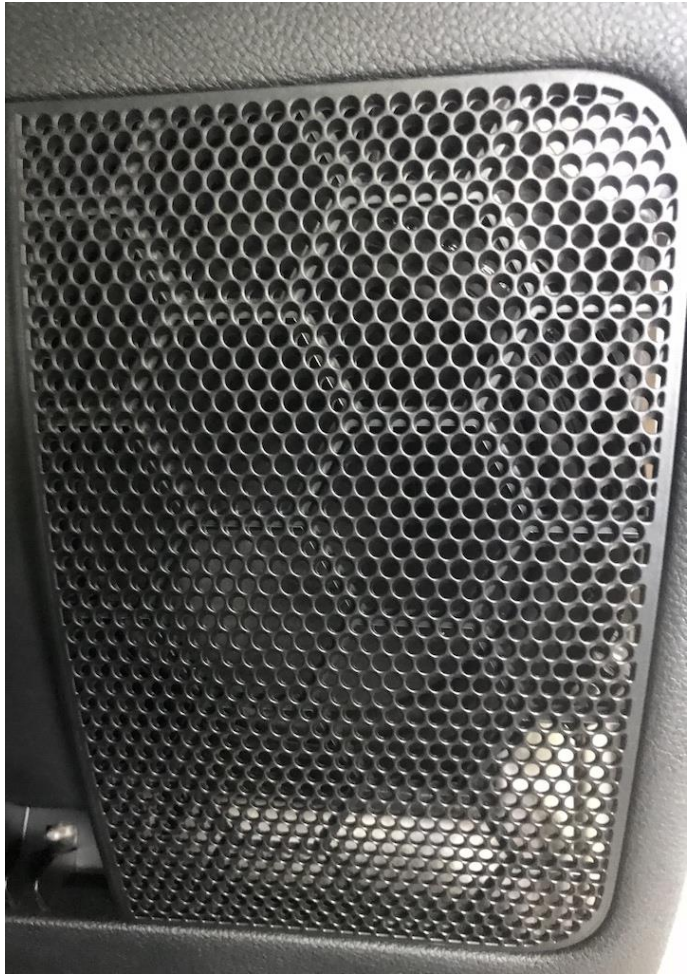


Figure Q

17. Repeat all steps on the driver's side.



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 10/04/2018