

## ATP Rear Billet Grab Handles (07-17 Wrangler JK)


**Installation Time:** 20 Minutes

**Tools Required:**

1. 10mm socket
2. H5 socket or 5mm hex key
3. H6 socket or 6mm hex key
4. Ratchet

**Installation Instructions:**

Identify all parts needed for installation in (Fig. 1)

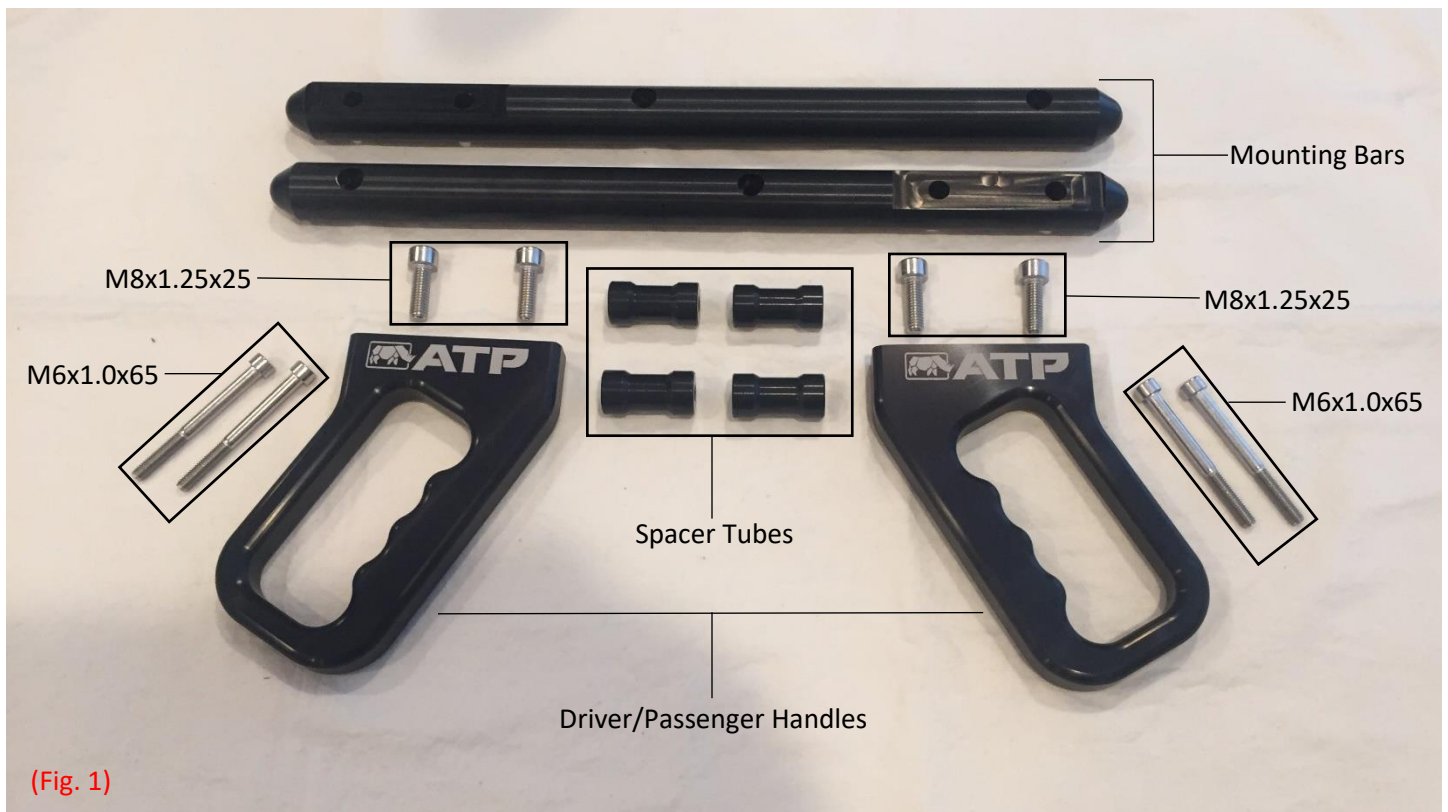


1. Preassemble both handles using the driver/passenger handles, mounting bars, and the M8x1.25x25 bolts with an H6 socket or 6mm hex key (Fig. 2).



2. Remove the two factory 10mm bolts from the sound bar with a 10mm socket and ratchet (Fig. 3).



3. Begin installing the handle using the M6x1.0x65 bolts, spacer tubes, and an assembled handle with an H5 socket or 5mm hex key (Fig. 4 & 5).

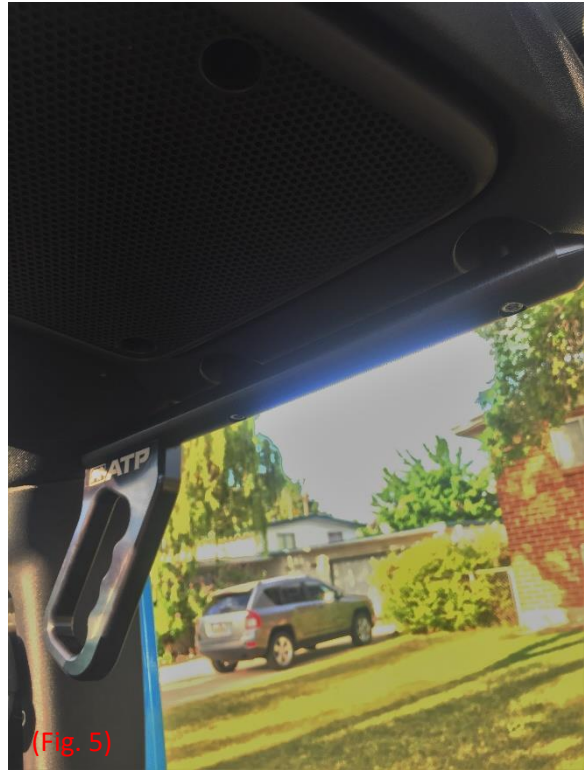

4. Tighten the M6x1.0x65 bolts by alternating from one to the other until both are tight and the handle is secure.



Enjoy your new ATP Rear Billet Grab Handles



Installation Instructions Written by ExtremeTerrain Customer Marshall Williams 07/5/2017