

Baja Designs LP9 Pro Wire Harness

Installation Guide for Jeep Wrangler '07-'18 4-Door JKU

Installation Time: <1 Hour

Tools Required:

- ✓ Box Cutter/Knife
- ✓ 10mm Socket Wrench

Installation Instructions:

1. Locate the in-line fuse on the wiring harness (Figure A).

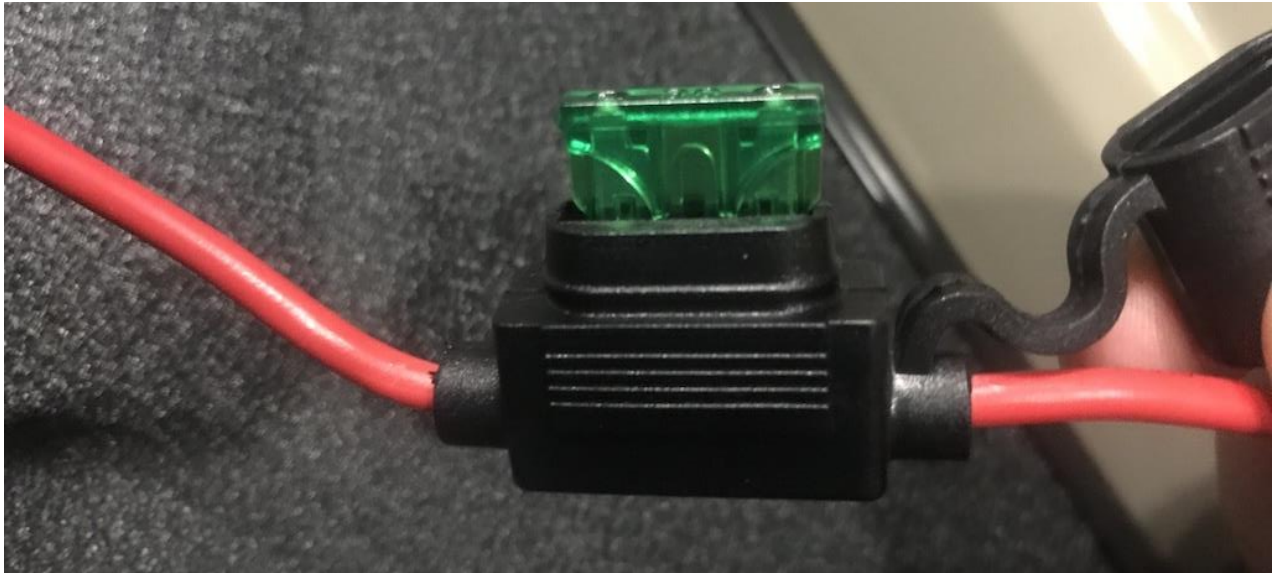


Figure A

2. Remove the in-line fuse (Figure B).



Figure B

3. Connect the black (negative) wire to the negative battery terminal using a 10mm socket wrench (Figure C).

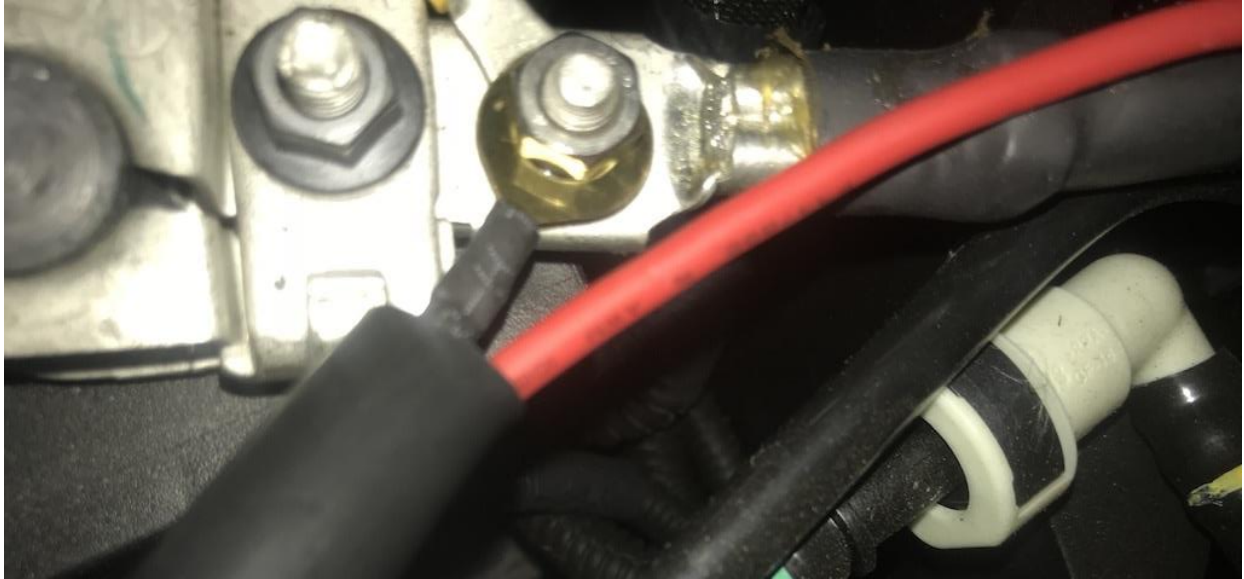


Figure C

4. Connect the red (positive) wire to the positive battery terminal using a 10mm socket wrench (Figure D).



Figure D

5. Run the wiring harness through the circular sponge-line in the top corner of the engine bay running into the cab (Figure E).



Figure E

6. Run the switch (already wired) to the desired location (Figure F).



Figure F

7. Run each of the two wiring ends to the light mounting locations (Figure G).



Figure G

8. Return the fuse into the in-line fuse location (Figure H).



Figure H

9. Connect the wiring ends to the lights (not supplied).



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 09/17/2018