

TruShield Pet Barrier Net

Installation Guide for Jeep Wrangler '07-'16 2-Door JK

Installation Time: <1 Hour

Tools Required:

- ✓ Box Cutter/Knife
- ✓ Pliers (optional)

Installation Instructions:

1. Carefully open the package using a box cutter or knife (Figure A) and ensure the product is included and undamaged.



Figure A

2. Lay the netting out flat and find the Barricade label (Figure B).



Figure B

3. Pull the front seats all the way forward (Figure C).



Figure C

4. If installing on a hardtop, it may be easier to install if the two front hardtop panels are removed (Figure D).



Figure D

5. With the Barricade logo facing the rear of the vehicle and in the top passenger-side corner, run the top right strap over the sound bar (front to rear) (Figure E).



Figure E

6. Retrieve the strap on the other side of the sound bar and pull down (Figure F).



Figure F

7. Run the retrieved strap through the buckle at the bottom of the same strap (Figure G).

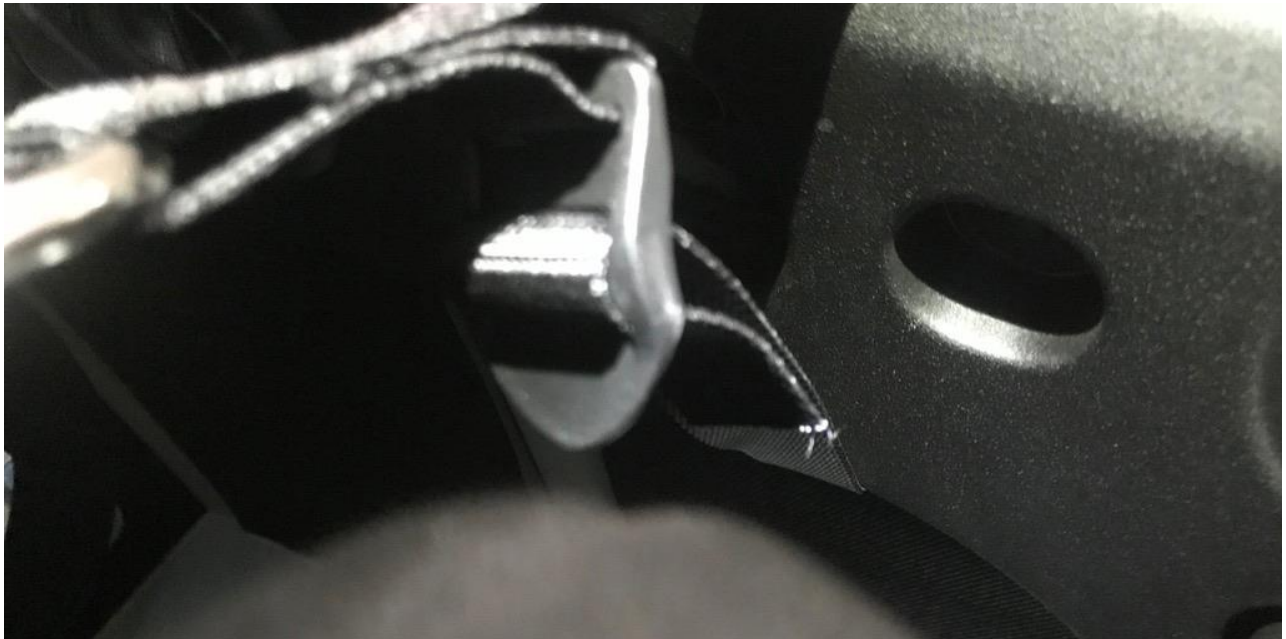


Figure G

8. Follow steps 5-7 on the left side, as well.

9. On the bottom of the netting, find the strap with a metal hook and secure it around the outer seat bracket on both the driver and passenger seats (Figure H).



Figure H

10. Tighten all straps (Figure I). *Optional:* Use pliers for additional leverage in tightening the netting straps.



Figure 1



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 12/20/2017