

Barricade Door Storage Hangers

Installation Guide for Jeep Wrangler '07-'16 2-Door JK

Installation Time: <1 Hour

Tools Required:

- ✓ Box Cutter/Knife
- ✓ Stud Dectector
- ✓ Drill Bit
- ✓ Drill
- ✓ 17mm Socket

Installation Instructions:

1. Carefully open the package using a box cutter or knife (Figure A) and ensure the hardware is included and undamaged.



Figure A

2. Using a stud detector, find the stud in the wall (Figure B).



Figure B

3. Measuring for the appropriate height of the doors (not just the brackets), mark the appropriate places to drill for the bracket to rest against a stud (Figure C).



Figure C

4. Line the bracket up and mark the other holes, as well (Figure D).



Figure D

5. If having trouble eyeing a balance for the bracket, use a level (Figure E).



Figure E

6. Drill a pilot hole for each of the three marked holes (Figure F).



Figure F

7. Using a 17mm socket, bolt the bracket to the wall using supplied bolts (Figure G).



Figure G

8. Tighten all three bolts (Figure H).



Figure H

9. Place the door on the bracket so the appropriate length and height for the secondary bracket can be measured (Figure I).



Figure I

10. Place the bracket into the mechanism in the lower corner of the door (Figure J).



Figure J

11. Mark the bracket holes then check for appropriate studs using the stud finder (Figure K).



Figure K

12. Drill pilot holes again and mount the bracket using a 17mm socket and the supplied bolts (Figure L).

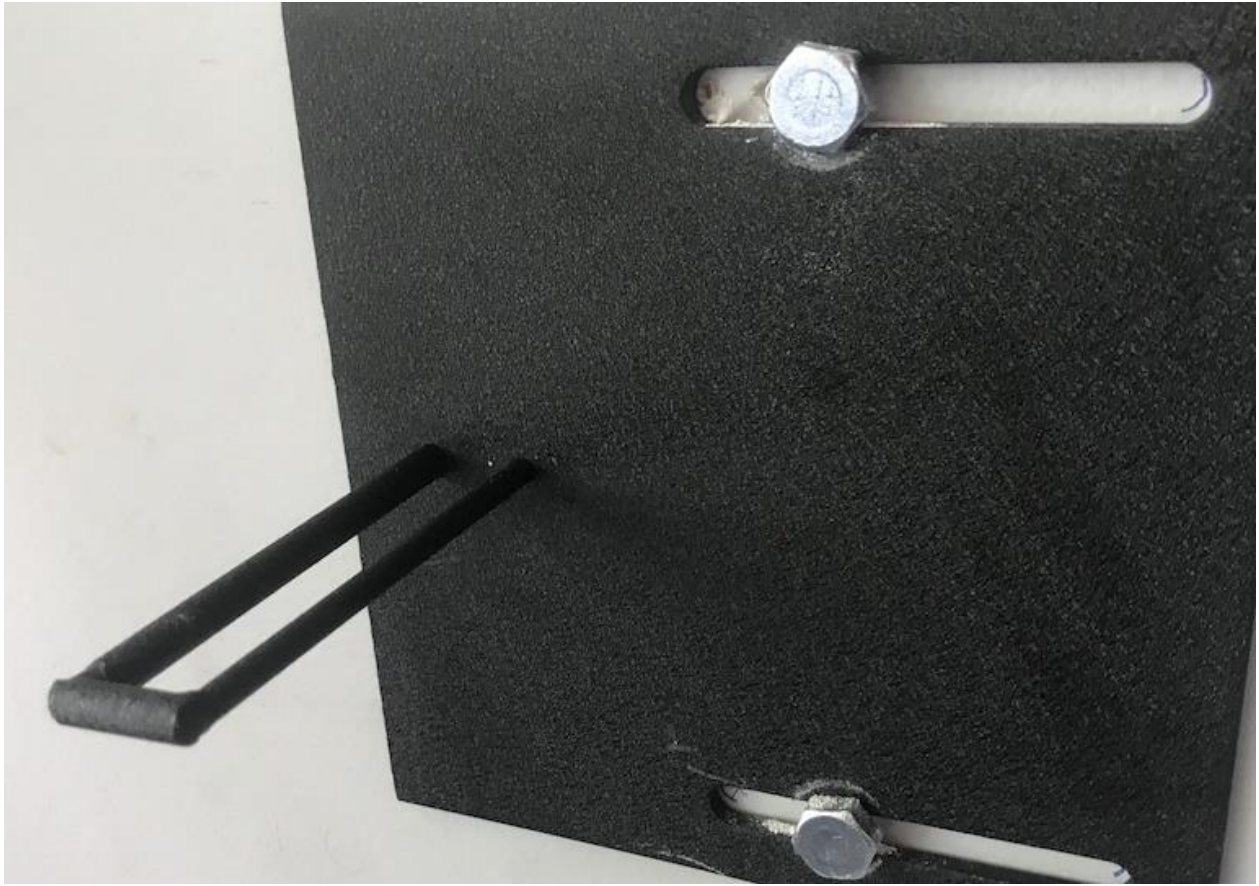



Figure L

13. Swing the door back in and ensure it aligns and locks on the bracket piece (Figure M).



Figure M

14. Repeat Steps 2-13 for the second door hanger.

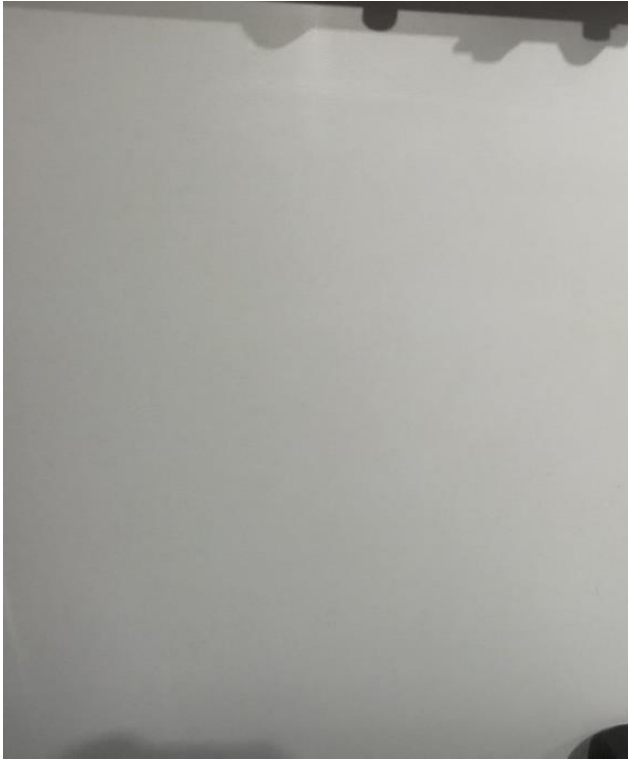

Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 05/22/2018