

**INSTALLATION GUIDE FOR BARRICADE EXTREME HEAVY DUTY  
ROCKER STEPS 2018 WRANGLER JL UNLIMITED**

**Installation time:** 2 hours

**Tools needed:** 1/2" socket  
10mm socket  
10mm open ended box wrench  
Adjustable wrench  
Second person (recommended)

**Before:**



**Step 1:** locate mounting holes on the underside of Jeep on each side of vehicle. There will be a total of 3 holes on each side that will mount the steps to the body. These holes will be pre threaded.



**Step 2:** Have friend hold up running board under Jeep while you use the provided ½” bolt, washer and lock washer to lightly secure to Jeep. There will be a total of 3 pre threaded holes on each side that attach steps to the body. Only hand tighten enough to hold up steps. Leave loose enough to adjust later.



*MOUNTED WITHOUT  
BRACKETS*



*STEPS MOUNTED TO*



*PRE THREADED HOLES*

**Step 3:** After hanging the steps by only hand tightening, locate the pre drilled “pinch-weld” mounting holes on the body of the jeep. There will be a total of 6 holes on each side. These holes will be used to mount the brackets to the frame and steps.



**Step 4:** locate the front bracket. The front bracket will have a small cutout to go around the “bulge” on the inside of the pinch weld seam. Hold up bracket under car and align pre drilled holes to holes on bracket. Bracket will be mounted on the inside edge of the pinch weld seam. Insert the 10mm bolt into holes from the outside so the threaded portion is under the jeep. Only hand tighten.



# PINCH-WELD BRACKET HARDWARE



*FRONT PINCH WELD MOUNT*



**Step 5:** After mounting the front bracket to the pinch weld, locate the other 2 brackets. You will have 2 identical brackets... one that will mount in the middle and one on the back of the steps. Follow mounting steps from **step 4** for both the middle and rear bracket.





*PINCH WELD BRACKET  
MOUNTED*



**VIEW FROM OUTSIDE**

**Step 6:** After mounting all 3 pinch weld seam mounting brackets, the holes on the bracket and the holes on the steps should be aligned. Use the provided Hardware to attach the Pinch weld Mounting brackets to the brackets built into the steps. Make sure to use a washer on each side! Only hand tighten all nuts and bolts to allow for adjustment later

**STEP TO BRACKET**


**HARDWARE**



**X3 PER**

**SIDE**

*PINCH WELD  
BRACKET TO*

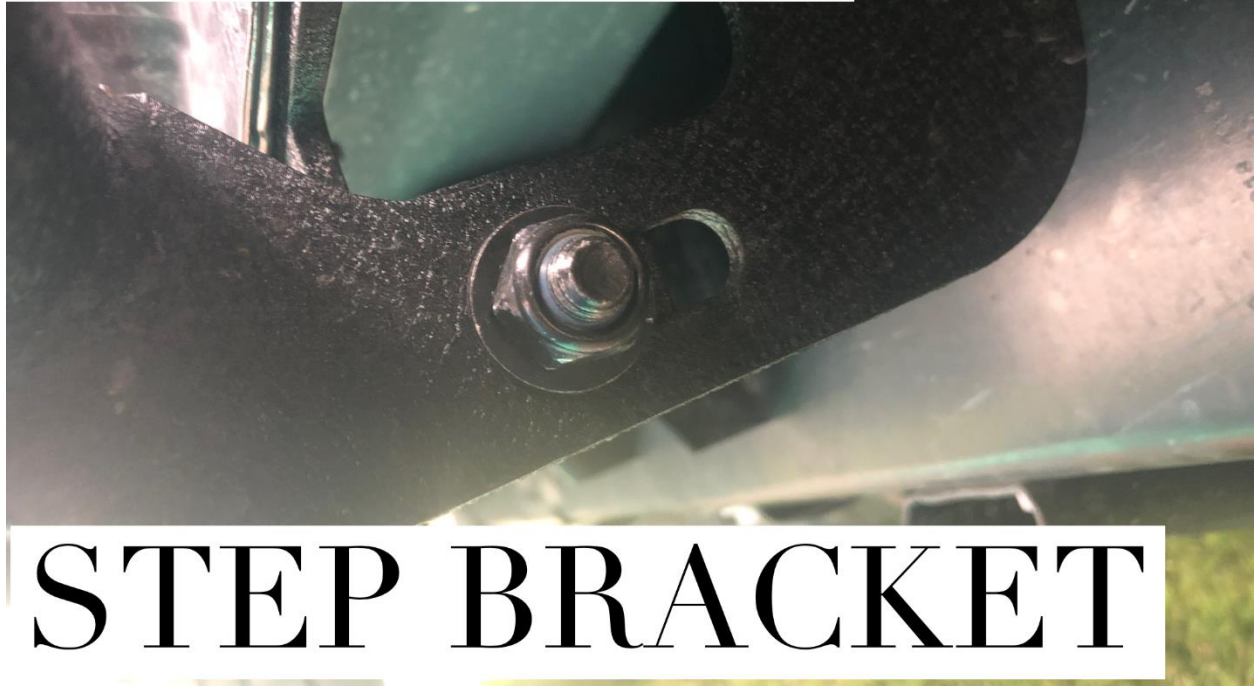

**STEP BRACKET**

**Step 7:** You can adjust the steps to your liking. To keep the steps closer to the vehicle simply push the step toward to vehicle. To keep steps outward away from vehicle simply pull them out. After adjusting to your liking go around and tighten ALL bolts to securely attach to vehicle. 3 bolts for the pre threaded body mount holes, the 6 pinch weld mounting bracket nuts and bolts and of course the 3 bracket to step nuts and bolts. Once all nuts and bolts are tightened... repeat steps on opposite side.



Installation guide written by Extreme Terrain Customers Dustin and Megan Evers on 10/16/18