<u>Installation Guide for Barricade Front & Rear Floor Liners (07-17 Wrangler JK 4-Door)</u>


Installation Time: 15 Minutes

Tools Required:

✓ No tools required

Installation Instructions:

1. Remove existing floor mats if there are any currently installed in your Jeep.

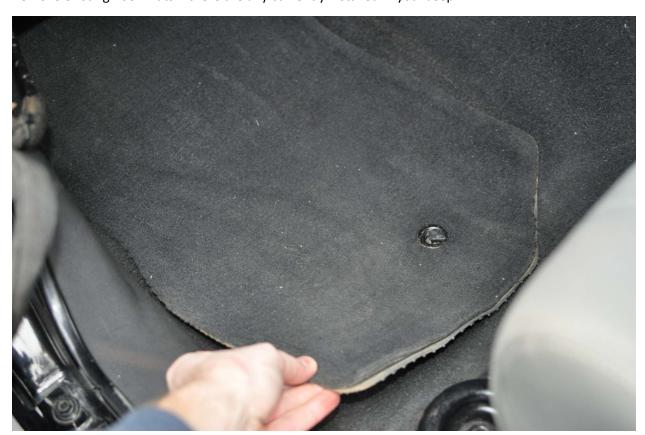

2. On the new Barricade front driver & passenger liners, determine which holes will engage the plastic clips on the floor of your Jeep and insert the included plugs into the unneeded holes.



3. Install the front liners and lock them in place with the clips on the floor of your Jeep




Driver Side Installed:



Passenger Side Installed:



4. Install the rear liner (note: there are no plugs or clips for the rear liner)

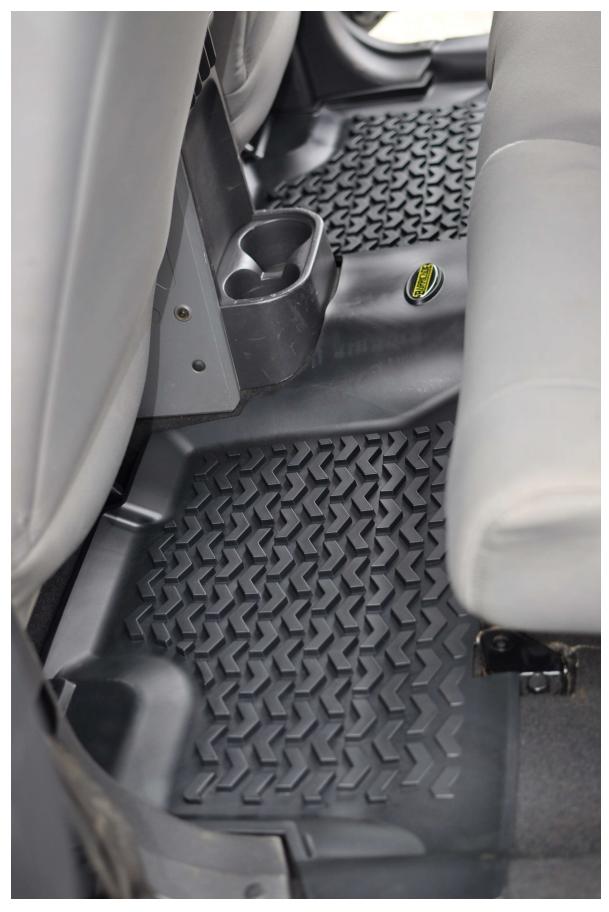

Installation Instructions Written by ExtremeTerrain Customer Chad Brubaker 5/6/2017