

## Installation Instructions for Barricade Trail Force HD Rear Bumper (87-06 Wrangler YJ/TJ)

Installation time: About 1 hour

### TOOLS REQUIRED.

18mm socket and wrench

T30 Torx

### Installation Instructions:


1. To install the Barricade Trail Force HD Rear Bumper you must first remove factory rear bumper.



2. Remove rear bumper end caps using T30 Torx bit. There are 5 bolts on each side, 2 on the top side and 3 on the bottom side. Remove the 2 topside bolts on each side first.



3. Remove the 3 bolts on each side of the bottom side of the bumper.

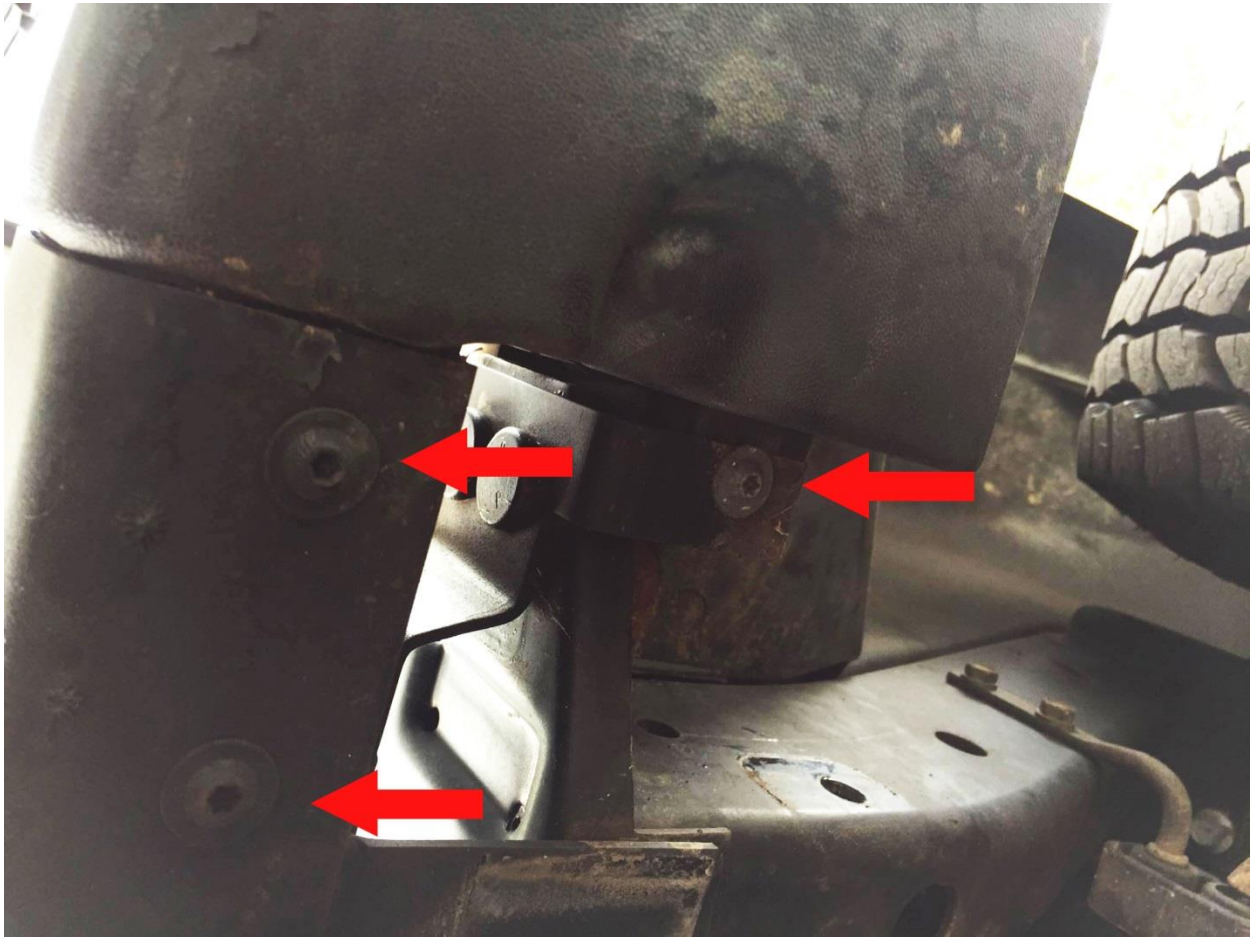

4. Remove 18mm bottom side bolt on the driver and passenger side of the bumper.



5. Remove the 2 back side 18mm bolts on drive and passenger side of the bumper.



6. With the factory bumper removed, install the Barricade Trail Force HD Rear Bumper using the provided 6 - 18mm bolts. Use the original 6 holes for the factory bumper for the new Barricade Rear Bumper, 3 on each side.



**7. You now have the Barricade Trail Force HD Rear Bumper installed.**

