

Bestop Bolt-On Windshield Channel for Bikini or Brief Style Tops

Installation Guide for Jeep Wrangler '07-'16 2-Door JK

Installation Time: <1 Hour

Tools Required:

- ✓ Box Cutter/Knife
- ✓ 10mm Wrench
- ✓ Philips Head Screwdriver

Installation Instructions:

Note: This is *only* the Bestop Bolt-On Windshield Channel. No top is included with this product.

1. Carefully open the package using a box cutter or knife (Figure A) and ensure the hardware is included and undamaged.



Figure A

2. Place the header bracket on the header bar (L on the left side, R on the right side) (Figure B).



Figure B

3. Using a Philips head screwdriver and a 10mm wrench, tighten the supplied screws and nuts (Figure C).



Figure C

- Repeat Steps 2 & 3 on the other side (Figure D).



Figure D

Note: This Windshield Channel is sold separately from any top. At this stage, attach the top using the supplied riveted buttons along the riveted buttons on the windshield channel.

- Place the Windshield Channel in position on top of the windshield and thread the knob and placement bracket onto the header bracket (Figure E).



Figure E

- Repeat on the other side.

7. Tighten both knobs down (Figure F).

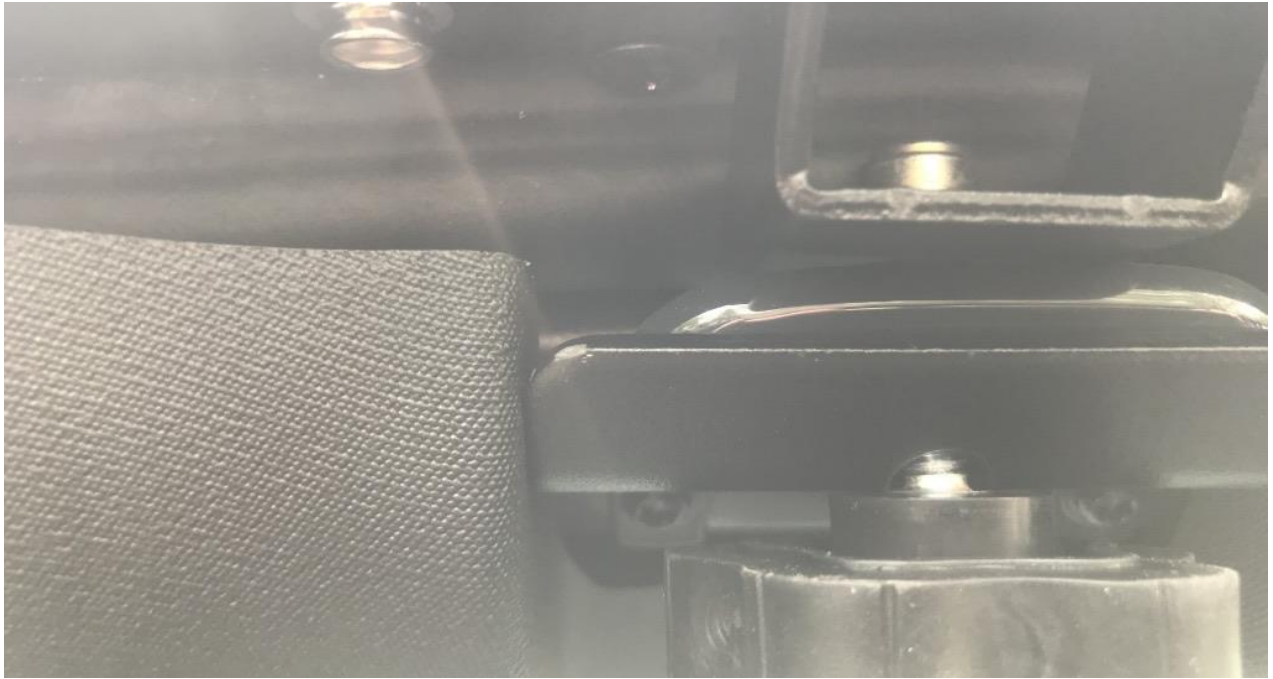


Figure F



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 04/26/2018