

Black Forest Gear Cargo Slider

Installation Guide for Jeep Wrangler '07-'16 2-Door JK

Installation Time: <1 Hour

Tools Required:

- ✓ Box Cutter/Knife
- ✓ 10mm Socket
- ✓ Socket Wrench

Installation Instructions:

Note: *This product requires a base plate (such as the Black Forest Gear Cargo Base Plate) to be installed already.*

1. Carefully open the package using a box cutter or knife (Figure A) and ensure the hardware is included and undamaged.

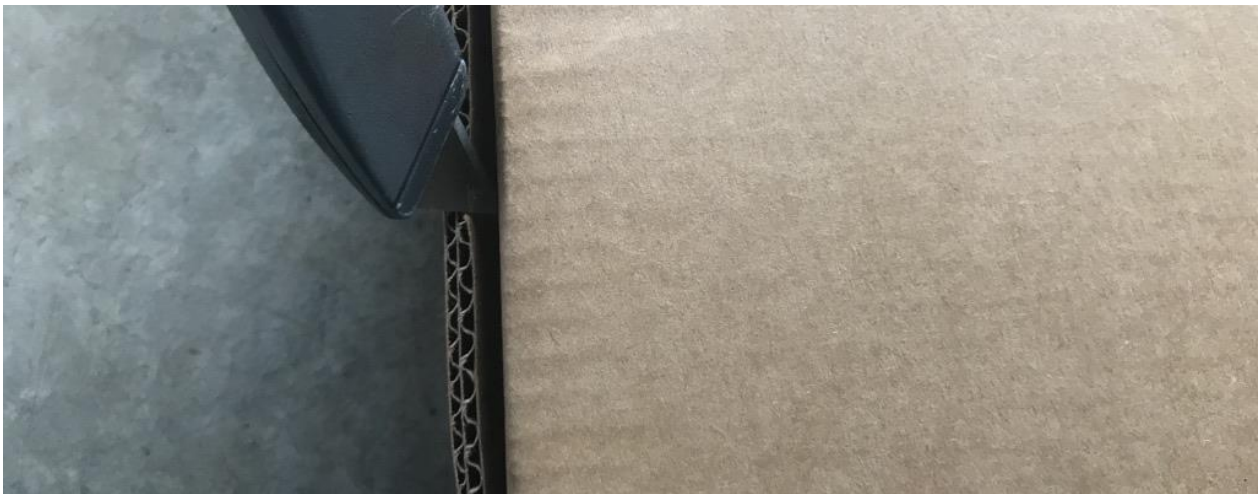


Figure A

2. Ensure the front and rear base plates (previously installed) are level/equal height by adjusting the leveling feet (Figure B).



Figure B

3. Place the slide assembly into the mounting position (Figure C). Ensure the release handle is facing toward the rear of the vehicle.

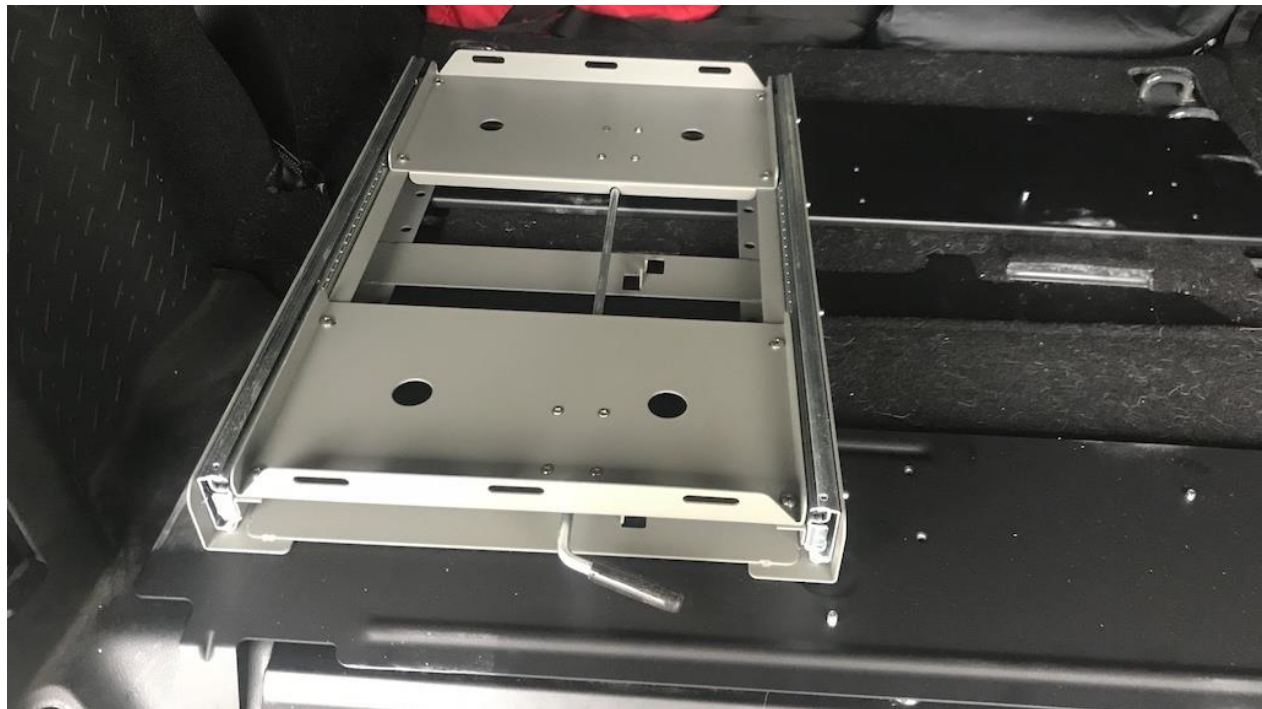


Figure C

4. Extend the slide assembly by rotating the release handle upward and pulling the tray out slowly (Figure D).



Figure D

5. Using the supplied fasteners, connect the slide assembly to the base plates, working from the front of the vehicle and moving to the rear (Figure E).

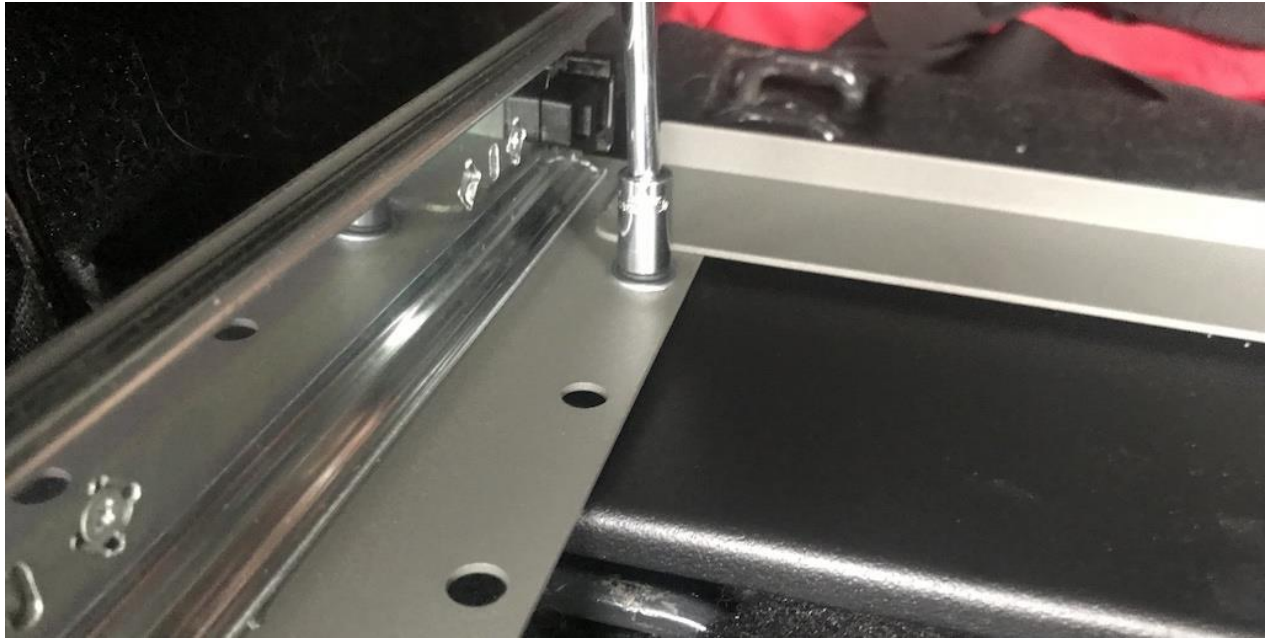


Figure E

6. Tighten all fasteners (Figure F).

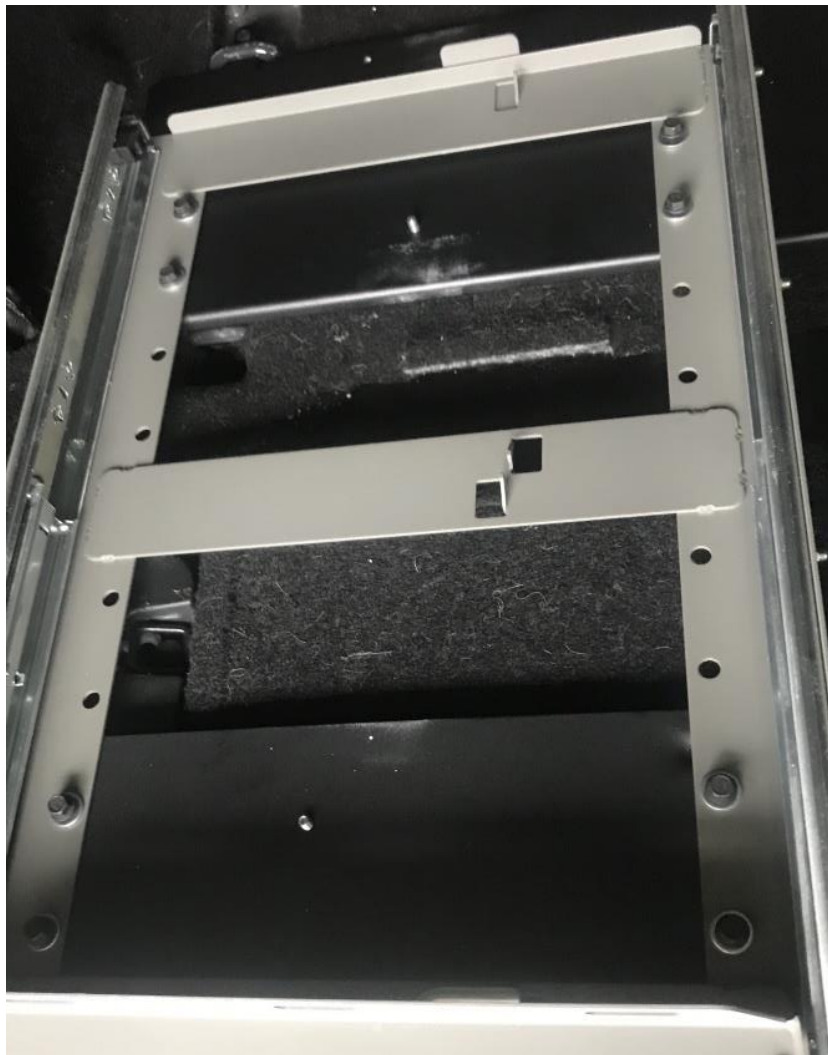


Figure F

7. Slide the tray back into the closed/locked position to ensure smooth travel of the slide assembly (Figure G).


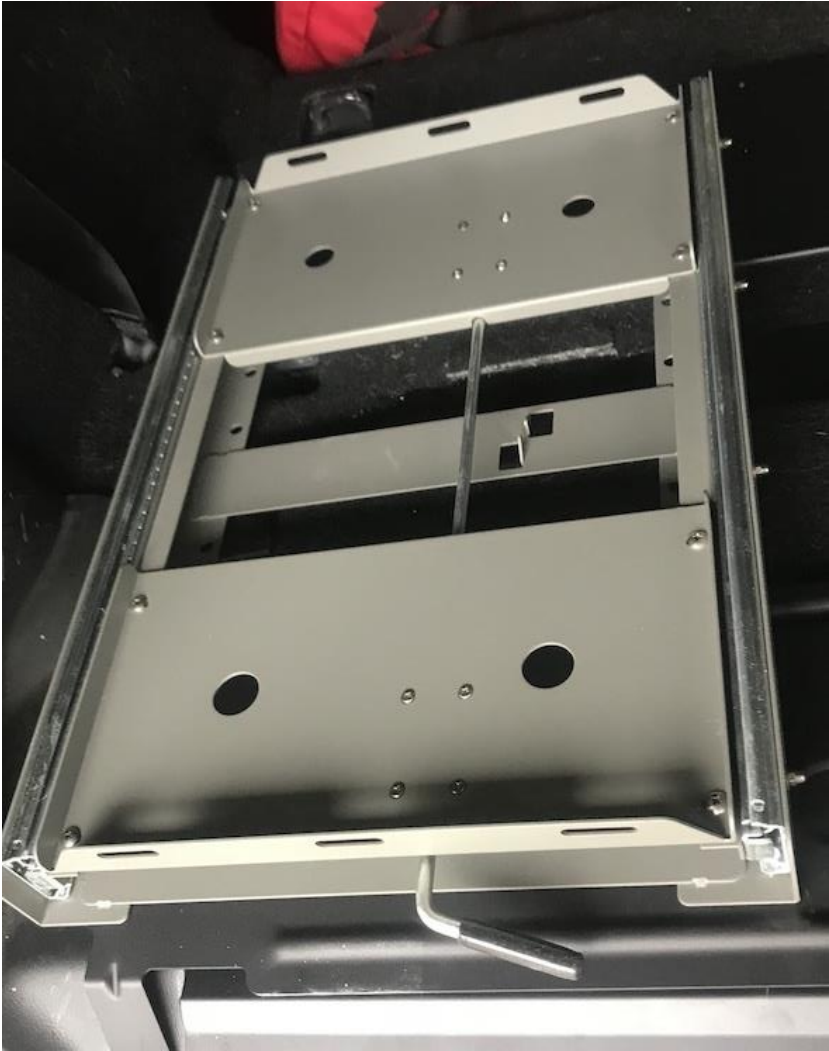


Figure G



Before

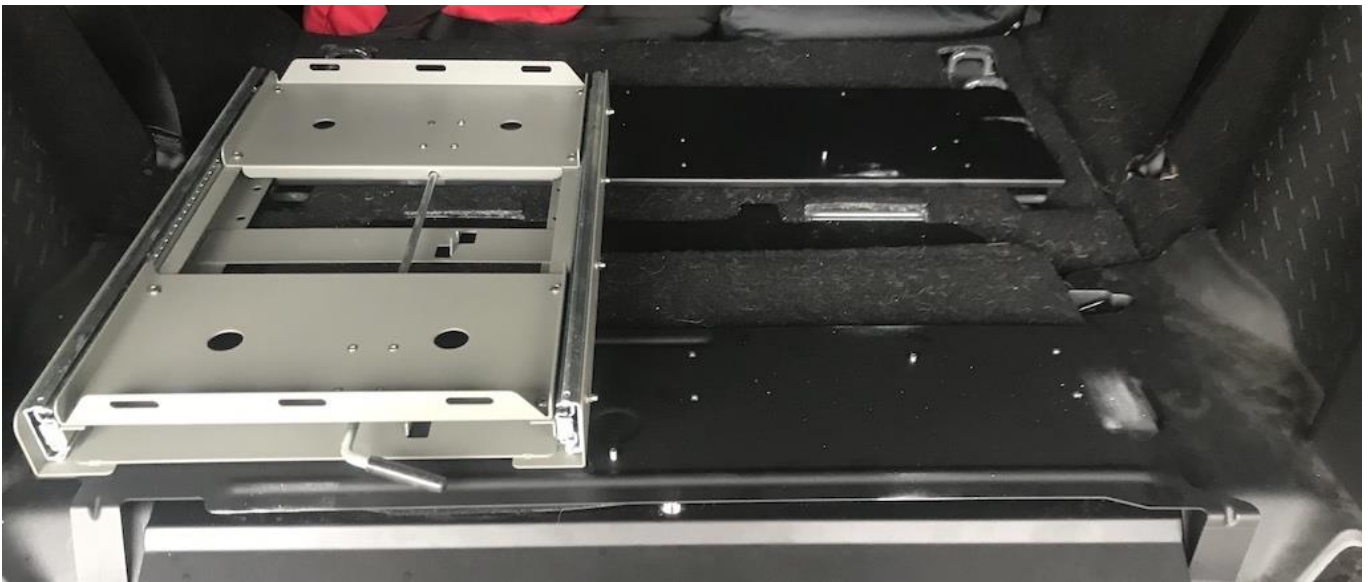

After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 02/22/2018