

Boom Mat Sound Deadening Rear Side Window - White

Installation Guide for Jeep Wrangler '07-'18 4-Door JKU

Installation Time: 1 Hour

Tools Required:

- ✓ Box Cutter/Knife (Packaging)

Installation Instructions:

1. For easiest installation, install the rear window Boom Mat sound deadeners with the hard top off the vehicle (Figure A).



Figure A

2. Using alcohol wipes or alcohol and a cloth or paper towel, clean the entire surface area where the product will adhere (Figure B).



Figure B

3. Position the passenger side rear side window sound deadener (side-specific) into place to ensure it is the correct side (Figure C).



Figure C

4. Remove the backing of the adhesive (Figure D).

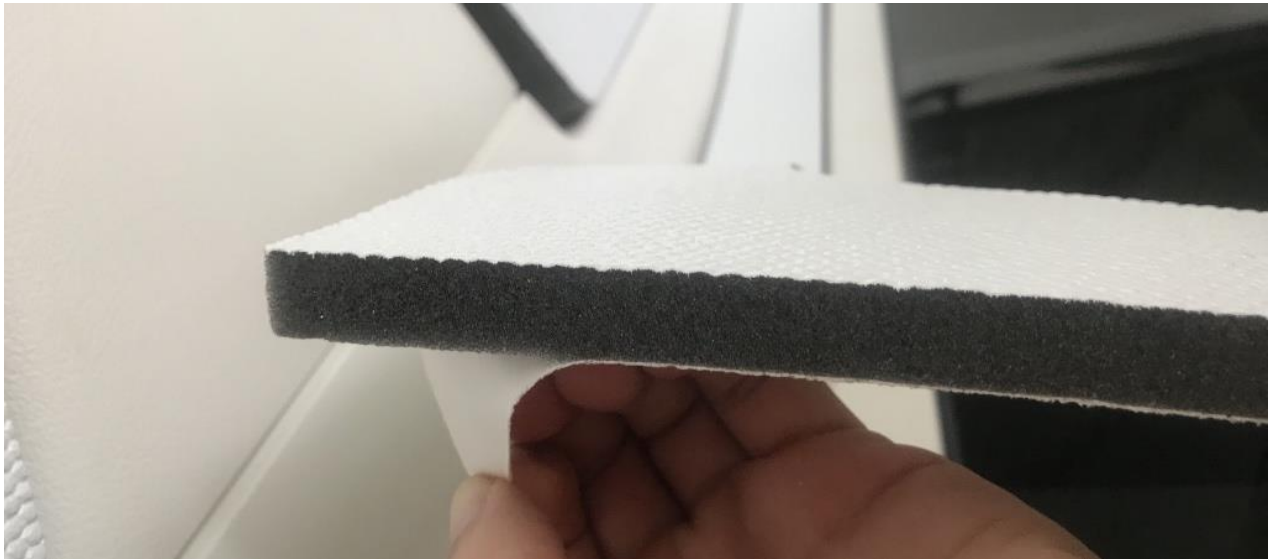


Figure D

5. Position the sound deadener before pressing in (Figure E).



Figure E

6. With the sound deadener in place on the passenger side, press firmly to secure it in place (Figure F).



Figure F

7. Position the driver side rear side window sound deadener into place (Figure G).



Figure G

8. Repeat Steps 4-6 to adhere the sound deadener to the surface on the driver side(Figure H).



Figure H



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 08/01/2018