

## Axial Clear Side Marker Lights Installation Guide (97-06 Wrangler TJ)

**Installation Time:** 30 Minutes

**Tools Required:**

- ✓ 3/8" Deep socket
- ✓ 9mm Deep socket
- ✓ Knife / Razor Blade


*Some installations may vary. For my installation the factory light was installed with a nut and bolt. The replacement Axial Clear Side Marker Lights do not come with any mounting hardware. I found the Dorman Thread Cutting Nut Assortment Part # 455750BP worked to hold in the new Axial Clear Side Marker Lights. Purchased at O'Reilly auto parts but similar products should be sold at other auto parts stores.*

**Installation Instructions:**

1. Before



2. Remove the existing mounting hardware. For my installation that was a 9mm nut.

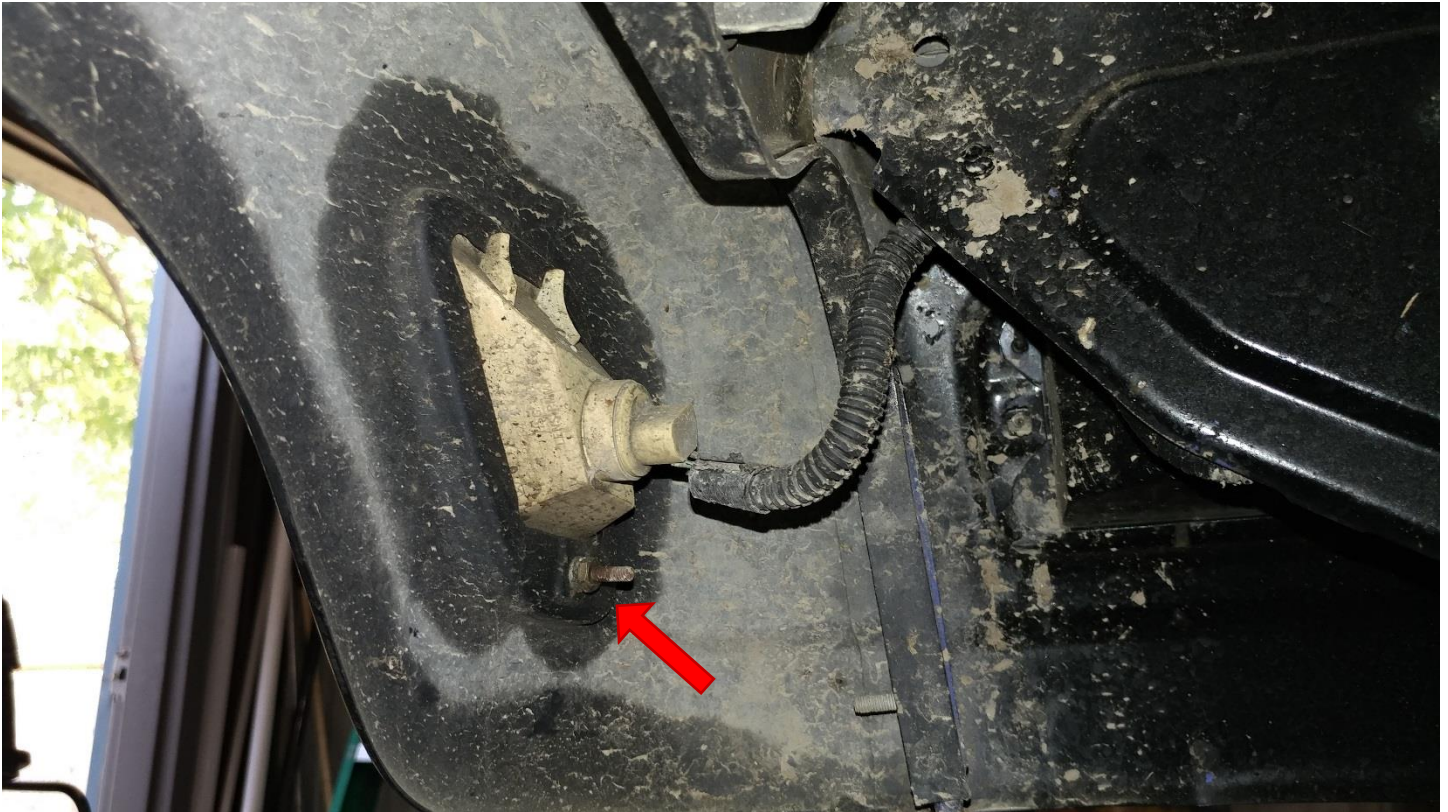


3. With the side marker light loose hold the marker light in one hand and the light socket in the other. Twist 1 half turn to remove the light socket.



4. Remove the factory white light bulb and install the provided amber/orange light bulb. The bulb will pull straight out.



5. My factory side marker housings had a 3 key mounting style for the bulb socket. The new Axial Clear Side Marker Light housing uses a 2 key mounting style for the bulb socket. I used a knife to remove the extra tab.

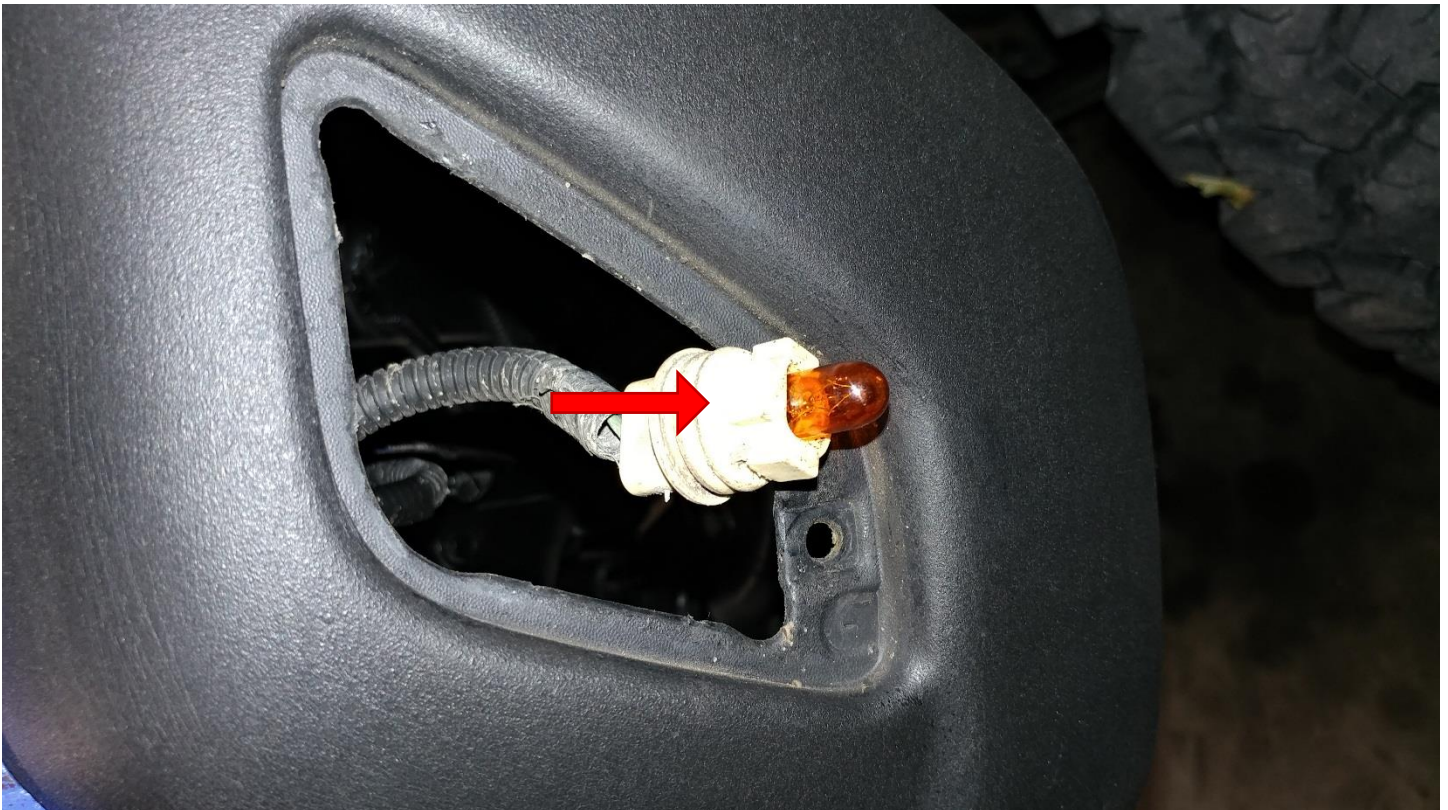

- Line up the 2 mounting keys on the light bulb socket with the mounting holes on the new Axial Clear Side Marker Light. Turn the socket 1 half turn.



- While holding in the new Axial Clear Side Marker Light install the Thread Cutting Nut. I found that the nut size using a 3/8" socket fit.





8. Installation complete

