

Coyote Chrome Spike Lug Nut Kit - 1/2 in. - 5 Wheel Kit (87-18 Wrangler YJ, TJ & JK)

Installation Time: 60 Minutes

Tools Required:

- ✓ 13/16 socket
- ✓ 3/4 socket

Installation Instructions:

1. Before



2. Using a 13/16 socket remove the existing lug nuts



3. Coyote Chrome Spike Lug Nut Kit - 1/2 in. - 5 Wheel Kit (87-18 Wrangler YJ, TJ & JK)



4. The spiked lug nuts require the provided extended length adapter.



5. The extended length adapter requires a 3/4 socket



6. Finger tighten the spiked lug nuts into place.



7. Lug nut tightening pattern. Factory torque spec. 85 to 115 ft. lbs.

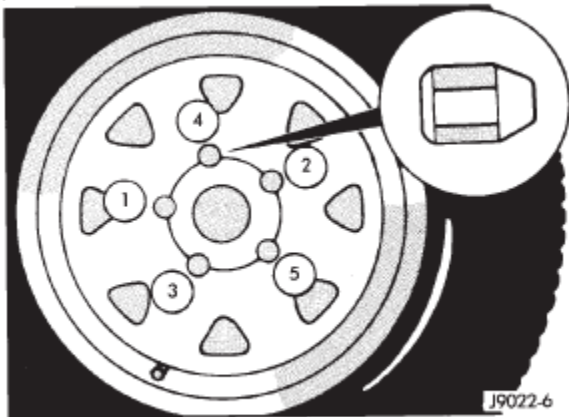


Fig. 5 Lug Nut Tightening Pattern

8. Using the provided extended length adapter and a 3/4 socket. Reference item #7 to tighten the lug nuts



9. Repeat on remaining wheels.
10. Installation complete





Installation Instructions Written by ExtremeTerrain Customer T. Boyer 12/18/2017