

# Installation Instructions for the RT Off-Road Rock Crawler Front Bumper (87-06 YJ & TJ)

## Tools Needed

- Torx T55 socket
- Ratchet
- Torque Wrench
- Tape Measure
- Dead Blow hammer or Rubber Mallet

## Installation Instructions

1. Remove the OEM front bumper by removing two T55 Torx socket head bolts (1/2" X 1 3/8") from under the front bumper at the frame rail.



2. Remove four OEM T55 Torx socket head bolts (1/2" X 2 3/8") and OEM tow hook from the top of the front bumper.



3. Retain OEM bolts and tow hooks for reuse.




4. Slide new RT Off-Road Rock Crawler Front Bumper onto front frame

5. Align the bolt holes and insert the two T55 Torx socket head bolts (1/2" X 1 3/8") from under the front bumper at the frame rail. Do not tighten these bolts at this time.





- Using a tape measure and a soft hammer or mallet, center bumper on frame.

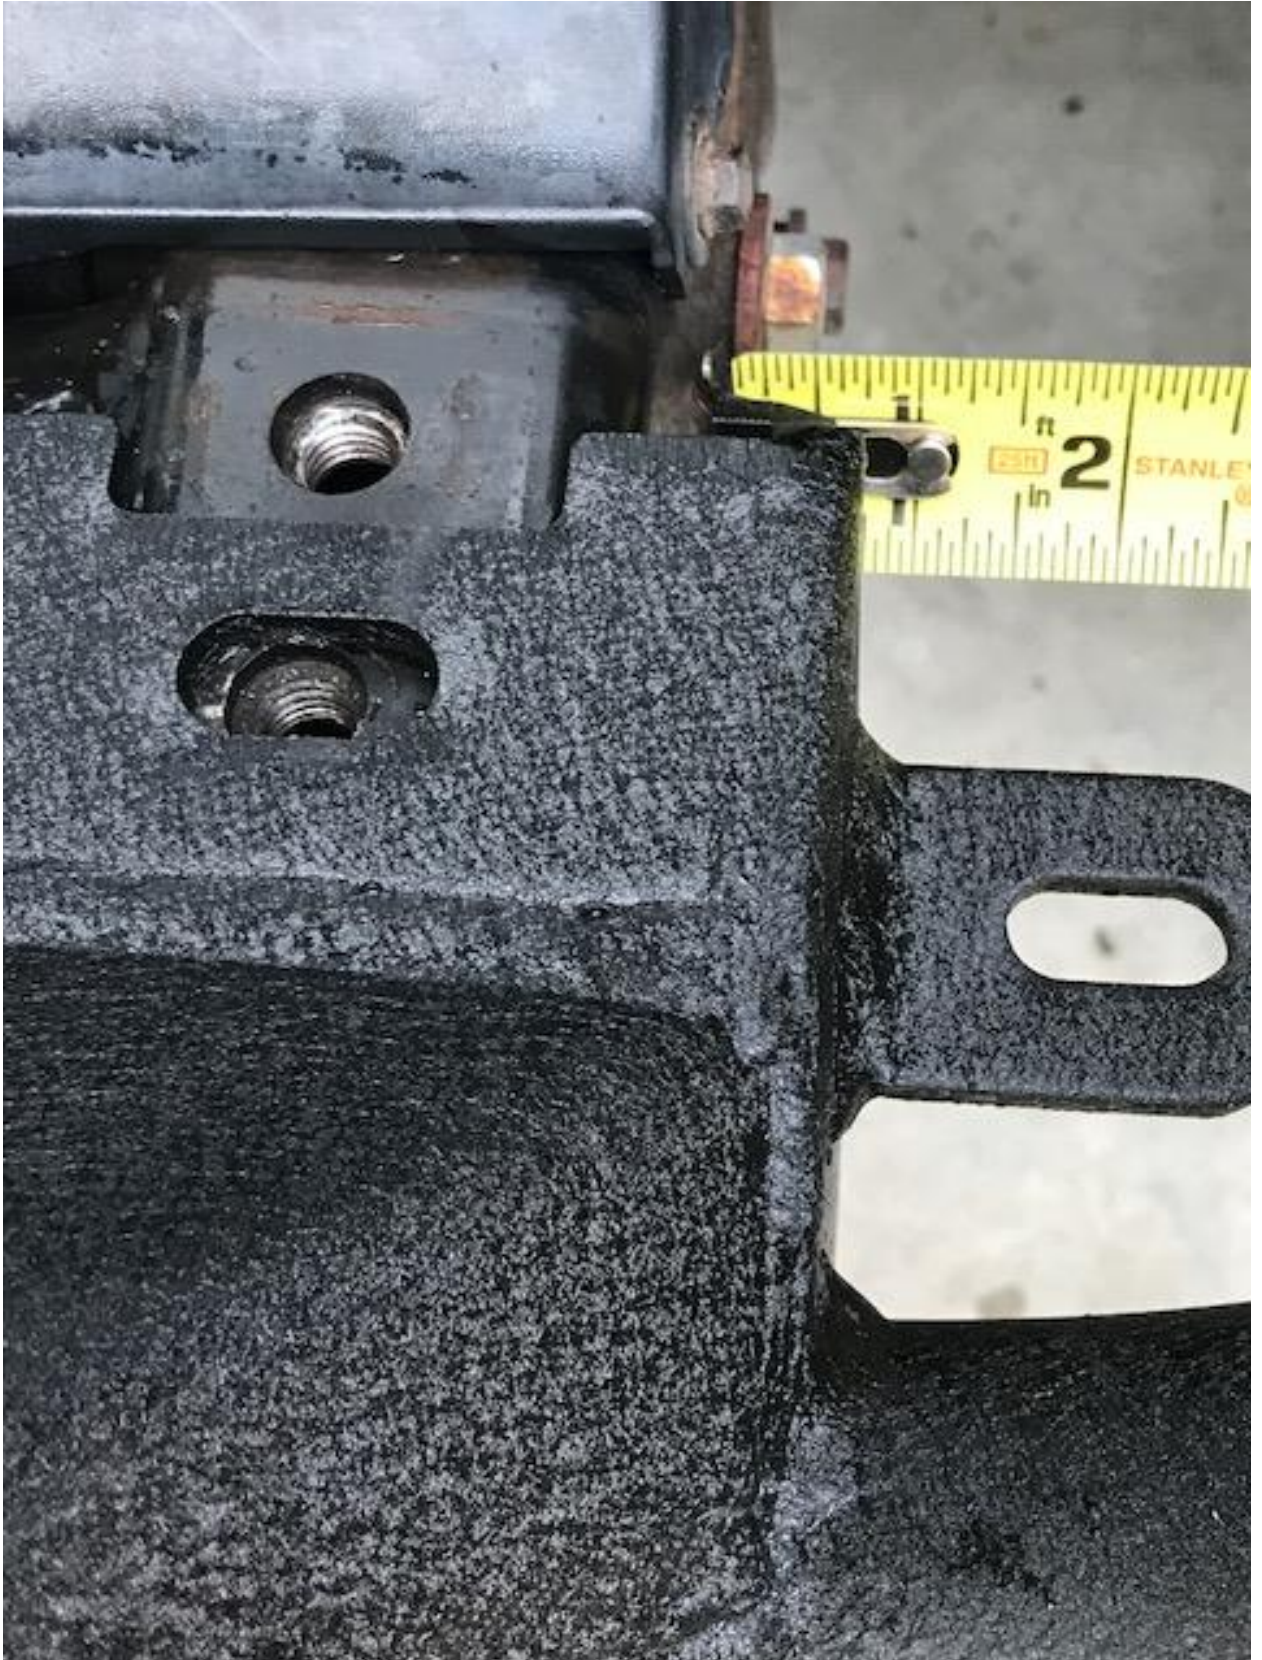

7. Place the tow hook spacers on the frame.





8. Install the tow hooks and four T55 Torx socket head bolts (1/2" X 2 3/8") into the top of the front bumper.



9. Torque all four top T55 bolts and two bottom T55 bolts to OE specifications.

Congratulations, you have installed your new RT Off-Road Rock Crawler Front Bumper.







