

## DV8 Off-Road 4 in. Replacement LED Fog Lights

### Installation Guide for Jeep Wrangler '07-'16 2-Door JK

**Installation Time:** 1 Hour

**Tools Required:**

- ✓ Box Cutter/Knife
- ✓ Philips Head Screwdriver
- ✓ Splice or Butt Wire Connectors
- ✓ Electrical Tape (optional)

**Installation Instructions:**

1. Carefully open the package using a box cutter or knife (Figure A) and ensure the lights are included and undamaged.



Figure A

2. On the driver's side, remove the four screws holding the current fog light in place using a Philips head screwdriver (Figure B).

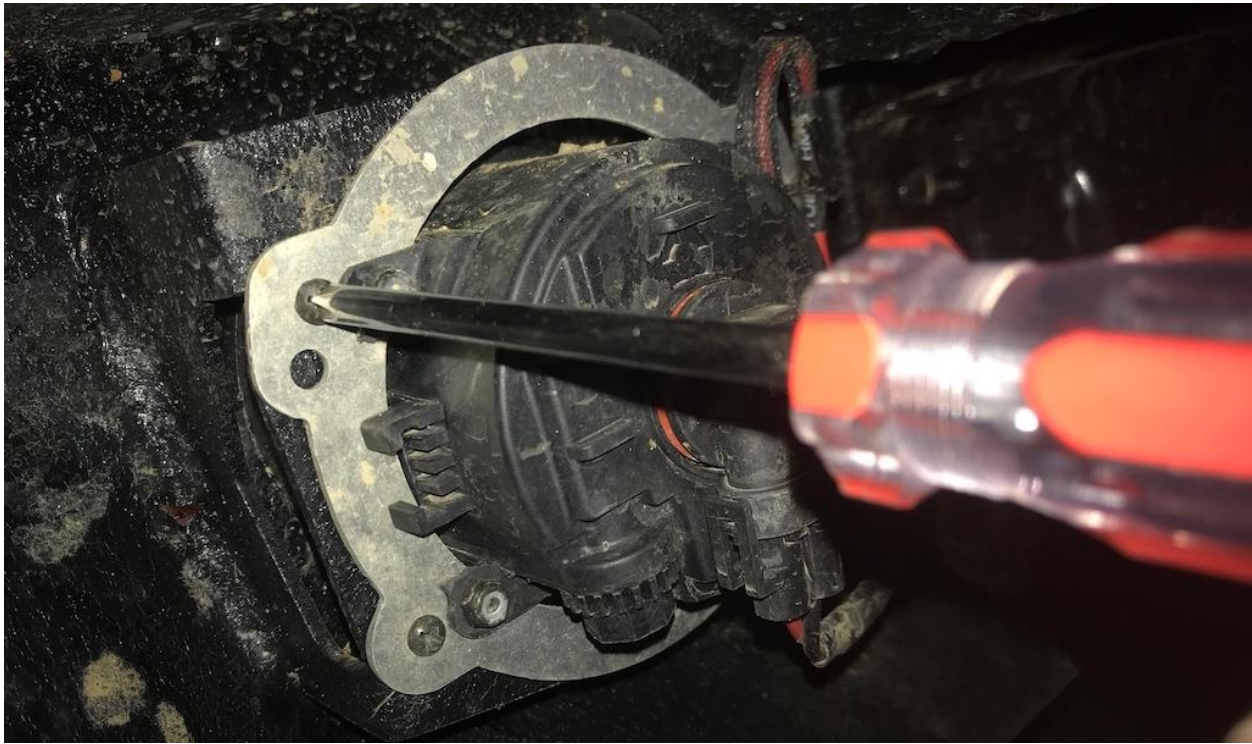


Figure B

3. Unplug the wiring harness to the current fog light (Figure C).



Figure C

4. Remove the current fog light from the mounting location (Figure D).



Figure D

5. Place the DV8 Replacement LED fog light into the mounting location (Figure E).



Figure E

6. Using a Philips head screwdriver, return the four screws into place (Figure F).



Figure F

7. Connect the wiring to the factory lighting harness. This can be done one of two ways:  
**Using a splice connector** (shown), tap into the factory wiring harness (Figure G) and then compress the connector to secure the connection.  
**Using a butt connector**, cut the wiring harness, then remove  $\frac{1}{4}$ " of the wire guard and connect the LED pigtail and the wiring harness from each end of the butt connector before compressing the connector to secure the connection.

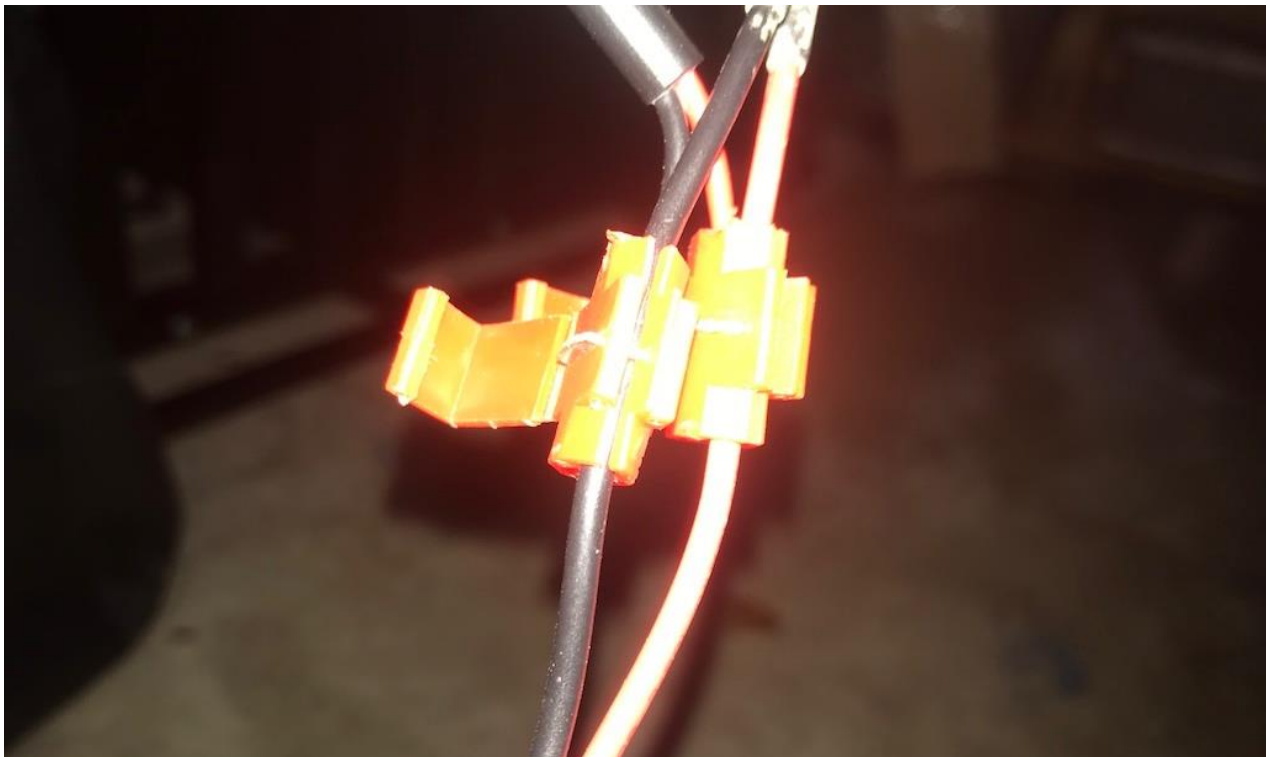


Figure G

8. Wrap the connection with electrical tape.
  
9. Repeat Steps 2-8 on the passenger side, as well.



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 11/17/2017