

Installation Guide for DV8 Off-Road LED Projector Headlights (07-17 Wrangler JK)

Installation Time: 20 Minutes

Tools Required:

- ✓ Flathead Screwdriver
- ✓ T15 Torx Screwdriver

Installation Instructions:


1. Using a Flathead Screwdriver, remove grille push pins. Remove grille.



2. Using a T15 Torx Screwdriver, remove the headlight bezel screws. Unplug the headlight.



3. Plug your new DV8 headlight into the wiring harness as shown below.

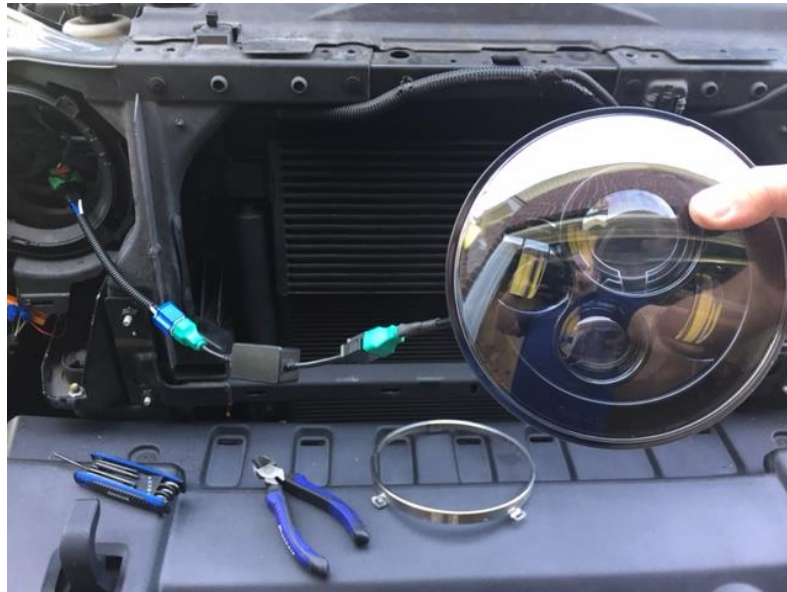

4. Place the original bezel over your new headlight and position the headlight back in the housing. For proper placement, ensure that the smaller LED is on top and the larger LED is on bottom. Reinstall the bezel screws, and grille.



Installation Instructions Written by ExtremeTerrain Customer James T. 09/21/2017.