

Factor 55 Aluminum HitchLink 2.0 - Blue (87-18 Wrangler YJ, TJ, JK & JL)

Installation Time: 30 Minutes

Tools Required:

- ✓ None

Shown with Rugged Ridge 3/4 in. D-Shackles – Red Item J104241 MPN# 11235.08

Installation Instructions:

1. Before




2. If using a locking receiver pin, unlock the pin



3. Remove the receiver pin



4. Remove the existing hitch in the receiver

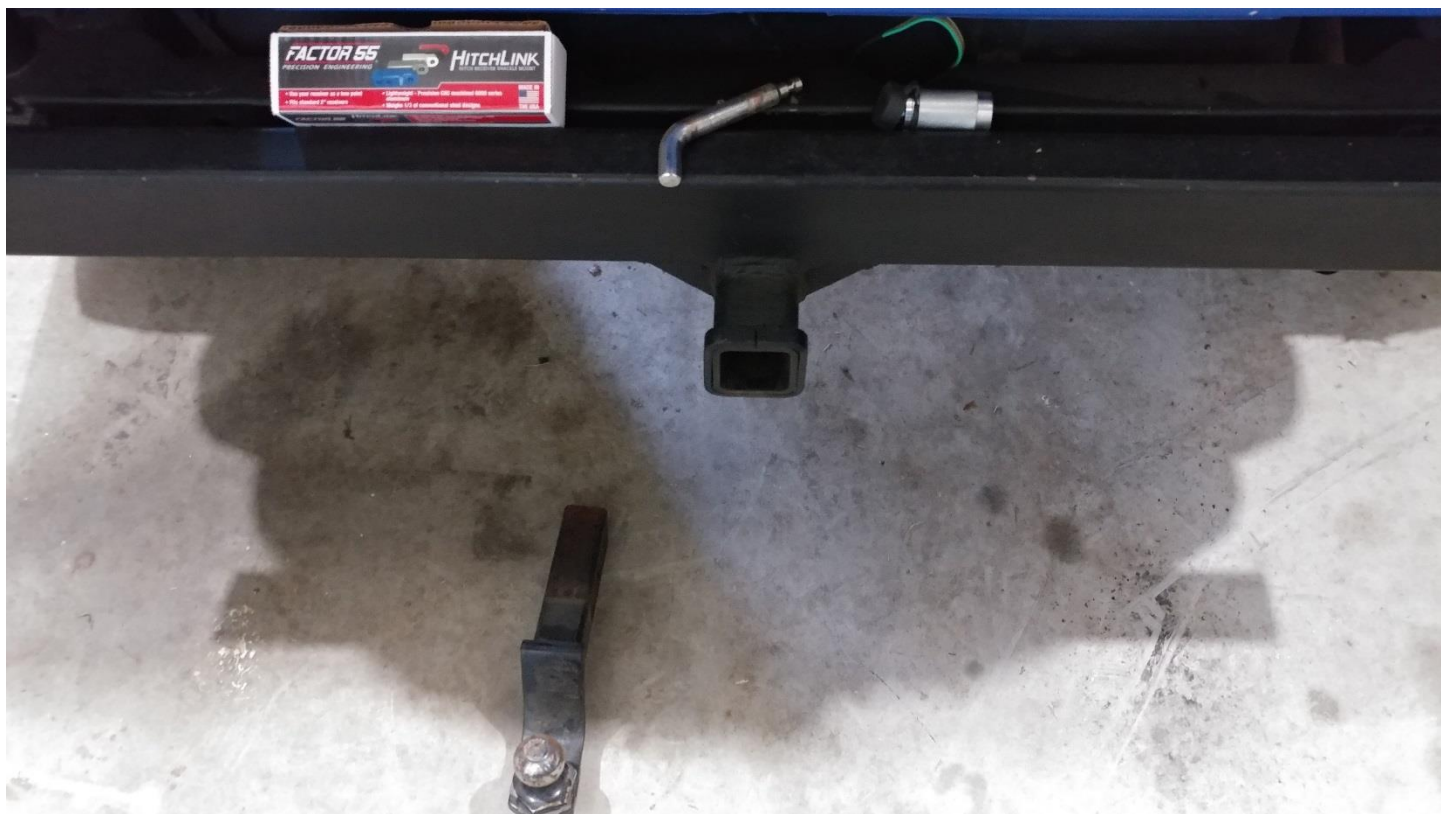

5. Slide in the Factor 55 Aluminum HitchLink 2.0



6. The Factor 55 Aluminum HitchLink 2.0 has two mounting holes the receiver pin can be used in



7. When the desired hole is found install the receiver pin



8. Lock the pin



9. Installation complete



Installation Instructions Written by ExtremeTerrain Customer T. Boyer 3/12/2018