

## Factor 55 ProLink XXL - Black

### Installation Guide for Jeep Wrangler '07-'16 2-Door JK

**Installation Time:** <1 Hour

**Tools Required:**

- ✓ Box Cutter/Knife
- ✓ Pliers

**Installation Instructions:**

1. Carefully open the package using a box cutter or knife (Figure A) and ensure the ProLink XXL is included and undamaged.

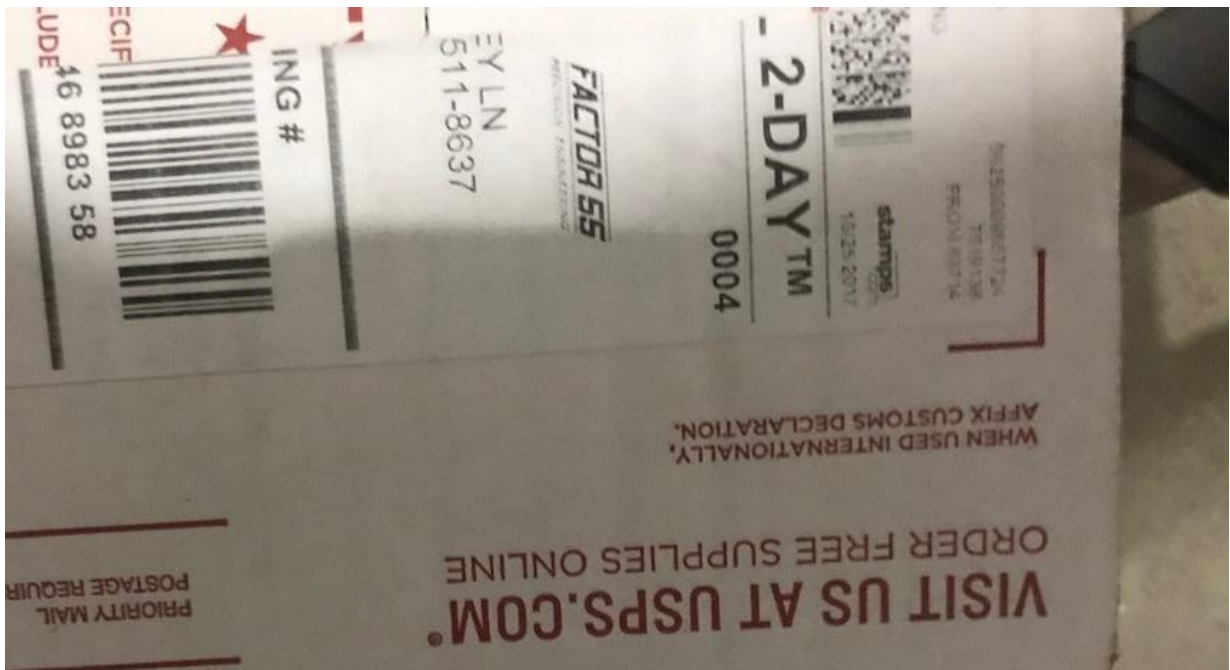


Figure A

2. Remove the lynch pin holding the current winch hook to the rope (Figure B).



Figure B

3. With the lynch pin removed, pull out the bolt holding the hook to the winch rope (Figure C).



Figure C

4. Remove the winch hook completely (Figure D).



Figure D

5. Remove the snap ring from the ProLink XXL (Figure E).



Figure E

6. Remove the placeholder bolt and place the winch rope inside the ProLink XXL (Figure F).



Figure F

7. Reinsert the placeholder bolt (Figure G).



Figure G

8. Place the snap ring back, ensuring it's seated completely in the snap ring groove (Figure H).



Figure H



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 10/29/2017