

## Garvin Wind Deflector for Adventure Rack

### Installation Guide for Jeep Wrangler '07-'16 2-Door JK

**Installation Time:** 1 Hour

**Tools Required:**

- ✓ Box Cutter/Knife
- ✓ Pliers
- ✓ 13mm Socket
- ✓ Socket Wrench
- ✓ 5mm Allen Wrench

**Installation Instructions:**

**Note:** *This product requires the Garvin Adventure Rack (for 2-door or 4-door JKs) in order to be installed properly.*

1. Carefully open the package using a box cutter or knife (Figure A) and pliers (Figure B). Ensure the wind deflector and hardware are included and undamaged.



Figure A



Figure B

2. *Optional:* For easiest installation, remove the front brackets and crossbar of the Garvin Adventure Rack from the vehicle using a 5mm Allen wrench (Figure C) in order to install the wind deflector on the ground.

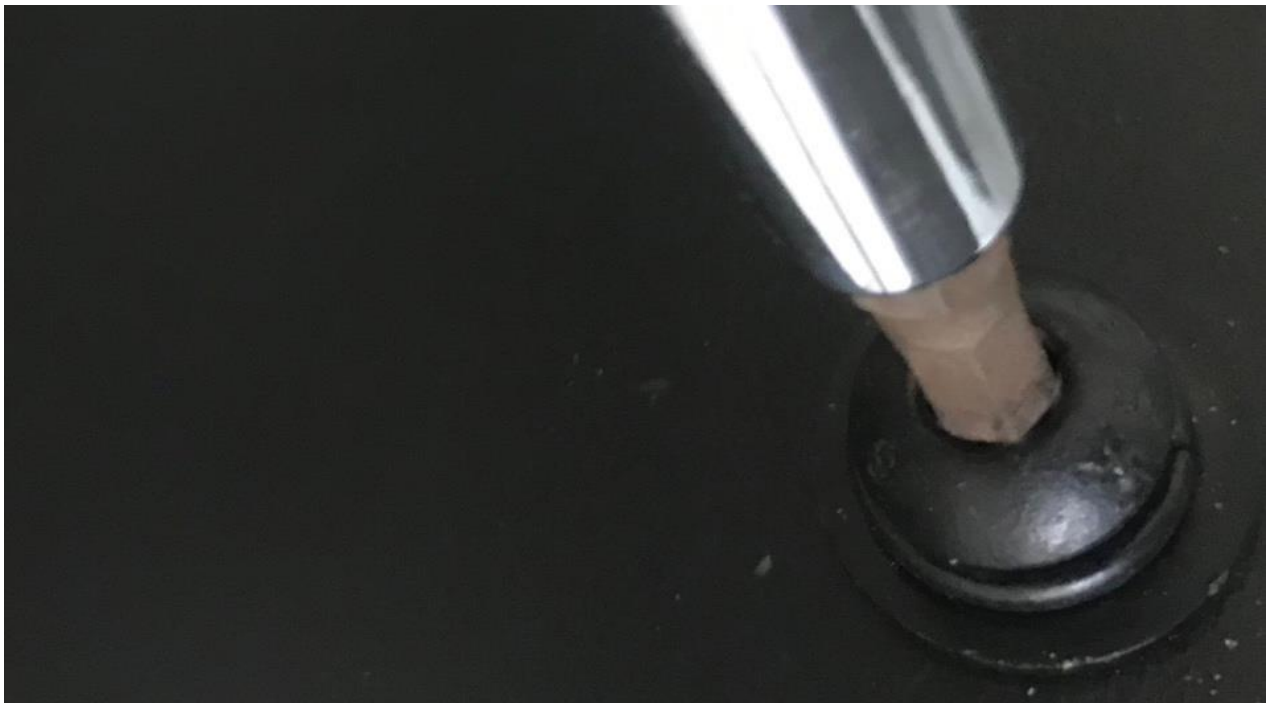


Figure C

3. Connect a top mounting bracket to the wind deflector using a 5/16 x 3/4 carriage bolt, washer, and thin nylon nut (supplied) (Figure D).



Figure D

4. Connect the other three top brackets to the wind deflector using the same process as Step 3 (Figure E).





Figure E

5. Place the front brackets and crossbar on the ground (Figure F).



Figure F

6. Place the wind deflector underneath the crossbar (Figure G) and slide the lower support bracket onto each of the upward-facing bolts.



Figure G

7. Hand-tighten the 5/16 flat washers and nylon locknuts (Figure H).



Figure H

8. Position the wind deflector at the angle it will remain at once installed, then tighten down the locknuts using a 13mm socket wrench (Figure I).



Figure I

9. Before completely tightening the locknuts, ensure the wind deflector is centered between the two front brackets (Figure J).




Figure J

10. Reinstall the front brackets and crossbar to the vehicle and reconnect to the rest of the Garvin Adventure Rack.





Before

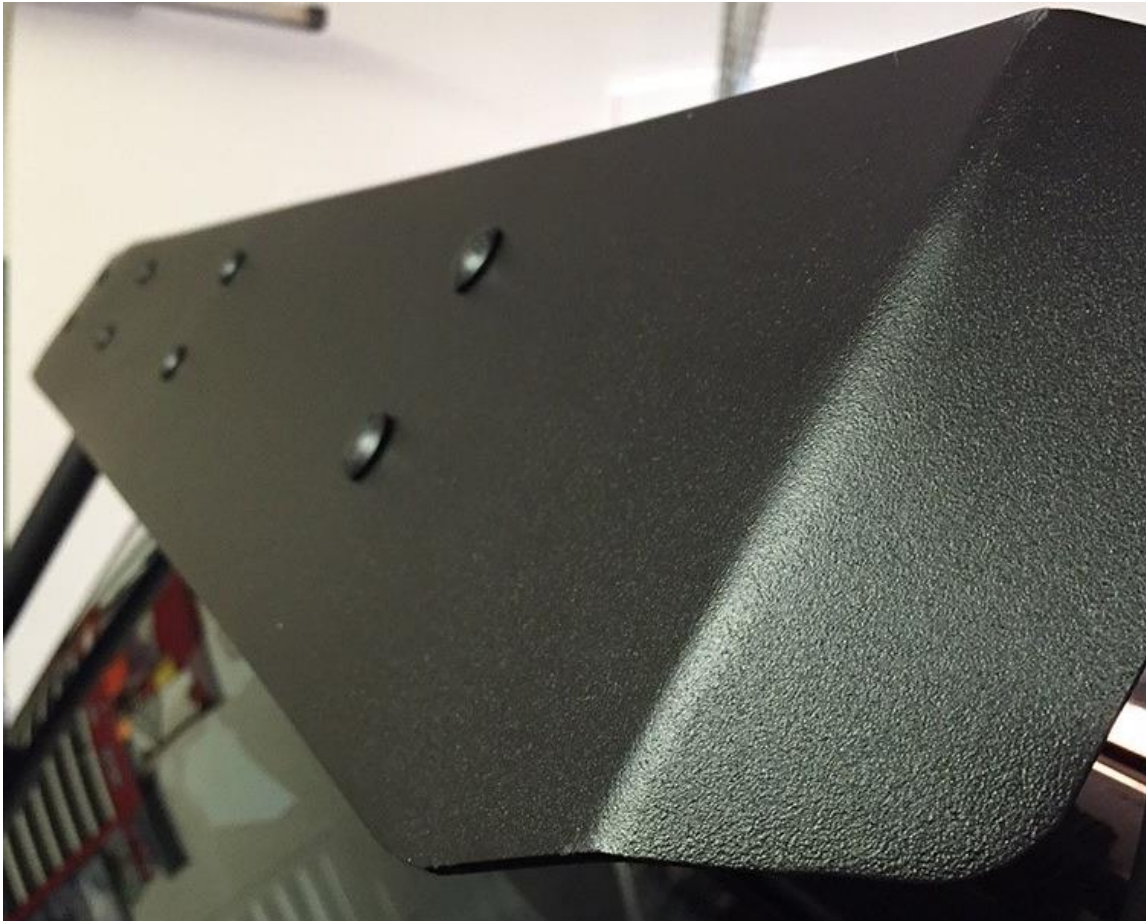

After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 11/09/2017