

**Baja Designs S2 Pro LED Light - Wide Cornering Beam**  
**Installation Guide for Jeep Wrangler '07-'18 4-Door JKU**

**Installation Time:** <1 Hour

**Tools Required:**

- ✓ Allen Wrench
- ✓ Wiring Harness

**Installation Instructions:**

1. Remove the light and hardware from packaging and locate the mount. Thread the bolt and washer through before attaching the mount to the light (Figure A).



Figure A

2. Slide a split-washer onto both side bolts before using to attach mount to light (Figure B).

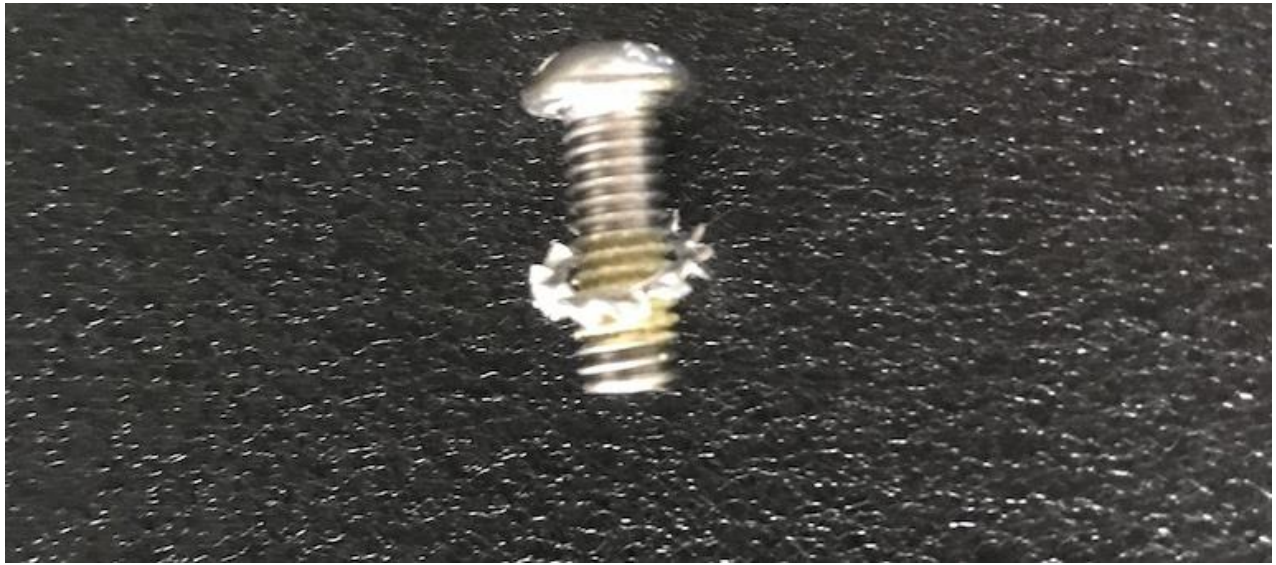


Figure B

3. Thread a bolt through the mount hole into the light housing (Figure C).



Figure C

4. Thread the other bolt through, as well (Figure D).

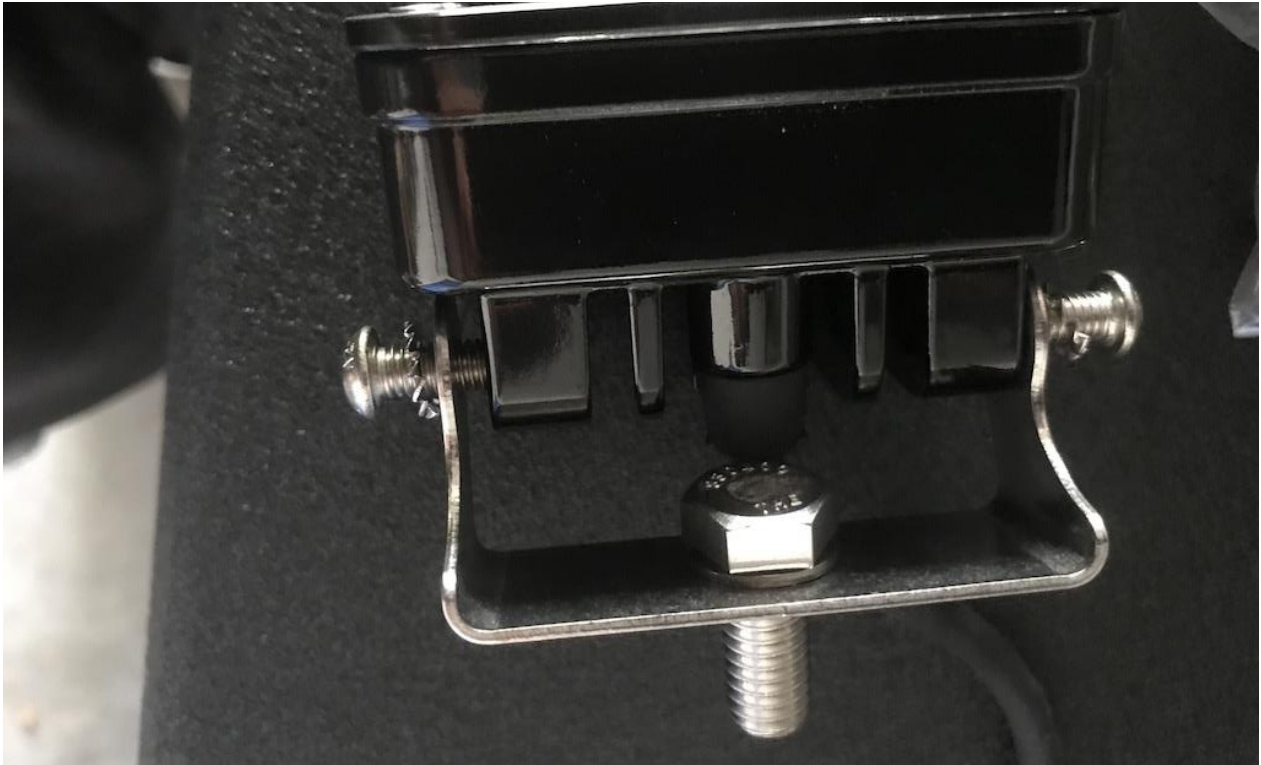


Figure D

5. Tighten the bolts using an Allen wrench (not supplied) (Figure E).



Figure E

6. Attach the mount section of the light to an LED mount (not included) and tighten the supplied nut (Figure F).



Figure F

7. Attach the supplied quick connect to a wiring harness (not supplied) and run the harness to the light mounting location (Figure G).

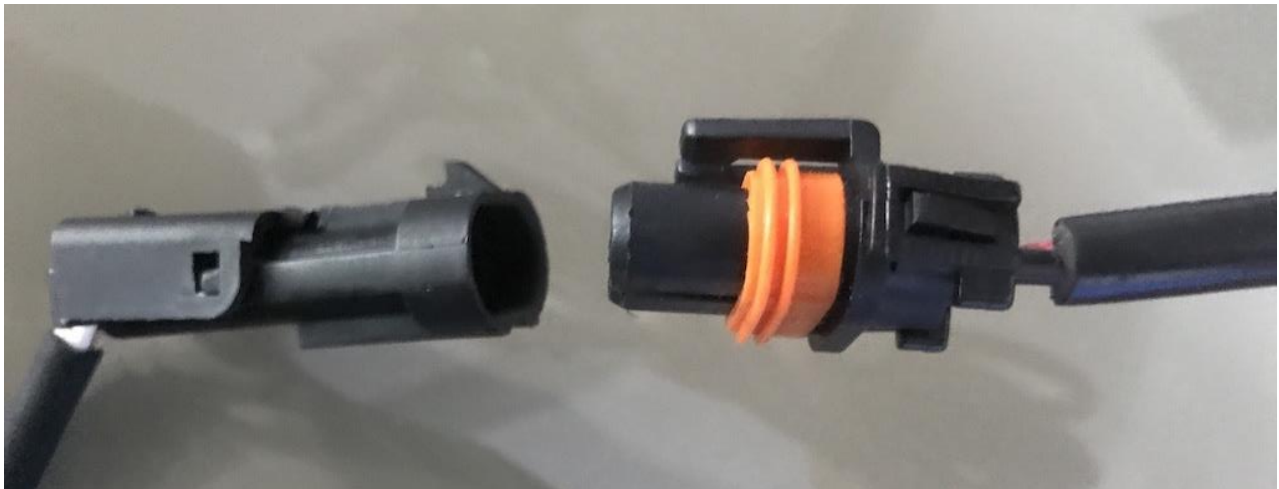


Figure G

8. Connect the light to the wiring harness (Figure H).





Figure H



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 08/26/2018