

KC HiLiTES 6 in. Apollo Pro Halogen Lights - Spot Beam - Pair

Installation Guide for Jeep Wrangler '07-'18 4-Door JKU

Installation Time: 1 Hour

Tools Required:

- ✓ 14mm Socket Wrench

Installation Instructions:

1. Attach the red wire from the included harness to the positive battery terminal (Figure A).



Figure A

2. Attach the black wire from the included harness to the negative battery terminal (Figure B).



Figure B

3. Run the wiring harness into the cab (or other desired switch mounting location) and attach the black wire to the top switch terminal (Figure C).



Figure C

4. Attach the green wire to the middle switch terminal (Figure D).

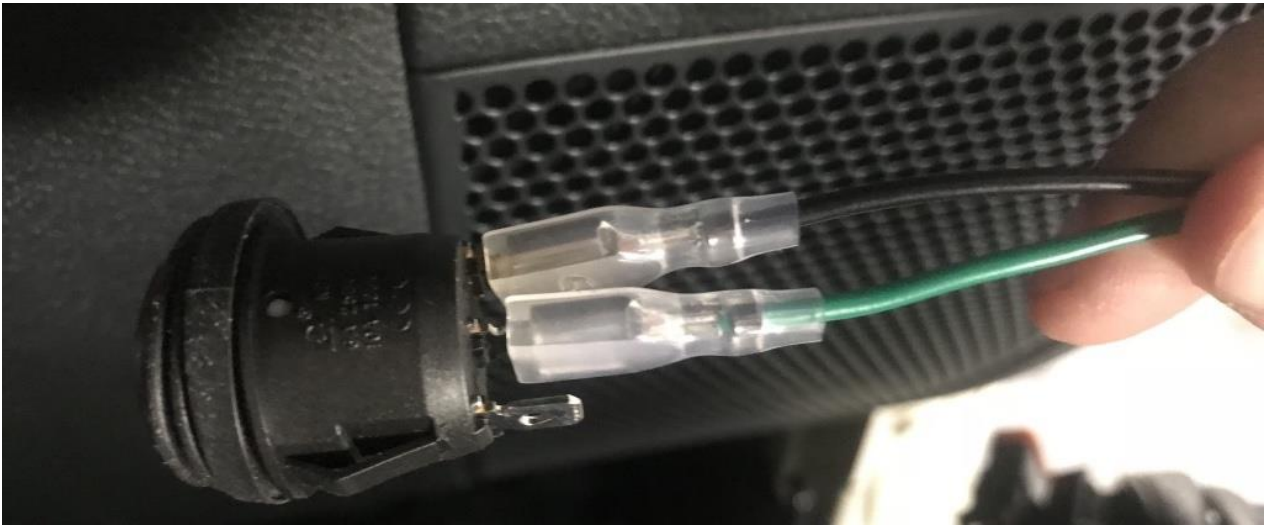


Figure D

5. Attach the white wire to the bottom switch terminal (Figure E).



Figure E

6. Run the wiring harness to the two light mounting locations (Figure F).



Figure F

7. Attach the light to a light mount (not supplied) and tighten using a 14mm socket wrench.
8. Connect the wiring harness to the light (Figure G).



Figure G



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 10/11/2018