

KC HiLiTES 6 in. Black SlimLite Halogen Lights - Spread Beam - Pair

Installation Guide for Jeep Wrangler '07-'18 4-Door JKU

Installation Time: <1 Hour

Tools Required:

- ✓ 13mm Box Wrench

Installation Instructions:

1. Connect the negative (black) wire from the wiring harness to the negative (-) battery terminal (Figure A).

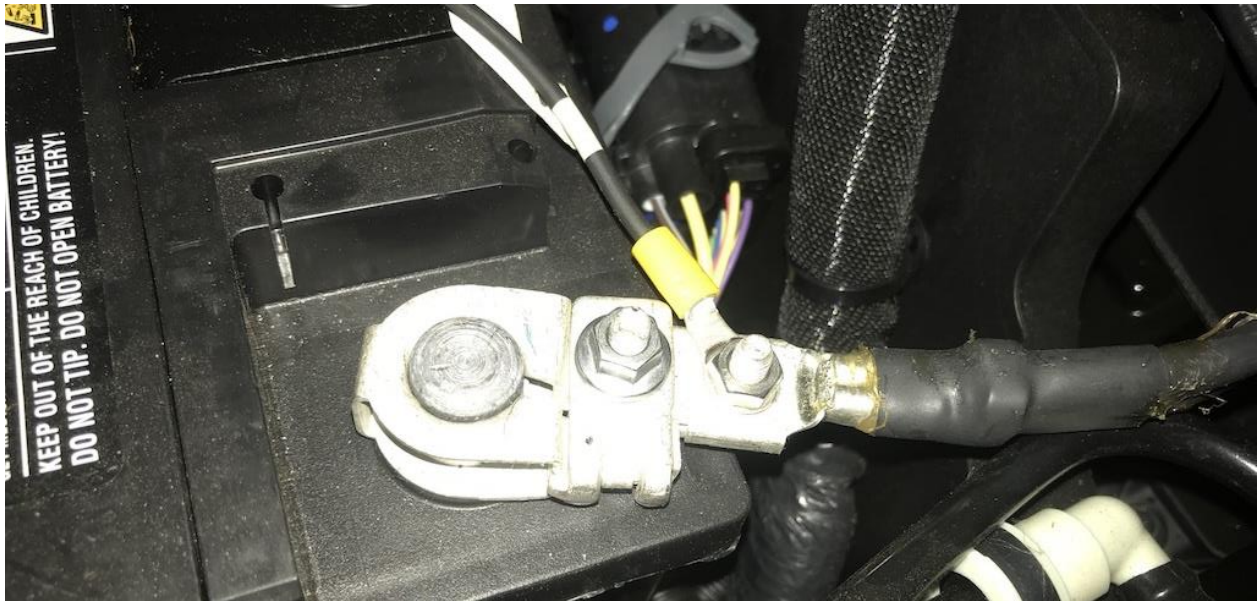


Figure A

2. Connect the positive (red) wire from the wiring harness to the positive (+) battery terminal (Figure B).

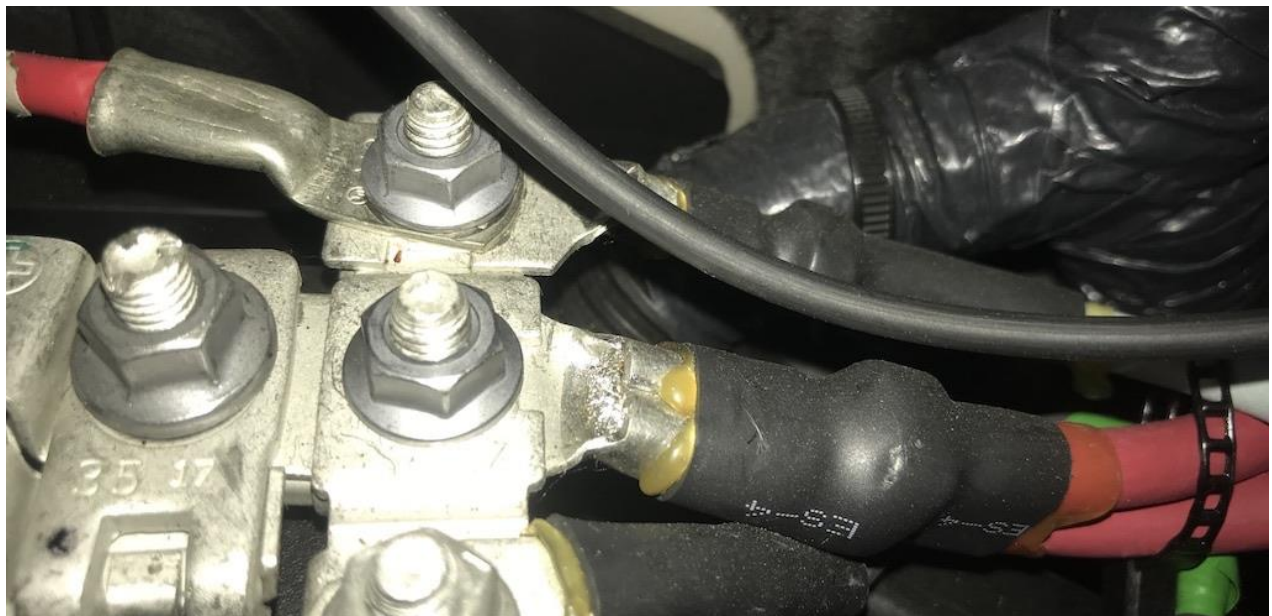


Figure B

3. Run the wiring harness to the switch and connect the white wire to the top terminal (Figure C).



Figure C

4. Connect the green wire to the middle terminal (Figure D).



Figure D

5. Connect the black wire to the bottom (bronze) terminal (Figure E).



Figure E

6. Loosen the light mount using a 13mm box wrench (Figure F).



Figure F

7. Connect the light to a light mounting and tighten the washer down to hold it in place (Figure G).



Figure G

8. Run the wiring harness to the mounted lights (Figure H).



Figure H

9. Connect the wiring harness to the light (Figure I).

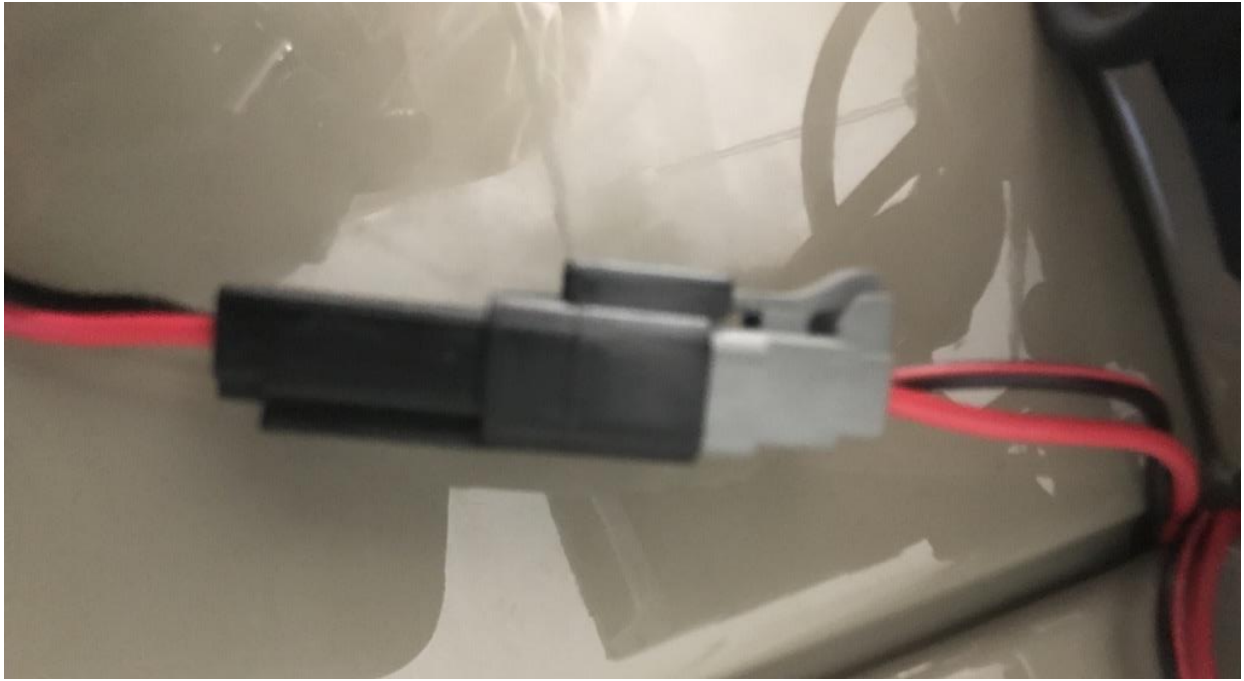


Figure 1

10. Repeat Steps 6-9 for the other light.



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 08/04/2018