

KC HiLiTES 6 in. Apollo Pro Halogen Lights - Driving Beam - Pair

Installation Guide for Jeep Wrangler '07-'18 4-Door JKU

Installation Time: <1 Hour

Tools Required:

- ✓ Box Cutter/Knife
- ✓ 13mm Socket Wrench
- ✓ 14mm Socket Wrench

Installation Instructions:

1. Run the wiring harness's negative wire (black) to the negative (-) terminal of the battery (Figure A).



Figure A

2. Run the wiring harness's positive wire (red) to the positive (+) terminal of the battery (Figure B).



Figure B

3. Run the wiring harness to the location the switch will be mounted and connect the white wire to the top switch terminal (Figure C).



Figure C

4. Run the green wire to the middle terminal of the switch (Figure D).

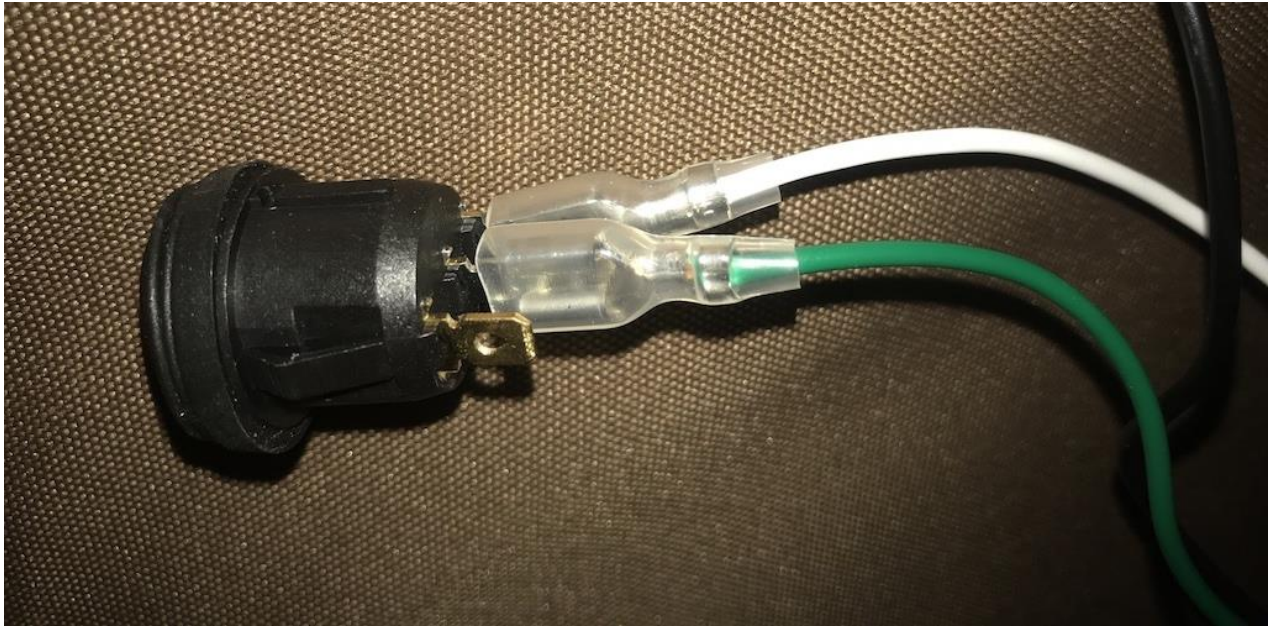


Figure D

5. Run the black wire to the bottom terminal of the switch (Figure E).

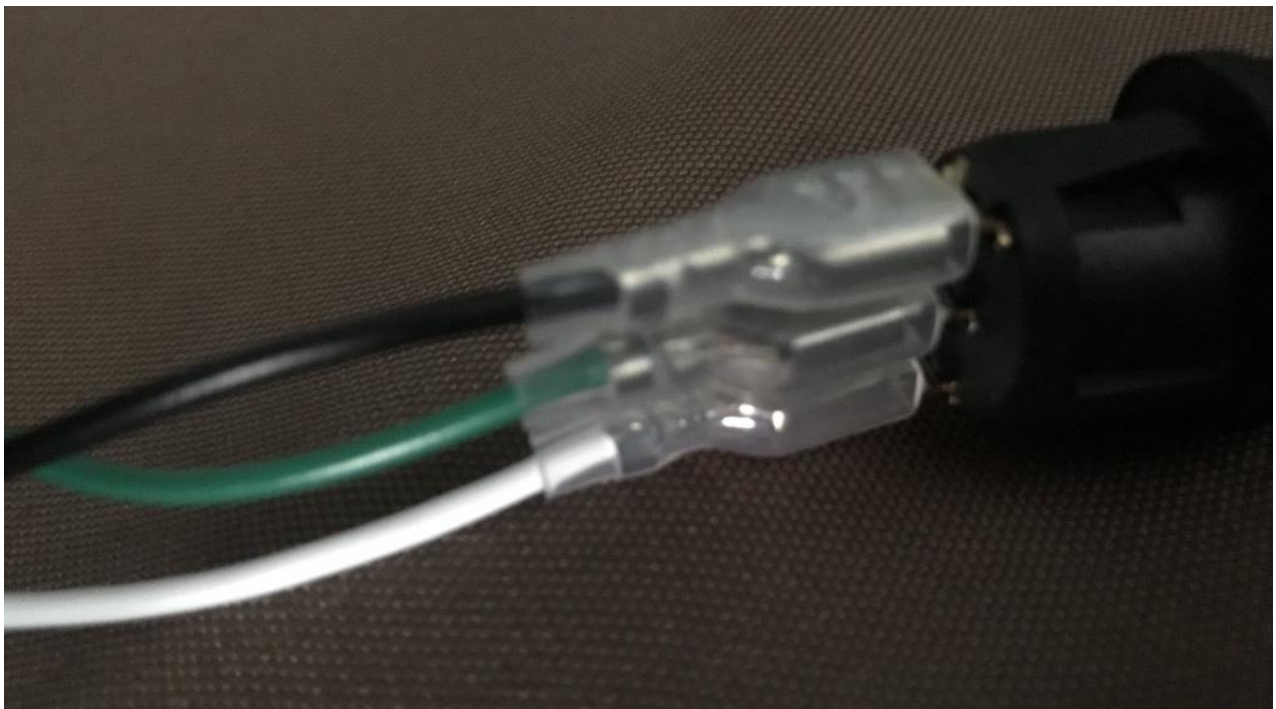


Figure E

6. Remove the nut on the bottom of the light housing using a 14mm socket wrench (Figure F).



Figure F

7. Run the bolt into the mount location and return the nut (Figure G).



Figure G

8. Tighten the light housing bolt using a 13mm socket wrench (Figure H).



Figure H

9. Run the wiring harness to the light mounting location (Figure I).



Figure I

10. Connect the wiring harness to the light connection (Figure J).

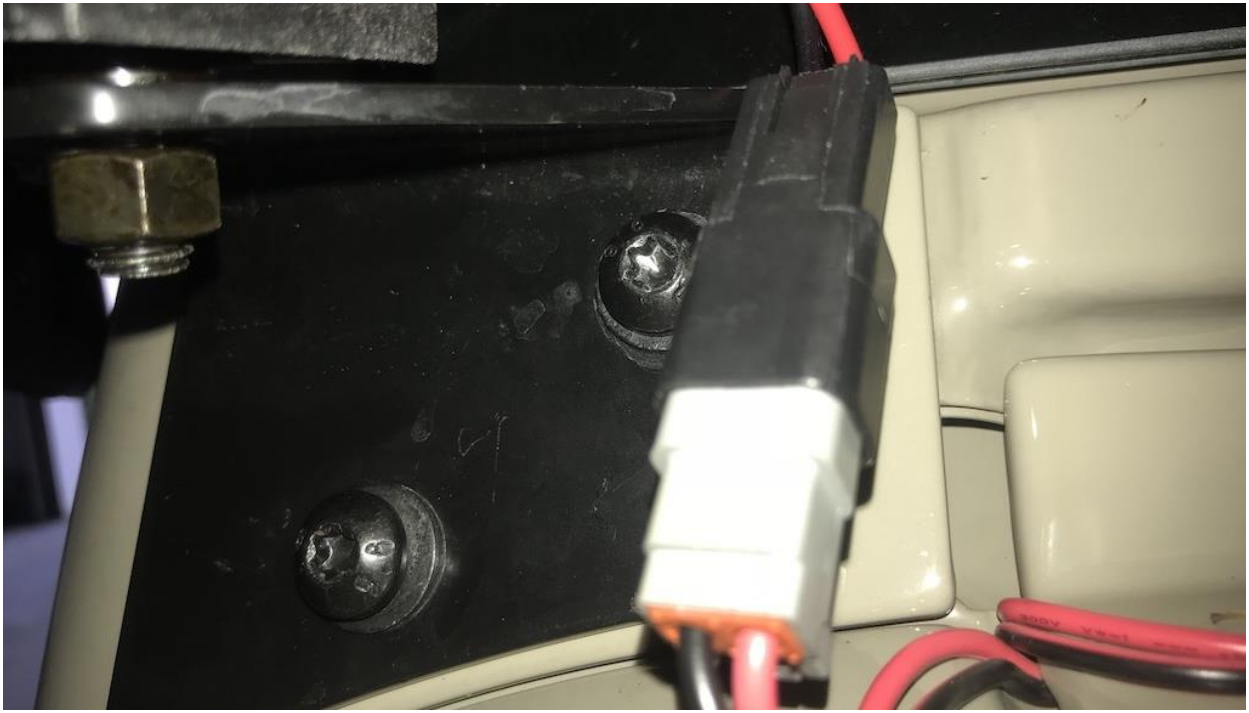


Figure J

11. Repeat Steps 6-10 for the second light.



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 08/14/2018