

Master Top No-Drill Windshield Header - Installation Guide

Installation Time: 20 Minutes

Tools Required:

- ✓ Utility Knife (Razor Blade) to open the product box.

There is a total of 5 parts. 1 – Windshield Header, 2 – Header Knobs and 2 Header Knob Plates

Before install



Installation Instructions:

1. Move the sun visors down and to the side before installing the MasterTop Windshield Header.





2. Once the sun visors are moved, place the MasterTop Windshield Header just behind the windshield and over the weather stripping. Each Knob Base should be right over the top of a footman loop.



3. With the MasterTop Windshield Header in place you will take each Header Knob and place it through the hole of a Header Knob Plate with the angled end facing the Header Knob.




4. With the Header Knob in the Header Knob Plate slide it through the driver side footman loop and thread it through the MasterTop Windshield Header Knob Base. Repeat the same process on the passenger side. They just need to be hand tight.





5. When done, the MasterTop Windshield Header should look like this on the driver and passenger sides.

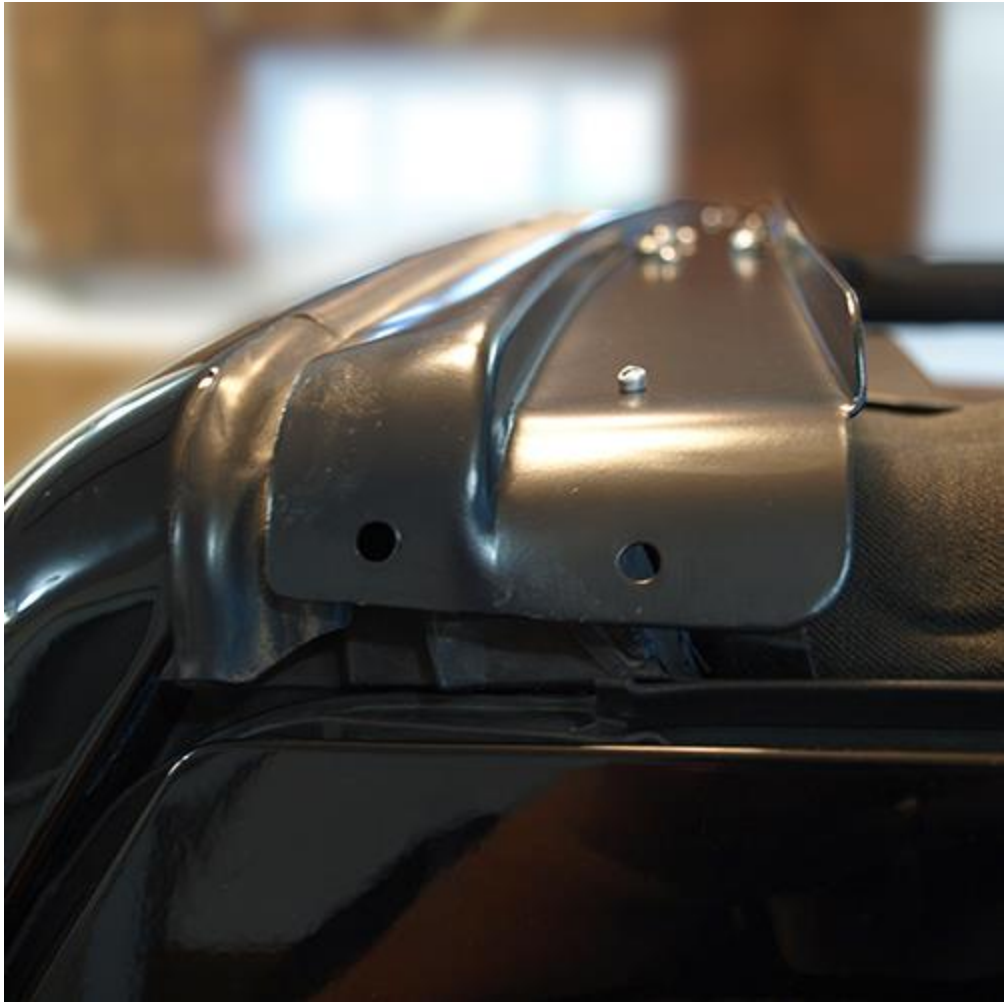



After Install



Installation Instructions Written by ExtremeTerrain Customer Brian Voelzke 06/15/2018