

Omix-ADA Front Wiper Arm (97-06 Wrangler TJ)

Installation Time: 30 Minutes

Tools Required:


- ✓ Flat head screw driver

Installation Instructions:

1. Before, the arm was bent causing the wiper blade not to make contact with the windshield in some areas



2. Lift the arm

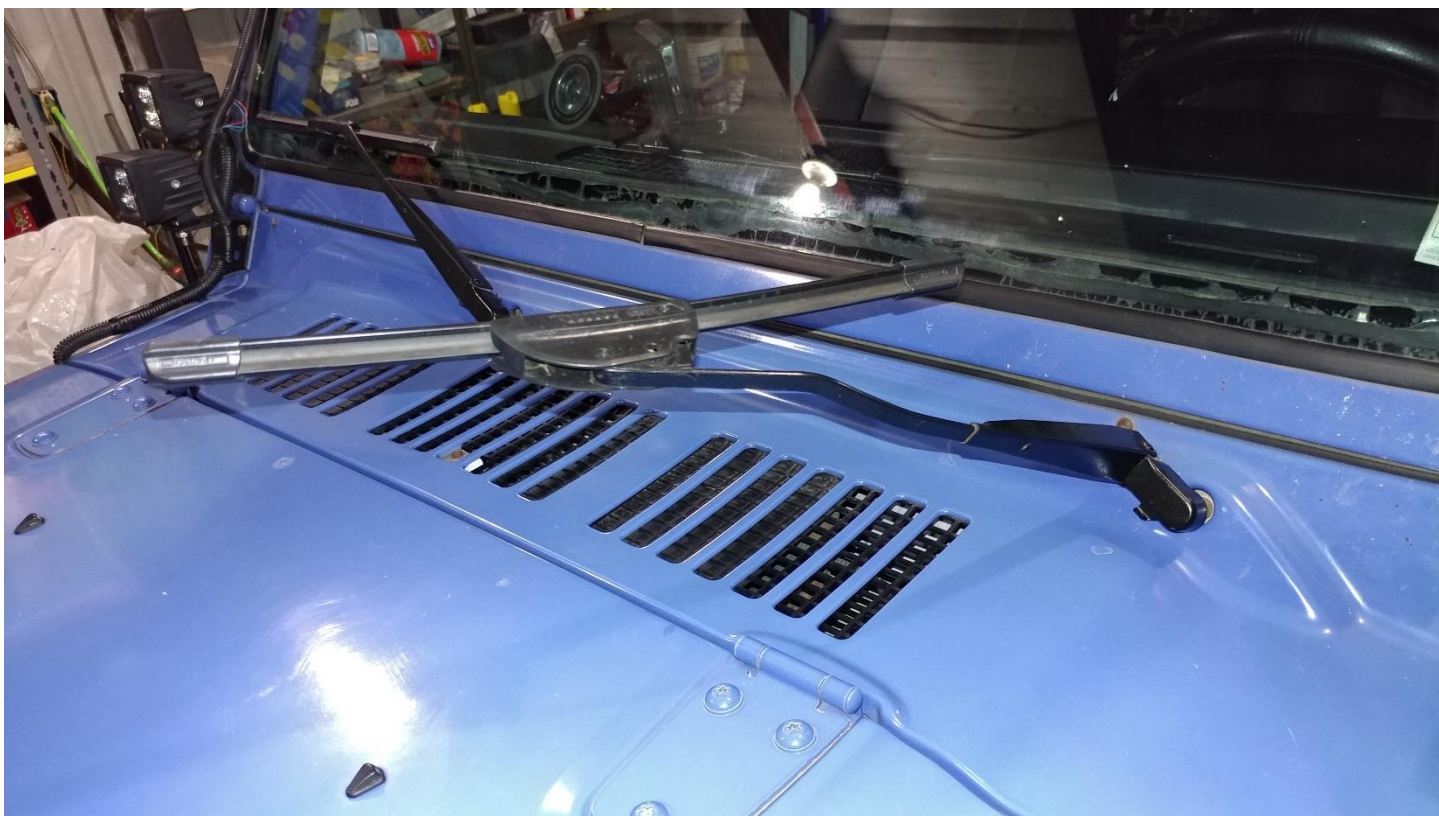

3. Pull the tab down from the lower side of the wiper arm where it attaches to the Jeep



4. Lift straight out



5. Using a flat head screw driver push down on the tabs shown



6. Attach the new wiper arm to the wiper blade assembly



7. A “click” should be heard once the wiper arm is fully inserted



8. With the wiper arm folded



9. Pull the tab at the lower end of the arm



10. The wiper arm may have to be pushed on and pull off multiple times so that the correct position can be found. The wiper arm should slide on to the splines with minimal force.



11. Once the proper angle is found push the tap up while the arm is bent



12. Installation complete

