

## Prosport Digital Volt Gauge - Electrical

### Installation Guide for Jeep Wrangler '07-'16 2-Door JK

**Installation Time:** 1 Hour

**Tools Required:**

- ✓ Box Cutter/Knife
- ✓ Splicers
- ✓ Terminal Rings

**Installation Instructions:**

1. Carefully open the package using a box cutter or knife (Figure A) and ensure the hardware is included and undamaged.



Figure A

2. Remove the wiring harness from packaging (Figure B).

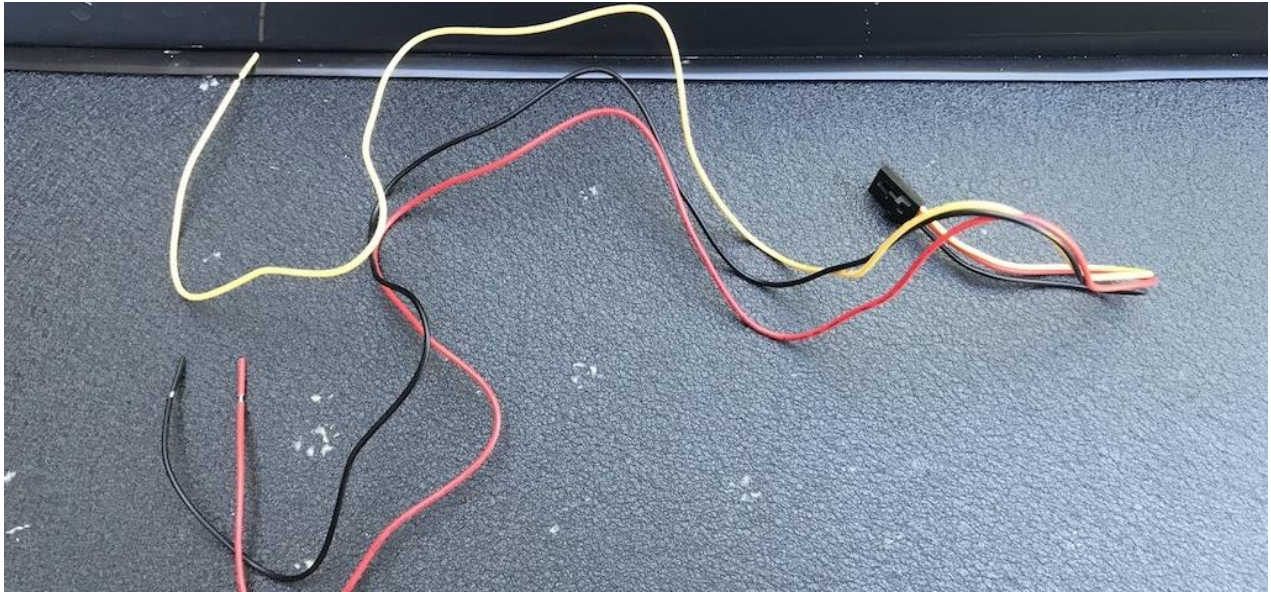


Figure B

3. Crimp a terminal ring to the red wire (positive (+)) (Figure C).



Figure C

4. Crimp a terminal ring to the black wire (ground (-)) (Figure D).



Figure D

5. If wanting the gauge to stay on continually, splice the accessories wire (yellow) to the positive (red) wire, otherwise splice the accessories wire (yellow) to an auxiliary 12v source.
6. Turn the gauge over to locate the wire input (Figure E).



Figure E

7. Place the wire input in the backside of the gauge (Figure F).



Figure F



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 06/04/2018.