

Putco 4 in. Luminix High Power Block LED Light
Installation Guide for Jeep Wrangler '07-'16 2-Door JK

Installation Time: <1 Hour

Tools Required:

- ✓ Box Cutter/Knife
- ✓ Crescent Wrench
- ✓ 7/16" Wrench
- ✓ 3/16" Allen Wrench

Installation Instructions:

1. Carefully open the package using a box cutter or knife (Figure A) and ensure the hardware is included and undamaged.



Figure A

2. Pull out the wiring harness supplied with the LED (Figure B).



Figure B

3. Connect the red (positive (+)) wire to the positive (+) battery terminal using a crescent wrench (Figure C).



Figure C

4. Connect the black (negative (-)) wire to the negative (-) battery terminal using a crescent wrench (Figure D).

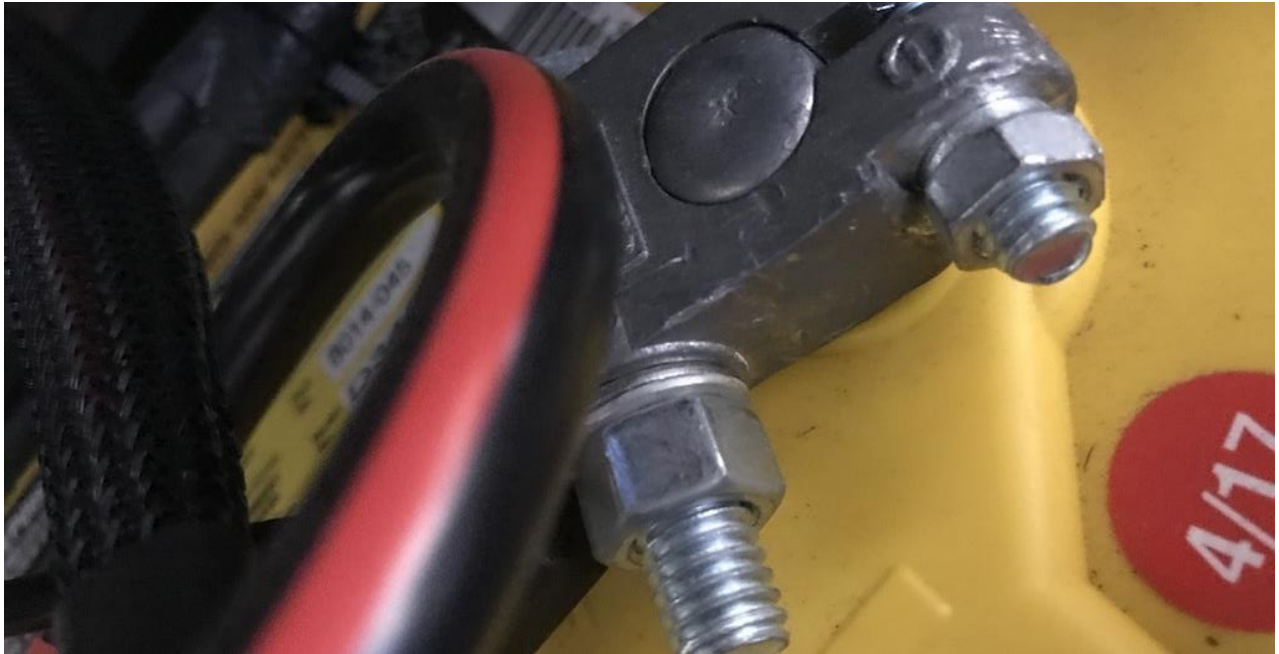


Figure D

5. Run the three switch wires to the desired switch location and connect to switch.
6. Run the wiring harness connector to the location the LED will be mounted (Figure E).



Figure E

7. Unscrew the locknut and washer from the LED mount using a 7/16" wrench (Figure F).



Figure F

8. Mount the LED and replace the washer and locknut using a 7/16" wrench (Figure G).



Figure G

9. Tighten the side bolt at the tilt desired for the LED using a 3/16" Allen wrench and a 7/16" wrench (Figure H).



Figure H

10. Plug the light into the wiring harness connector (Figure I).



Figure I



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 06/07/2018.