Putco LED Dome Light

Installation Guide for Jeep Wrangler '07-'16 2-Door JK

Installation Time: <1 Hour

Tools Required:

- ✓ Box Cutter/Knife
- ✓ Plastic Trim Tool
- ✓ Flathead Screwdriver (optional)

Installation Instructions:

1. Carefully open the package using a box cutter or knife (Figure A) and ensure the lights are included and undamaged.



Figure A

2. Using a plastic trim tool, pop the front of the light cover free (Figure B).

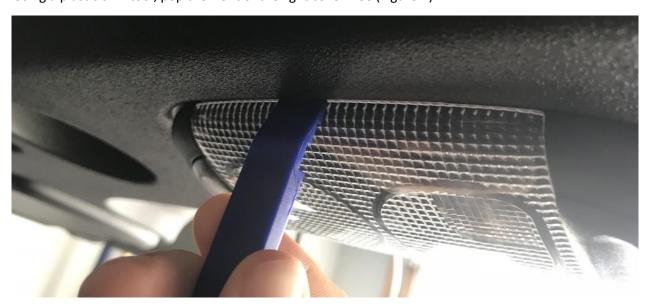


Figure B

3. Using a plastic trim tool, pop the rear of the light cover free (Figure C).

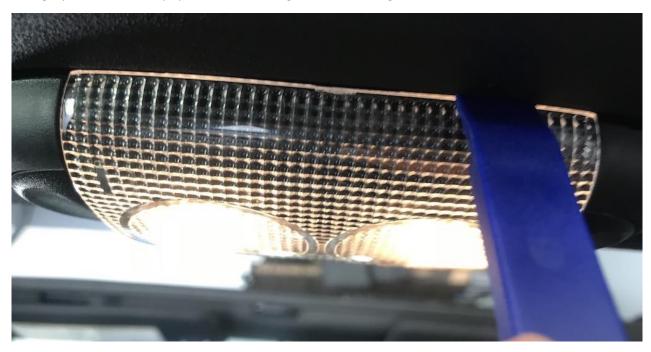


Figure C

4. Remove the light cover completely (Figure D).



Figure D

5. Remove the interior light bulbs (Figure E). *Note: If having trouble removing bulbs, use a small flathead screwdriver to very gently help guide the bulbs out of the notches.*



Figure E

6. Place the new Putco LED light bulbs in each light (Figure F).



Figure F

7. Open a door to ensure each light is correctly placed and lights up (Figure G).



Figure G

8. Return light cover.



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 04/19/2018