

Jeep Wrangler 7" Headlight Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-357-9261
Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)
Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.

KIT CONTENTS:	
Description	Qty.
Driver Side Light	1
Passenger Side Light	1
Adaptor Harness	2

Tools Needed

- flat head screw driver
- Torx Head Socket

Bumper Grille Installation

1. Remove bumper grille from packaging. Check to see if all parts from above table are included.
2. Remove grille from jeep by removing 6 plastic fasteners from top of grill, removing marker light harnesses, and pulling straight out on grille.
3. Remove factory headlights by removing 4 Torx head screws and retaining ring around each headlight. Unplug headlight. (Set retaining ring and screw aside, these will be used to reinstall Putco headlights)
4. If jeep requires H13 bulbs, adapter harness will need to be installed into factory harness before light is installed.
5. Install Putco light into jeep by plugging in light into harness, using factory retaining ring and screws. Driver side light will be installed in the orientation shown in Figure 1. Passenger side will be in the opposite orientation.

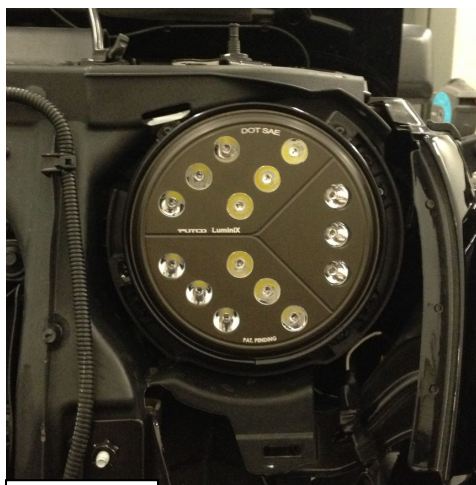


Figure 1

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.