

Raxiom 14 in. C3 LED Light Bar

Installation Guide for Jeep Wrangler '07-'18 4-Door JKU

Installation Time: <1 Hour

Tools Required:

- ✓ 10mm Socket
- ✓ Socket Wrench

Installation Instructions:

1. Set the supplied wiring harness out (Figure A).



Figure A

2. Attach the black wire to the negative battery terminal (Figure B).



Figure B

3. Attach the red wire to the positive battery terminal (Figure C).

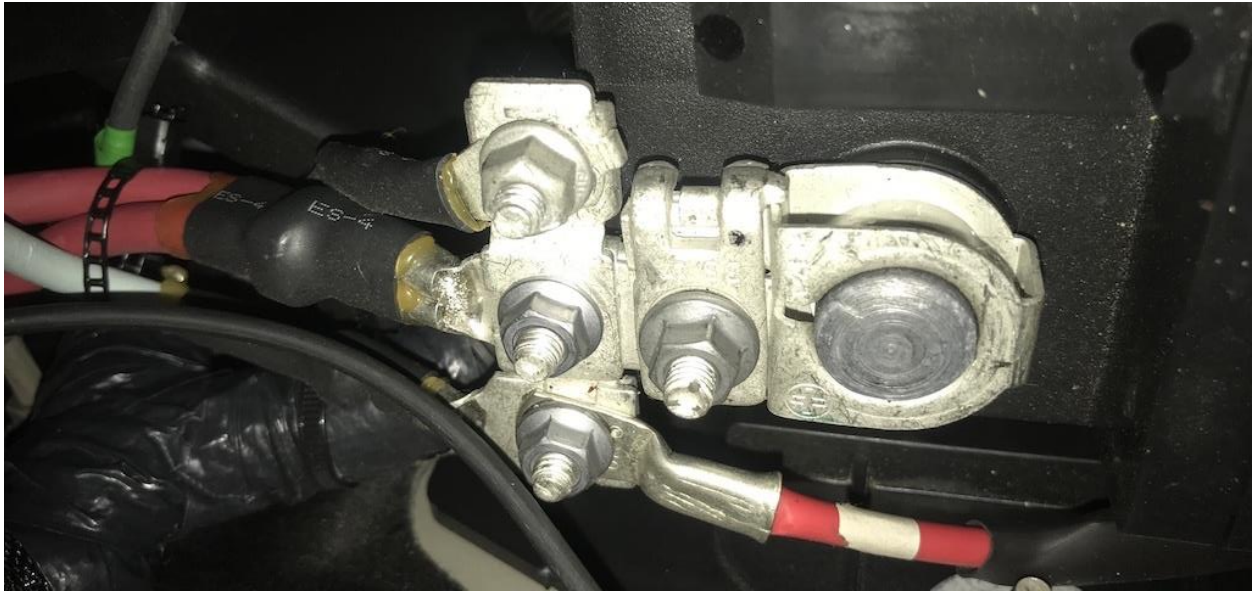


Figure C

4. Run the pre-wired light switch into the cab (Figure D).



Figure D

5. Place the supplied stand leg in place alongside the LED (Figure E).



Figure E

6. Thread a supplied bolt through the stand leg and into the LED and tighten using the supplied Allen wrench (Figure F).

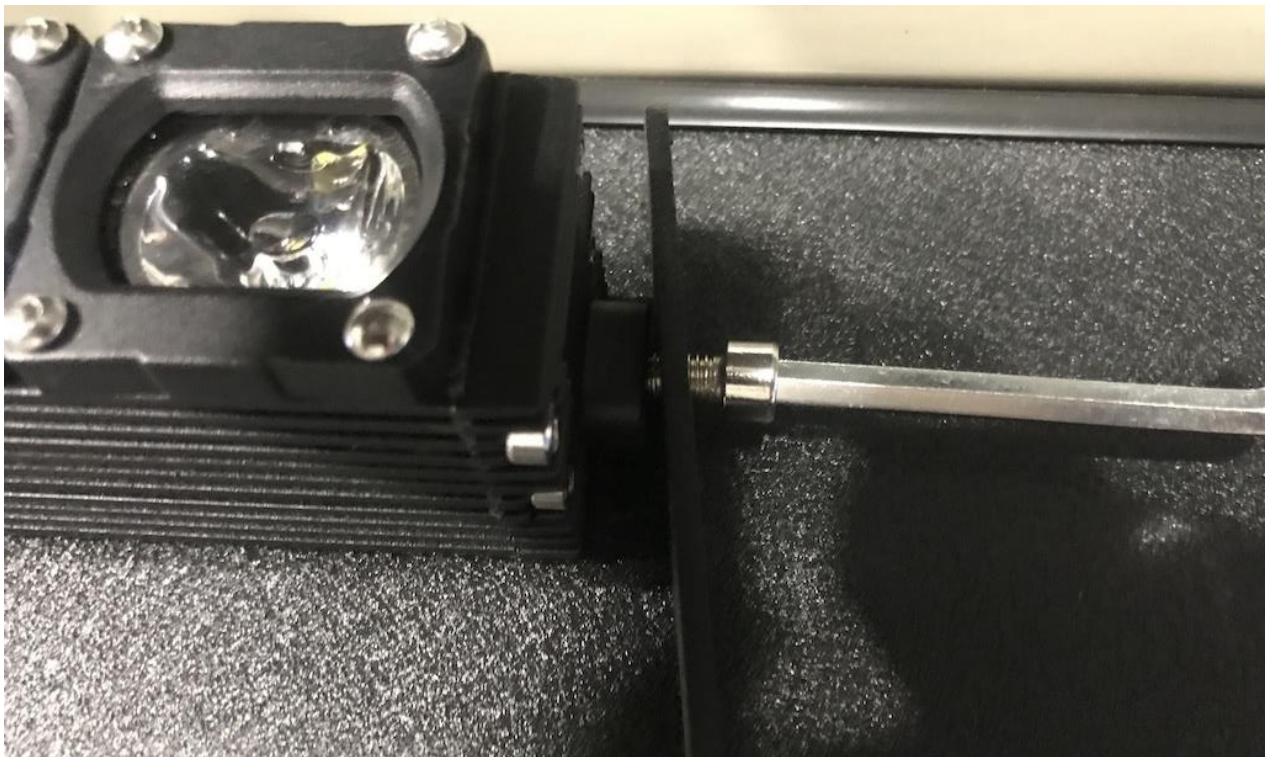


Figure F

7. Run the light harness wire to the LED mounting location (Figure G).

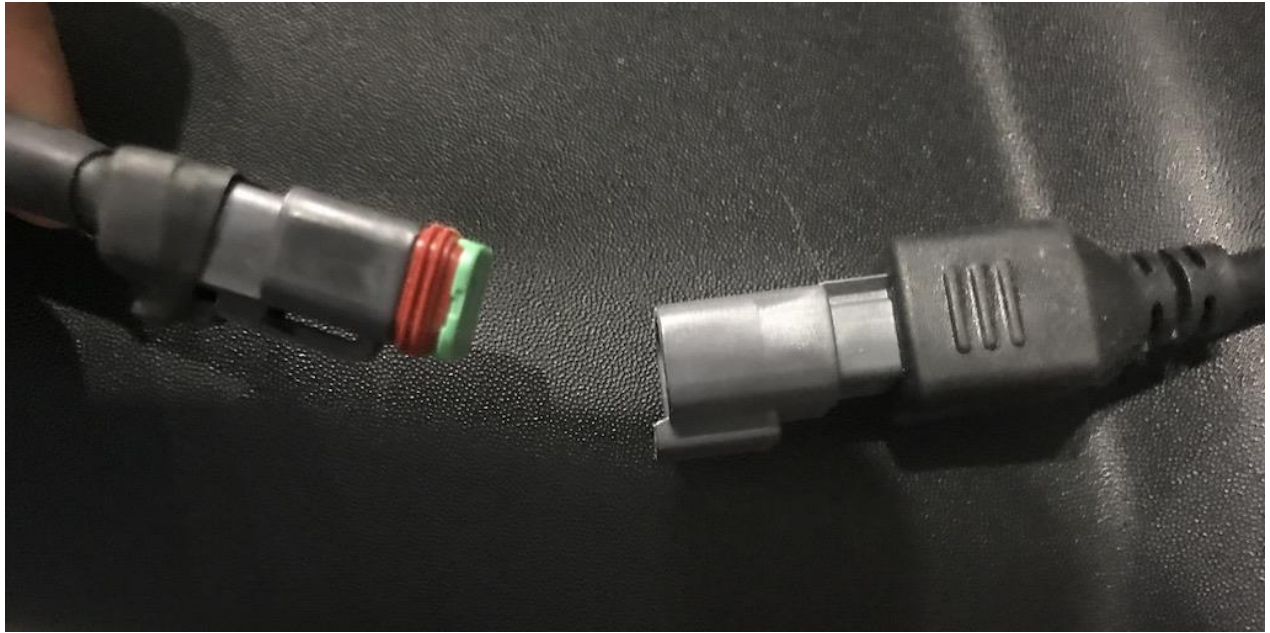


Figure G

8. Connect the LED to the light harness (Figure H).



Figure H



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 08/30/2018