

Installation for RedRock 4x4 3 in. Curved Round Side Step Bars - Textured Black (2018 Jeep Wrangler JL 4 Door)

Installation Time: 3 hours (one person)

Tools Required:

- ✓ Ratchet
- ✓ Socket
- ✓ Wrench

Not Required but helps:

- ✓ Creeper
- ✓ Knee Pads

Installation Notes

Make sure all parts are available. Separated all the pieces. Yellow/Green bags are for driver side. Clear bags are for passenger side.

Installation Instructions:

1. Instruction Placed front, center and rear brackets and step for driver side next to vehicle.



2. Placed front, center and rear brackets and step for passenger side next to vehicle.



3. Separated all the washers, bolts and nuts.



4. Screw mounting bracket for driver/front with 8mm Hex Bolt, 8mm Lock Washer and 8mm Flat washer but do not tighten.



- Screw bracket with two 6mm Hex Bolts, four 6mm Flat Washers and two 6mm Nylon Lock Nuts. Do not tighten.




- Screw both together with one 10mm Hex Bolt, two 10mm Flat Washers, and one 10mm Nylon Lock Nut with 5/8 socket and wrench. Do not tighten.



7. Do the same for driver center, driver rear, passenger front, passenger center, passenger rear and make sure not to tighten bolts.
8. Put driver step/sidebar on bracket and screw bolt with ½ socket. Do not tighten.



9. Put passenger step/sidebar on bracket and screw bolt with ½ socket. Do not tighten.
When all bolts are screwed and the step and brackets fit well together, start tightening bolts.

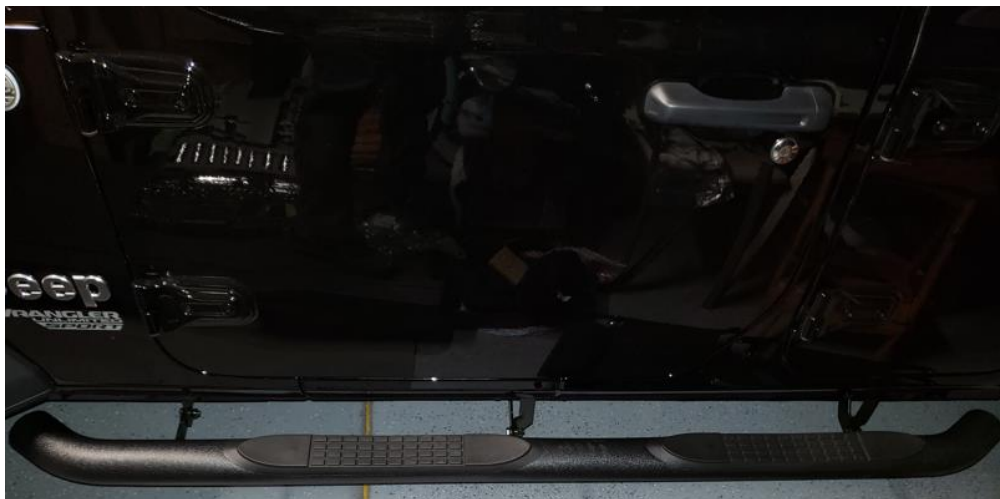

Instructions Written by ExtremeTerrain Customer Oliver R. 10/16/2018