## Rigid Industries D-Series LED Cube Lights - 60 Deg. Diffused - Fog Beam - Pair Installation Guide for Jeep Wrangler '07-'16 2-Door JK

Installation Time: <1 Hour

## **Tools Required:**

- √ Box Cutter/Knife
- ✓ 13mm Wrench
- ✓ Allen Wrench

## **Installation Instructions:**

1. Carefully open the package using a box cutter or knife (Figure A) and ensure the hardware is included and undamaged.



Figure A

2. Remove the wiring harness from the box (Figure B).



Figure B

3. Run the positive (red (+)) wire to the positive (+) battery terminal (Figure C).



Figure C

4. Run the negative (black (-)) wire to the negative (-) terminal (Figure D).



Figure D

- 5. Run the other end of the wiring harness to the light mounting location and the switch wiring to the switch mounting location.
- 6. Place the LED mounting bracket inside the underside of the LED (Figure E).



Figure E

7. Place two locknuts (supplied) inside the mounting bracket and thread a bolt (supplied) into each side (Figure F).

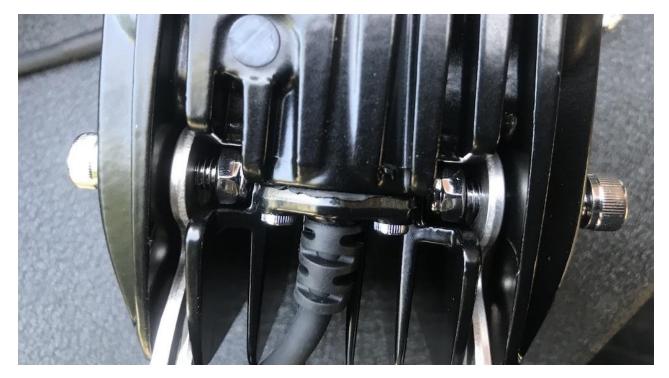


Figure F

8. Using an Allen wrench, tighten each bolt (Figure G).



Figure G

9. Slide a mounting bolt and washer (supplied) into the LED mounting bracket hole (Figure H).



Figure H

10. Place the LED on the light mount and tighten the supplied nut using a 13mm wrench (Figure I).



Figure I

11. Plug the LED wiring into the wiring harness connector (Figure J).



Figure J

12. Repeat Steps 6-11 on the other LED.



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 06/10/2018