

Rigid Industries D-Series LED Cube Lights - Spot Beam - Pair

Installation Guide for Jeep Wrangler '07-'16 2-Door JK

Installation Time: <1 Hour

Tools Required:

- ✓ Box Cutter/Knife
- ✓ Crescent Wrench/Allen Wrench

Installation Instructions:

1. Attach the negative (-) wire of the supplied wiring harness to the negative (-) battery terminal (Figure A).

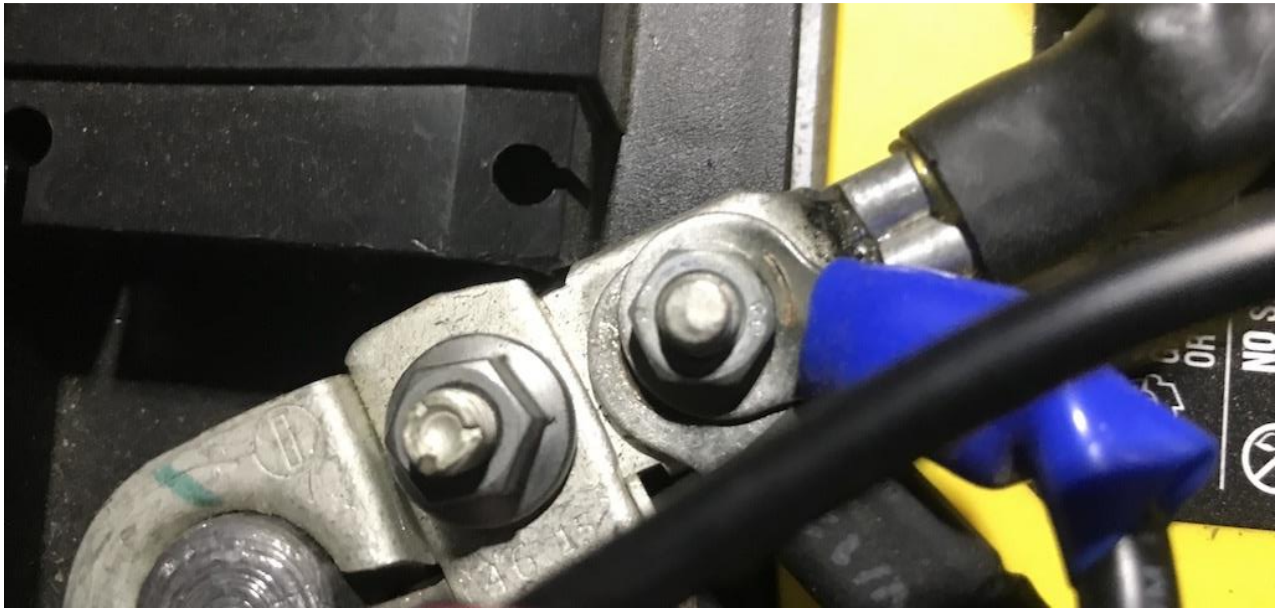


Figure A

2. Attach the positive (+) wire of the supplied wiring harness to the positive (+) battery terminal (Figure B).

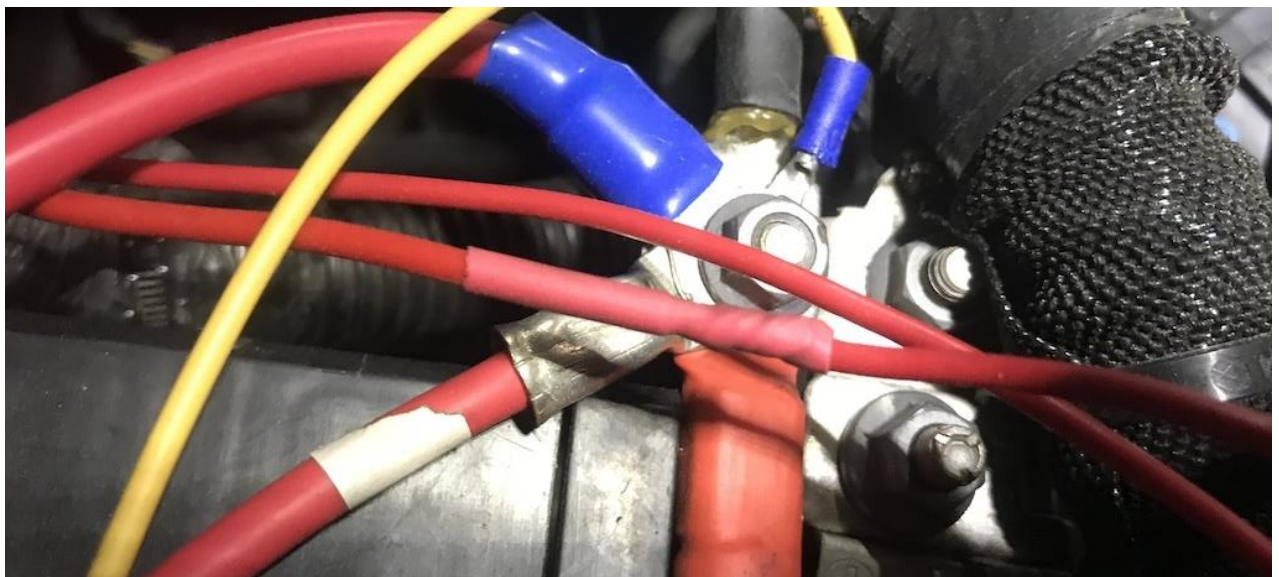


Figure B

3. Run the switch wires to the switch internally and run the connectors to the LED mounting locations (Figure C).



Figure C

4. Connect the LED to a light mount (sold separately) using an Allen wrench or crescent wrench (Figure D).



Figure D

5. Position the light path and then tighten down the hardware to hold the LED into position (Figure E).



Figure E

6. Plug the LED light into the wiring harness connector (Figure F).



Figure F

7. Repeat Steps 5-7 for the other LED.



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 06/13/2018