

Rugged Ridge Soft Top Storage Boot - Diamond Black

Installation Guide for Jeep Wrangler '07-'18 4-Door JKU

Installation Time: <1 Hour

Tools Required:

- ✓ Box Cutter/Knife

Installation Instructions:

1. Utilizing a box cutter or knife, carefully open the packaging, ensuring not to accidentally cut the storage boot fabric (Figure A).

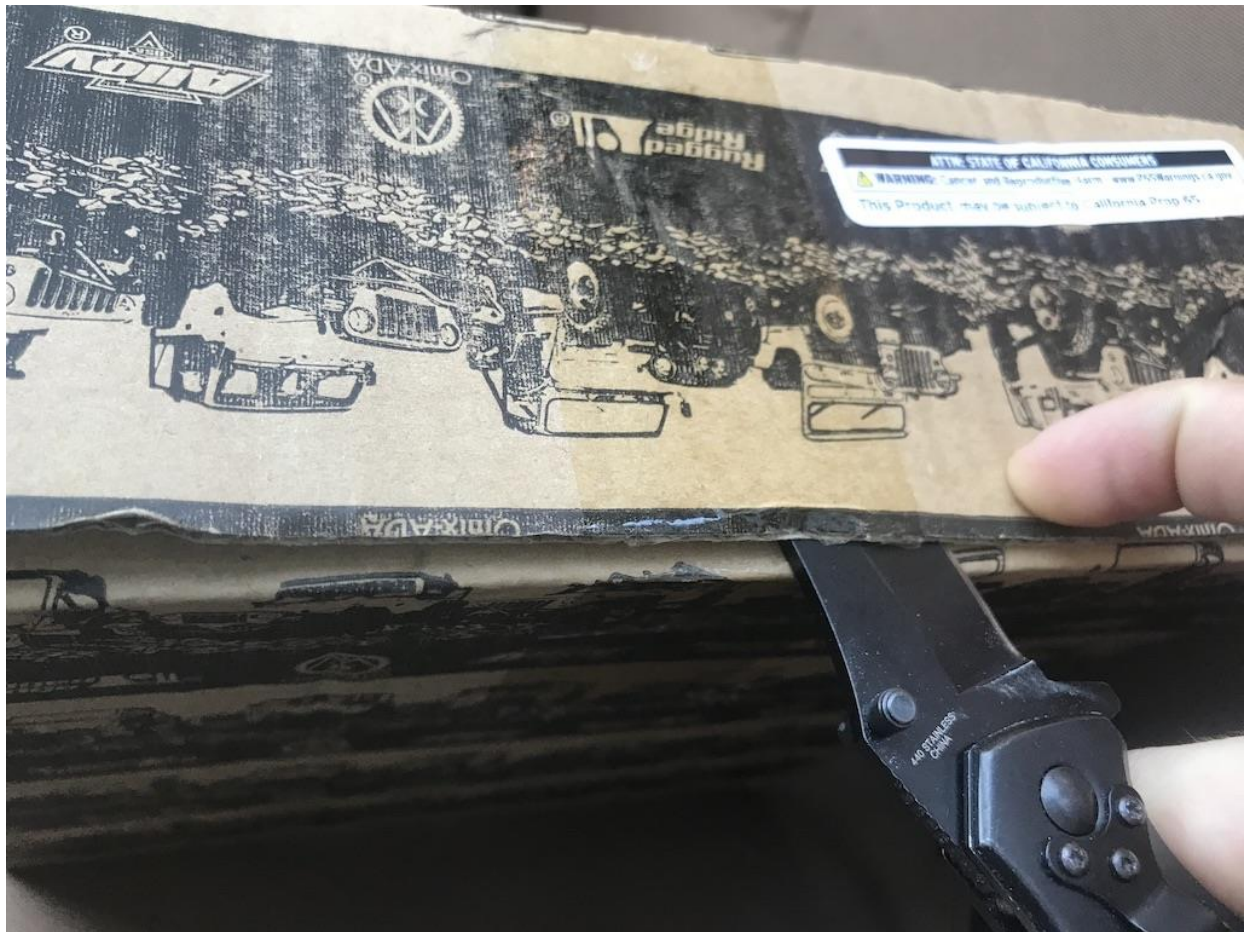


Figure A

2. Lower the soft top entirely and lay the storage boot in the sun to warm up the material (to make it more flexible for the first use) (Figure B).



Figure B

3. Lay the storage boot over the soft top (Figure C).



Figure C

4. Align the two zippers at the top of the center section (Figure D).



Figure D

5. Zip the entire center section up (Figure E).



Figure E

6. Pull the driver's side to the edge of the tub and secure the boot under the tub lip (Figure F).



Figure F

7. Repeat Step 5 on the passenger's side (Figure G).



Figure G

8. Fasten the straps around the sport bar and tighten down.



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 06/22/2019