

Rugged Ridge All Terrain Double X Striker

(Item # J20874, Rugged Ridge 11542.13)

Installation Time: 1 Hour

Tools Required:

- ✓ Ratchet
- ✓ Ratchet Extension
- ✓ ¾ Socket
- ✓ 13mm Socket
- ✓ Phillips Screw Driver




Inside the Box:

- ✓ Double X Striker
- ✓ M8 Bolt (8)
- ✓ M8 Washer (16)
- ✓ M8 Lock Nuts (8)



Installation Instructions:


1. Remove bumper if previously installed. Make sure to disconnect the fog light wiring, and slide the bumper off the frame. See below for bolt locations.

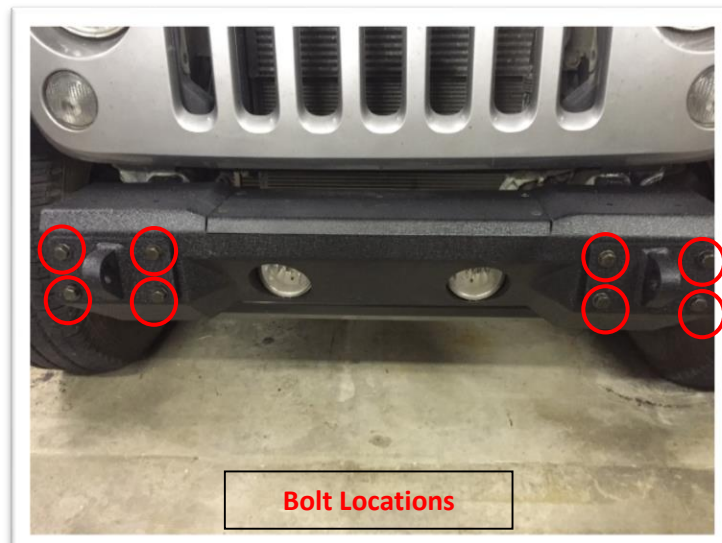


2. Position the double x striker on the bumper aligning all of the predrilled holes. Attach the top portion using the M8 hardware provided.



3. Fasten the d-ring portion of the double x striker and bumper to frame rails using the M12 hardware and nut plates. Tighten them evenly.

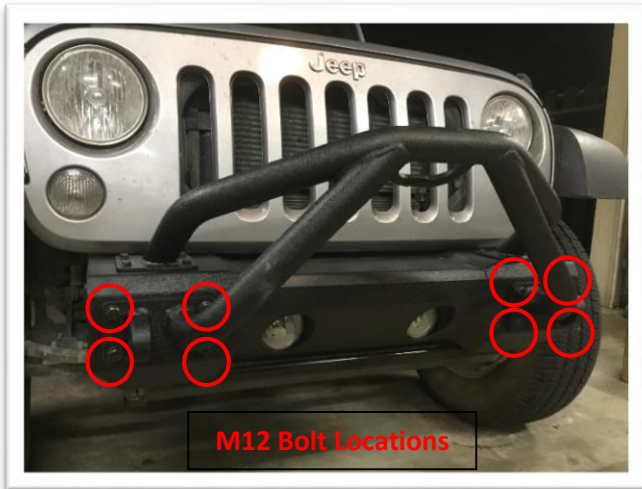

4. Installation Complete

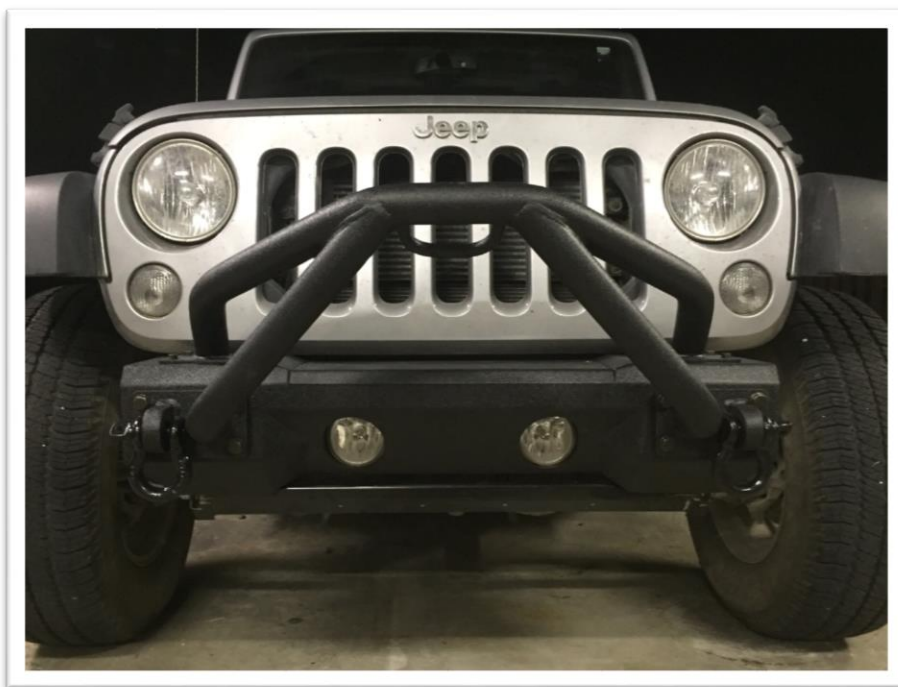

Installation Instructions Written by ExtremeTerrain Customer Lazaro Gomez 12/1/2015