

Rugged Ridge Roll Bar Top - Black Diamond (97-06 Wrangler TJ)

Installation Time: 60 Minutes

Tools Required:

✓ None


Rugged Ridge No Drill Windshield Channel (97-06 Wrangler TJ) Item J13397 MPN# 13308.04 REQUIRED to complete the installation

Installation Instructions:

1. After soft top or hardtop removed with the Rugged Ridge No Drill Windshield Channel installed



2. Start by laying the Rugged Ridge Roll Bar Top over the roll bars and pressing in the front seam. It will not stay.

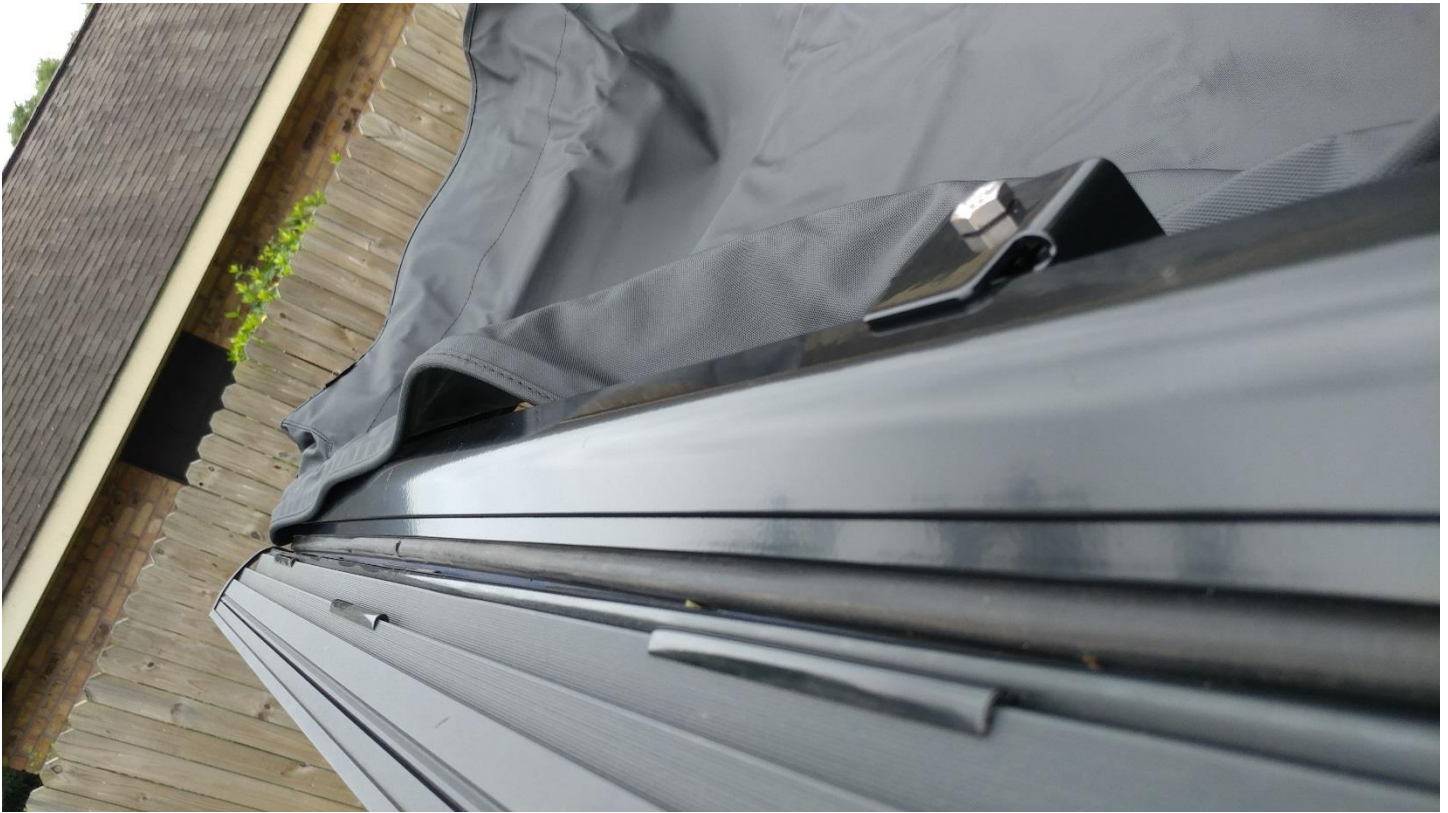

3. Locate and insert the provided hooks. On the rear of the Jeep.



4. Loosely install the rear straps to apply pressure to the front seam.



5. Complete the front seam.



6. Secure the front Velcro straps around the door surround and tuck the plastic portion into the door surround just like the factory soft top.



7. The loose portion would be for an installation without the door surrounds.



8. It can be tucked away.



9. Secure the outer straps around the center roll bar.



10. Snug the rear straps.



11. Installation complete

