

Rugged Ridge All Terrain Stubby Bumper Ends

(Item # J20872, Rugged Ridge 11542.23)

Installation Time: 45 Minutes

Tools Required:

- ✓ Ratchet
- ✓ ¾ Socket
- ✓ Wrench




Inside the Box:

- ✓ Stubby End (2)
- ✓ M12 Hex Bolt (6)
- ✓ M12 Lock Nut (6)
- ✓ M12 Washer (12)




Installation Instructions:

1. The bumper should be installed on vehicle prior to the stubby end installation.

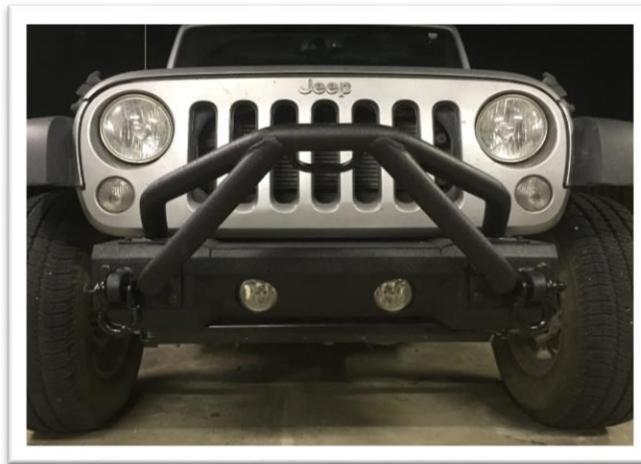

2. Remove the plastic plugs from the sides of the bumper if present.

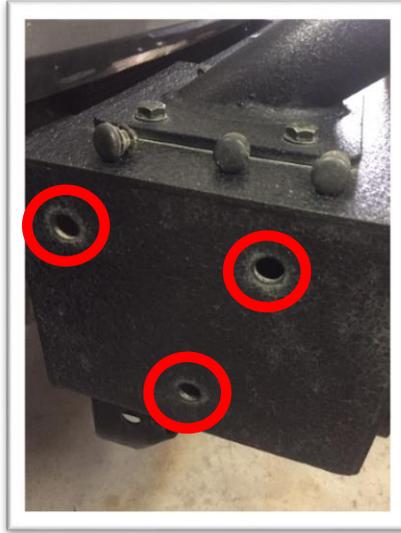

3. Attach stubby ends to the bumper using M12 hardware. Bolt heads should be inside stubby ends and lock nuts inside center section.



4. Installation Complete!

