

## Rugged Ridge Sunvisor Set - Agate (97-02 Wrangler TJ)

Installation Time: 30 Minutes

### Tools Required:


- ✓ T20 Torx bit

Also shown is the Omix-ADA Transfer Case Sunvisor Decal (97-98 Wrangler TJ) Item J21494

### Installation Instructions:

1. Before



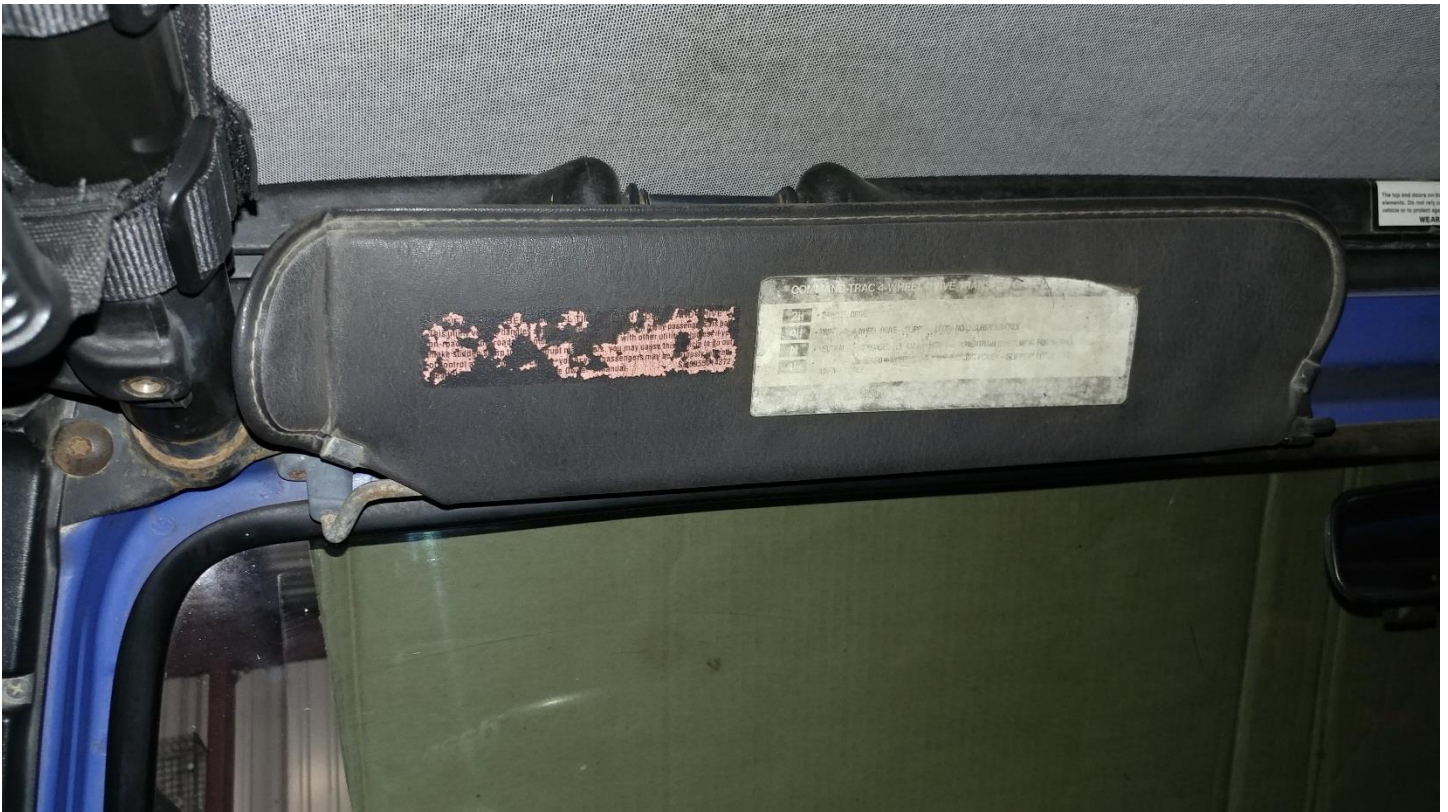

2. I started with the passenger side. Remove the 2 - T20 Torx head screws.



3. After removing the screws the old sun visor will be free.



4. Line up the new sun visor with the existing factory holes. Reinstall the 2 – T20 Torx head screws



5. Passenger side complete.



6. Remove the 2 – T20 Torx head screws from the diver side.



7. After removing the 2 screws the old sun visor will be free.



8. Line up the new sun visor with the existing factory holes. Reinstall the 2 – T20 Torx head screws



9. Install complete



10. I choose to install the Omix-ADA Transfer Case Sun visor Decal (97-98 Wrangler TJ) Item J21494 MPN# 18676.77



11. Line up the decal with the edge of the sun visor. But slightly centered.



Installation Instructions Written by ExtremeTerrain Customer T. Boyer 12/18/2017