

## Smittybilt Chrome Plastic Grille Inserts (97-06 Wrangler TJ)


Installation Time: 30 Minutes

### Tools Required:

- ✓ None

### Installation Instructions:

1. Before

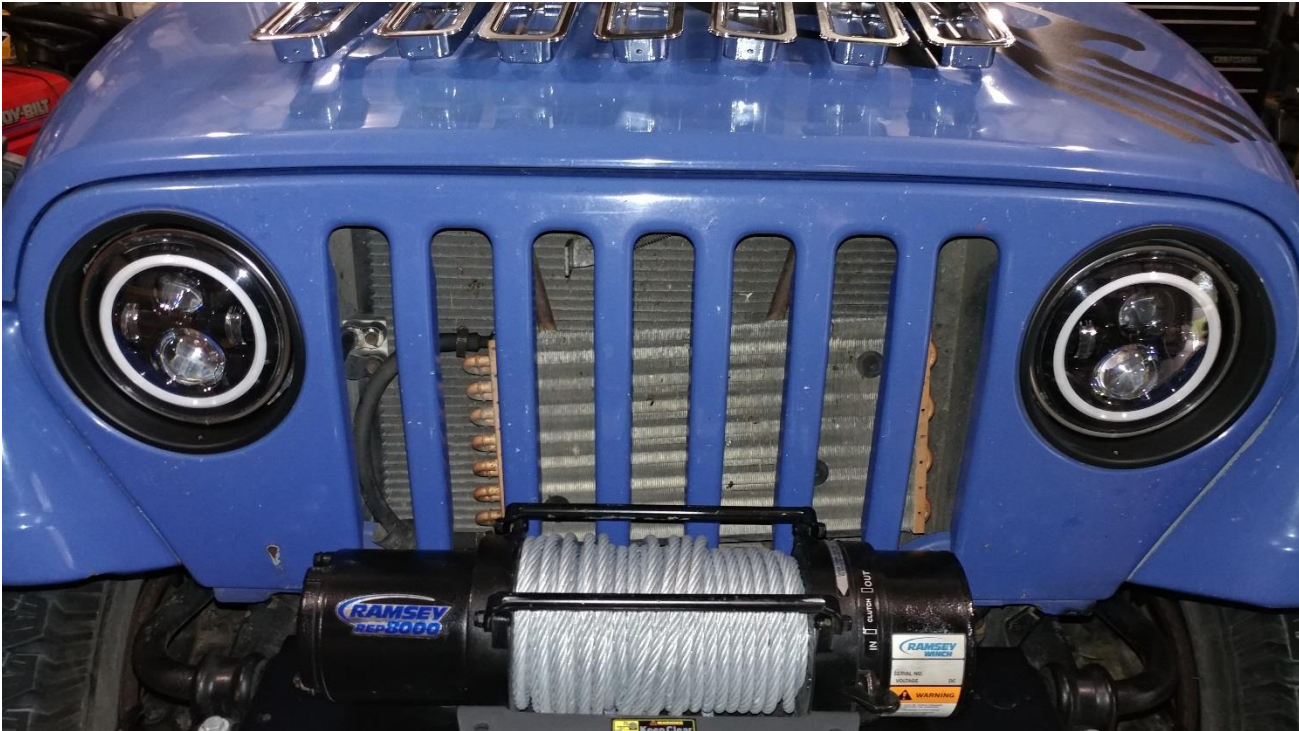

2. I laid all of the inserts out to make sure they were identical. They all are, so any insert can go into any slot.





3. Notice the curve in the inserts. This must line up with the upper portion of the grill





4. Start with the lower portion inserted first.



5. If the insert is not snapping in, remove it and start for the lower portion first. Do not apply too much pressure, they are plastic and the tabs could snap off.





6. Installation complete



Installation Instructions Written by ExtremeTerrain Customer T. Boyer 11/17/2017