

## **Smittybilt Cloak Mesh Sides & Rear (97-06 Wrangler TJ)**

**Installation Time:** 60 Minutes

**Tools Required:**

✓ None

*Shown with Smittybilt Extended Brief Top - Black Diamond Item J19703*

**Installation Instructions:**

1. Before with either the soft top windows removed, or hardtop removed





2. Locate the Driver side mesh side



3. Locate the bag of bungee cords labeled for side windows






4. Pull out 9 total bungee cords for the drivers side



5. Push the bungee through the top eyelet

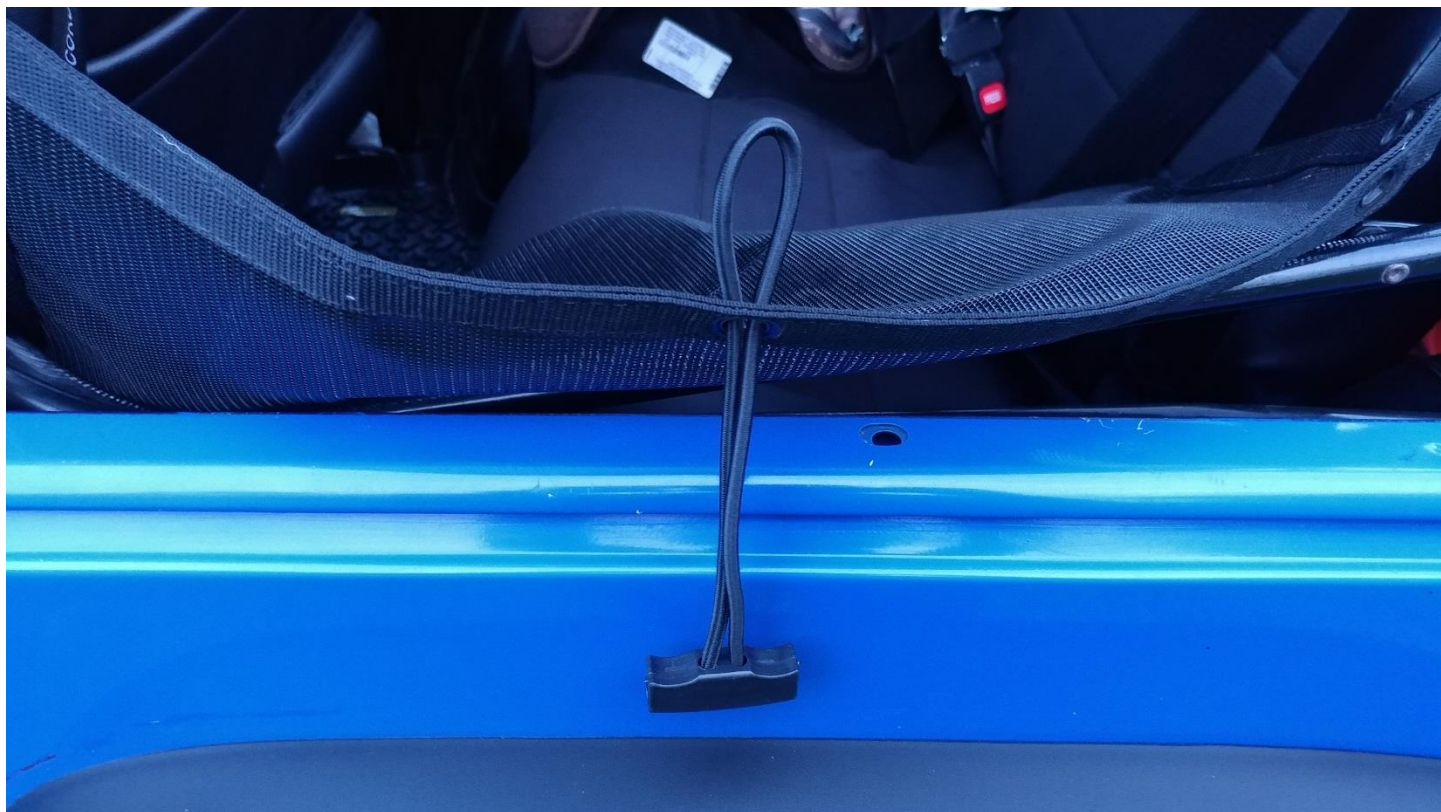



6. Hang the side mesh panel by wrapping the bungee around the roll bar



7. Do the corners next. Keeping the panel centered in the roll bar





8. Complete the remaining inner eyelets



9. repeat for the passenger side

10. locate the rear mesh panel





11. locate the bag labeled for the rear window



12. locate the 8 bungees for the rear panel





13. start with the upper eyelets. Close the gap between the Brief top and mesh panel



14. wrap the bungee around the roll bar





15. insert the remaining bungees





16. installation complete

