

**SportRack Pathway Spare Tire Deluxe 3 Bike Carrier**  
**Installation Guide for Jeep Wrangler '07-'16 2-Door JK**

**Installation Time:** 1 Hour

**Tools Required:**

- ✓ Box Cutter/Knife
- ✓ 15mm Wrench
- ✓ 19mm Socket
- ✓ Socket Wrench

**Installation Instructions:**

1. Carefully open the package using a box cutter or knife (Figure A) and ensure the hardware is included and undamaged.



Figure A

2. Remove the mounting tube from the spare tire mounting mechanism by unscrewing the screw-in knob.
3. Unscrew the three lug nuts on the spare tire using a 19mm socket wrench (Figure B).



Figure B

4. Remove the spare tire (Figure C).

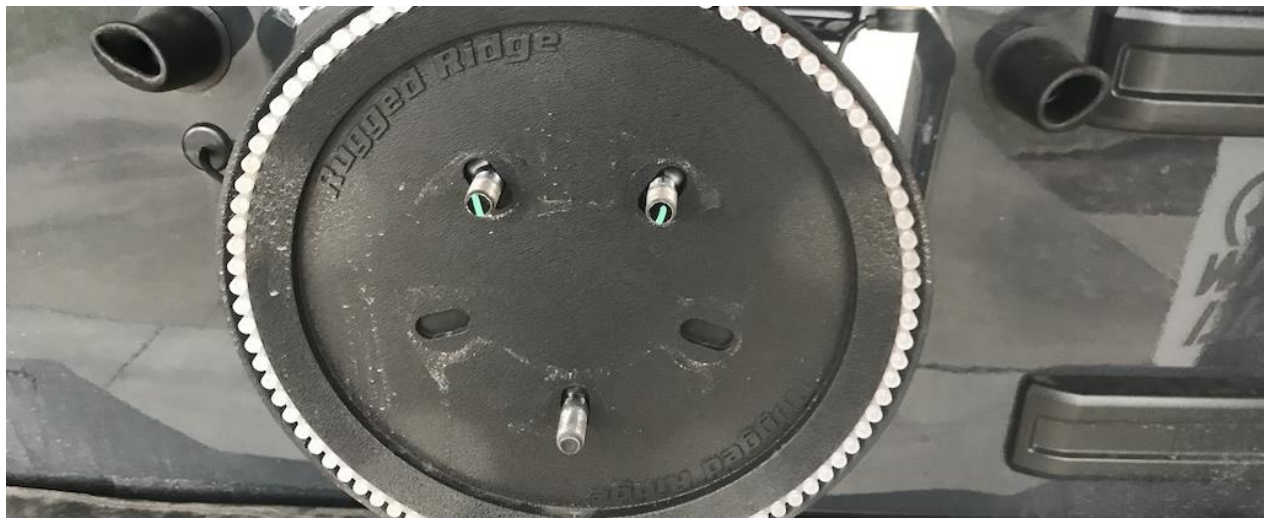


Figure C

5. Place the spare tire mounting mechanism onto the spare tire mount (Figure D).



Figure D

6. Return the spare tire (Figure E).



Figure E

7. Tighten the three lug nuts back into place using a 19mm socket wrench (Figure F).



Figure F

8. Reinstall the mounting tube onto the spare tire mounting mechanism by screwing the screw-in knob back on (Figure G).



Figure G

9. Connect the attached strap around the spare tire mount (Figure H).



Figure H

10. Unscrew the screw-in knob on top of the bike mount (Figure I) and remove the top plate and caps.



Figure I

11. Using a 15mm socket wrench, loosen the bolts and slide the mount so that each is at least 6" apart from each center (Figure J). Tighten down bolts.



Figure J

12. Place bike on mount and return the plates removed in Step 9 (Figure K). Tighten down bolts.



Figure K



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 03/07/2018