

**Steinjager Rigid Wire Form Rear Grab Handles - Black**  
**Installation Guide for Jeep Wrangler '07-'18 4-Door JKU**

**Installation Time:** 1 Hour

**Tools Required:**

- ✓ 10mm Socket
- ✓ Socket Wrench

**Installation Instructions:**

1. Locate the two bolts running to the speaker pod of the roll bar (Figure A).



Figure A

2. Using a 10mm socket wrench, unscrew each bolt slowly (Figure B).



Figure B

3. Remove both bolts (with washers) entirely (Figure C).



Figure C

4. Insert both included bolts into the grab handle pre-drilled holes (Figure D).



Figure D

5. Hand-thread each bolt into the locations the bolts were removed from in Step 3 (Figure E).

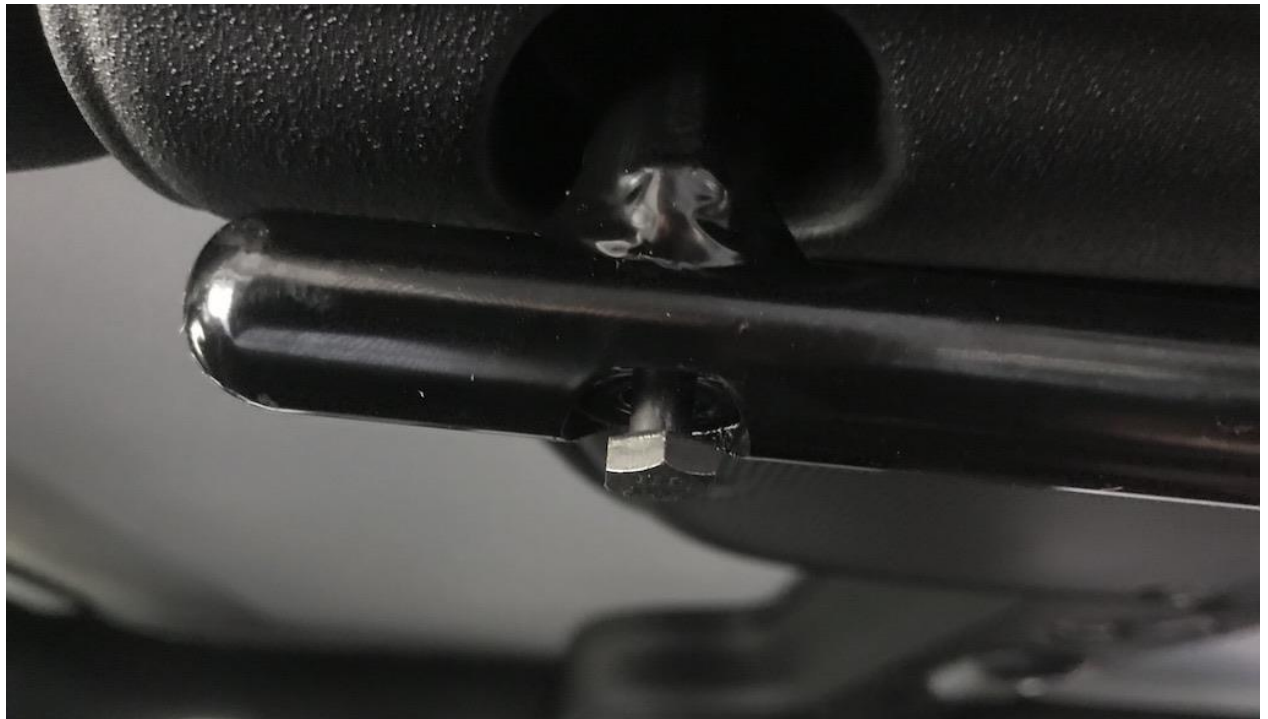


Figure E

6. Using a 10mm socket wrench, tighten the rear bolt (Figure F).



Figure F

7. Using a 10mm socket wrench, tighten the front bolt (Figure G).



Figure G

8. Repeat Steps 1-7 on the other side.



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 08/26/2018